

# Compact NS

Catalogue 2017

Circuit breakers and switch-disconnectors  
from 630b to 3200 A





# Green Premium™

Endorsing eco-friendly products in the industry



**Green Premium™**  
Product

Green Premium is the only label that allows you to effectively develop and promote an environmental policy whilst preserving your business efficiency. This ecolabel guarantees compliance with up-to-date environmental regulations, but it does more than this.

Over 75% of Schneider Electric manufactured products have been awarded the Green Premium ecolabel



Discover what we mean by green ...

**Check your products!**

Schneider Electric's Green Premium ecolabel is committed to offering transparency, by disclosing extensive and reliable information related to the environmental impact of its products:

#### **RoHS**

Schneider Electric products are subject to RoHS requirements at a worldwide level, even for the many products that are not required to comply with the terms of the regulation. Compliance certificates are available for products that fulfil the criteria of this European initiative, which aims to eliminate hazardous substances.

#### **REACH**

Schneider Electric applies the strict REACH regulation on its products at a worldwide level, and discloses extensive information concerning the presence of SVHC (Substances of Very High Concern) in all of its products.

#### **PEP: Product Environmental Profile**

Schneider Electric publishes complete set of environmental data, including carbon footprint and energy consumption data for each of the lifecycle phases on all of its products, in compliance with the ISO 14025 PEP ecopassport program. PEP is especially useful for monitoring, controlling, saving energy, and/or reducing carbon emissions.

#### **EoLI: End of Life Instructions**

Available at the click of a button, these instructions provide:

- Recyclability rates for Schneider Electric products.
- Guidance to mitigate personnel hazards during the dismantling of products and before recycling operations.
- Parts identification for recycling or for selective treatment, to mitigate environmental hazards/ incompatibility with standard recycling processes.

Life Is On

Schneider  
Electric



## Compact NS

### Molded case circuit breakers

The world is becoming more electric, digitized and decarbonized. Our digitized LV products are powered by innovation at every level enabling enhanced connectivity, real-time operations and smart analytics. They bring improved safety and security. They help you to improve reliability and performance – and to prepare for the future of power distribution.

Compact is an integral part of EcoStruxure™ Power – Schneider's open, interoperable, IoT-enabled system architecture. Through this platform, we deliver enhanced value around safety, reliability, efficiency, sustainability, and connectivity for our customers. We leverage technologies in IoT, mobility, sensing, cloud, analytics, and cybersecurity to deliver Innovation at Every Level. This includes Connected Products, Edge Control, and Apps, Analytics & Services. EcoStruxure has been deployed in 450,000+ installations, with the support of 9,000 system integrators, connecting over 1 billion devices.

The launch of Schneider Electric Compact NS in 1994 revolutionized the world of molded case circuit breakers and benefits from 60 years of experience and leadership in industrial circuit breakers.

As well as offering proven performance, flexibility and reliability, the Compact NS sets the standard in most applications: buildings, windturbine, solar, genset, data center, healthcare, marine and infrastructure and decrease your energy consumption thanks to very low power dissipation.

Equipped with the Micrologic control units, Compact NS630b to 3200 A circuit breakers offer built-in power and energy metering in addition to electrical measurement and analysis functions.

The communication option makes it possible to control power consumption, simplify maintenance and improve operating comfort.

A wide range of optimized auxiliaries and accessories is available to meet the needs of protection of AC installations, generator protection, motor protection, switch-disconnectors, source changeover switch function and specific offers available for DC applications up to 1000 V.

Today, the Compact NS range remains the international reference in the molded-case, circuit breaker market.

[schneider-electric.com/compactns](http://schneider-electric.com/compactns)

## I design electrical solutions

More than 10 years of long-felt techniques and technologies ahead quite simple and convenient.



Win more projects and deliver the best solution for your customers

- **Enhance power availability** with total control of discrimination and power management with advanced trip unit.
- **Optimize panel cost with cascading;** the Compact NS technology covers all your needs from 630 to 3200 A, with a breaking capacity from 50 to 200 kA.
- Equipped with electronic control units, the Compact NS circuit breakers **ensure protection and measurement of your electrical installation.**
- Provide efficiency to your customer with small size and multi-ways of installation and highly immune protection system insensitive to disturbances (IEC 60947-2 Annex F).

### Standards

Compact NS circuit breakers and auxiliaries comply with:

- IEC/EN 60947-1: General rules
- IEC/EN 60947-2: Circuit-breakers
- IEC/EN 60947-3: Switch-disconnectors
- IEC/EN 60947-4-1: Contactors and motor-starters
- IEC/EN 60947-5-1: Control circuit devices


The Compact NS range covers all ratings from 630 to 3200 A

#### Compact NS630b to 1600

- Compact NS from 630 to 1600 A, fixed or withdrawable, front or rear connection, manual operating mechanism or motor mechanism. A 200 kA breaking performance completes the Compact NS range

#### Compact NS1600b to 3200

- Compact NS from 1600 to 3200 A, fixed, front connection, with manual operating mechanism

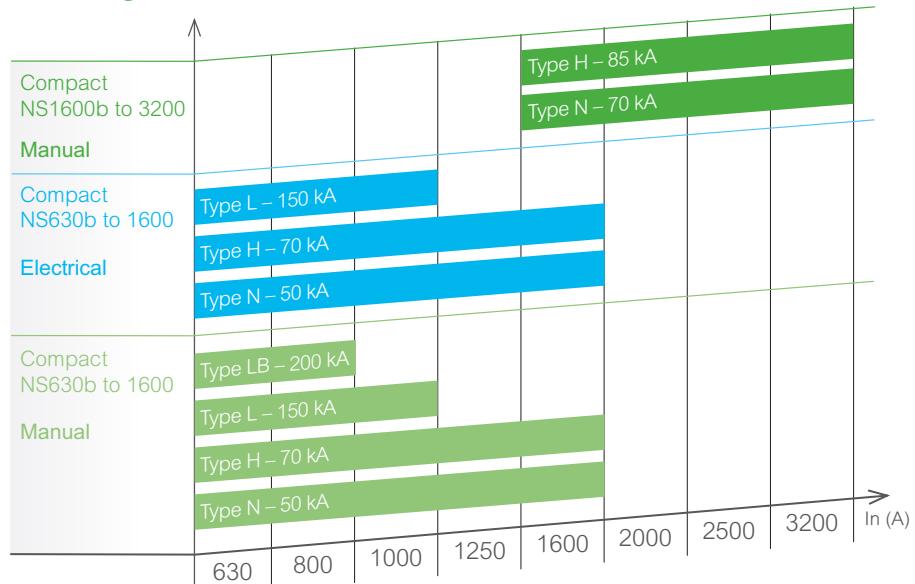

The Masterpact and Compact range Circuit breakers, switch-disconnectors and source changeover are the best choice for all standards and specific applications.

> Masterpact MTZ



LVPED216026EN

> Compact NSxm/NS



LVPED217032EN

> Compact INS/INV



LVPED213024EN

> Source-changeover systems



LVPED216028EN

> Complementary technical information



LVPED308005EN

## I build and install electrical equipment

Make your business more profitable

### Gain space in your switchboard



- The Compact NS range is available in 2 sizes only in order to homogenize installation dimensions (volume, depth, pole pitch).
- Easy to select and to order with new Schneider Electric™ online tools.

### Gain time, the installation is facilitated


- More space to connect your cables.
- Withdrawable version also available.




# I design and build machines

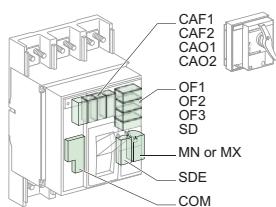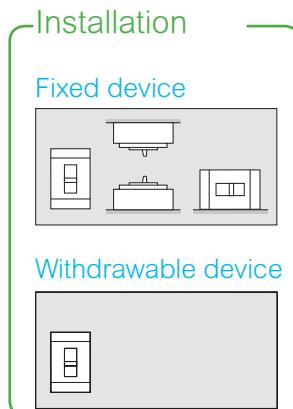

Manually operated device.

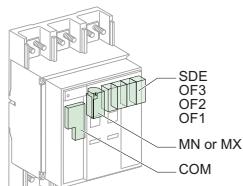

Electrically operated device.

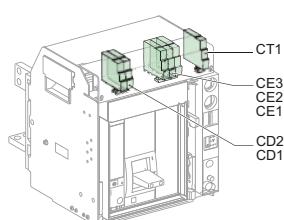

Withdrawable device.



## Optimize your solution

- **Minimum distances** (safety clearance) between 2 circuit breakers are reduced thanks to the arc chute filters.
- **A solution for all your applications:**
  - generator protection
  - motor protection up to 750 kW with coordination between breakers and contactors (coordination type 1 and type 2)
  - source-changeover.
- **Best combination** of size (small depth), performance with no derating up to 65 °C (vertical connection) and flexible mounting options.
- **Ensure continuity of service:**
  - Total control of discrimination for the whole Schneider Electric circuit breakers range from moulded circuit breaker to air circuit breaker
  - High withstand of the devices to various environmental stresses.
- **Bring flexibility to your installation:**  
Interchangeable trip units, standardized accessories, adjustable rating and scalable indication and control functions.



## I operate my installation


## I operate and manage my installation

### Ensure continuity of service

- Electrical energy is available, prevent nuisance power outages using total control of discrimination.

### Monitor your power

- Power consumption is optimized with on-site, real-time monitoring and control, plus online energy management services
- Maintenance is simplified
- Installation is scalable
- Using Compact NS will decrease permanent consumption with lower power dissipations.

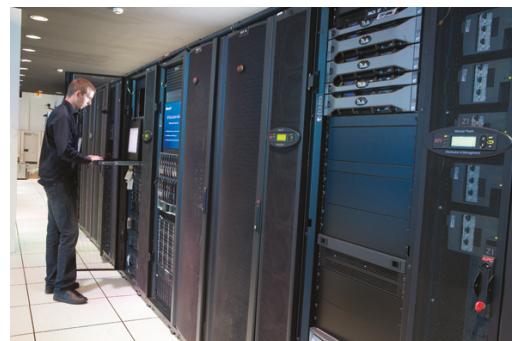

# Architecture overview

PB115758.psd

Smart Panels digitized by

**Enerlin'X**



## Ethernet-ready Smart Panels

Ethernet-ready Smart Panels enable electrical distribution control and expertise. 'Protect' - 'Measure' - 'Connect' are the 3 pillars of their technology.



**4- Act**

**3- Connect**

Give a voice to the panel

Safe Ethernet network data transmission is now part of the intrinsic design of protection and metering devices

**2- Measure**

Keeping a close eye on energy flows

The switchboard plays a key role in capturing building-related data, by gathering the critical protection and metering components.

**1- Protect**

Electrical protection is at the core of Smart Panel

Reliable and high-performance technology is present in every breaker and every residual current device.

# Architecture overview

## Future savings, peace-of-mind

Access to Smart Panel status, values, is essential for taking advantages of monitoring and management services, locally or remotely.

### Act in small/medium buildings

with FDM 128, Com'X 510, Power View, EcoStruxure™ Facility Expert

PB11801-60.eps




Electrical device monitoring and control  
with FDM 128, locally



### Optimizing energy-efficiency

- Visualize, record energy consumption and WAGES.
- Comply with regulation .

D038591.ai

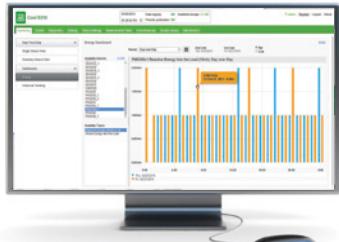


Com'X 510 web pages direct display, or Cloud based pages from other devices with Power View.



### Improving continuity of service

- Get instant notifications
- Manage with assets-maintenance platform
- Get and analyze data for quick crisis-recovery

DD423056.ai

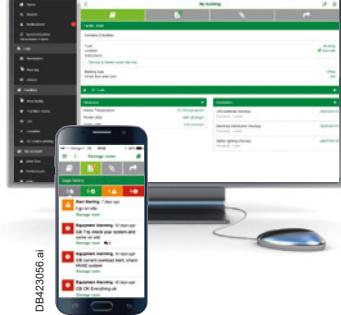

Distance management with EcoStruxure™ Facility Expert on Smartphone, tablet, PC



### Increasing maintenance efficiency

- Operate preventive maintenance tools
- Follow maintenance & planning
- Provide business owner instant access to maintenance reports

# Architecture overview

## Day-to-day energy management

### >> Power availability & quality, energy performance

For simply dealing with building user's needs and energy constraints.

EcoStruxure™ Building Management provides electrical management, monitoring and energy accounting.

Energy decisions are often crucial in large critical buildings, they must be informed.

EcoStruxure™ Power Monitoring Expert (software for PC) collects Smart Panels values to provide expert analysis.

### Act in large non-critical buildings

with EcoStruxure™ Energy Expert



#### Managing equipment & key assets

- Check operating status, faults on custom on-line diagrams.



#### Monitoring electrical network

- Observe voltage disturbances, harmonics on graphics.
- Read power factor.



#### Accounting energy

- Record power meter data on dashboards.
- Allocate energy consumption with costs.
- Follow conservation goals.

### Act in large critical buildings

with EcoStruxure™ Power Monitoring Expert<sup>[1]</sup>



#### Analysing Power Events

- Speed up downtime crisis recovery
- Determine incident root cause, events sequence.
- Troubleshoot power quality issues.



#### Monitoring Power quality

- Be alerted of equipment affected by power quality issue.
- Compare power quality against industry standards.
- Collect facts for future discussion with Utility.



#### Analysing Energy Performance

- Evaluate building energy saving performance;
- Identify underperforming loads;
- Analyze Energy Conservation Measures (ECMs) according ISO50001 program.

[1] EcoStruxure™ Power Monitoring Expert, <http://pmemdemo.biz/web/>  
ID: demo & Password: demo



# General contents

## Compact NS630b to 3200

Functions and characteristics

A

Installation recommendations

B

Dimensions and connection

C

Electrical diagrams

D


Additional characteristics

E

Catalogue numbers and order form

F

# Compact NS, even more applications...

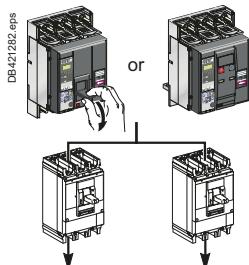

## Protection of LV distribution systems


Protection for:

- distribution systems supplied by transformers
- distribution systems supplied by engine generator sets
- long cables in IT and TN systems.

> pages A-2 et A-25

Installation :

- in power switchboards.
- All circuit breakers in the Compact NS range offer positive contact indication and are suitable for isolation in compliance with standards IEC 60947-1 and 2.

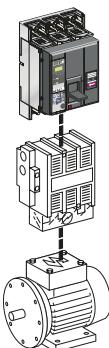


## Protection of motors feeders (AC 220/690 V)

When combined with a motor starter, Compact NS circuit breakers protect the cables and the starter against short-circuits. Equipped with an electronic trip unit, Compact NS circuit breakers also protect the cables, starter and motor against overloads.

> page A-44

The exceptional current-limiting capacity of Compact NS circuit breakers automatically ensures type-2 coordination with the motor starter, in compliance with standard IEC 60947-4-1.

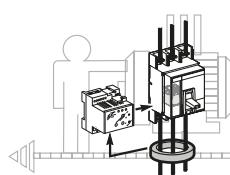


## Earth-leakage

Additional earth-leakage protection protects life and property against the risks of faulty insulation in the installation.

> page A-45

Depending on the circuit breaker, earth-leakage protection is provided by:

- using a specific Micrologic control unit
- using a Vigirex relay and separate toroids.

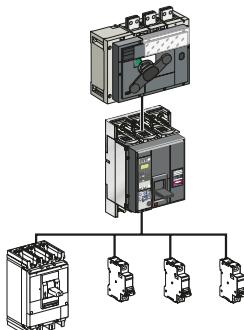


## Service connection

Compact NS service connection circuit breakers are specially designed for the service-connection function:

- lead seals and locking systems
- tripping curves certified by utilities
- fast overload curves to limit the power supplied, etc.

Compact INV switch-disconnectors offering visible break (see the corresponding catalogue) can be combined with Compact NS circuit breakers to constitute the various types of service connections and meet the needs of all installation configurations.

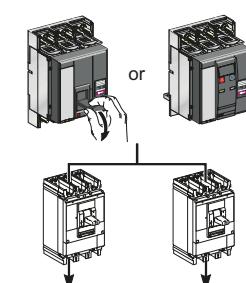

## Control and isolation using switch-disconnectors


A switch-disconnector version of Compact NS circuit breakers exists for circuit control and isolation.

All the additional functions may be combined with the basic switch-disconnector function, including:

- earth-leakage protection
- motor mechanism.

> page A-46

For information on other switch-disconnector ranges, see the Compact INS/INV (offering positive contact indication and visible break) and Fupact (fuse switch) catalogues.

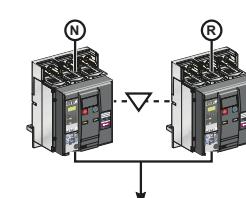

## Source-changeover systems

To ensure a continuous supply of power, some electrical installations are connected to two power sources:

- a source "S1"
- a source "S2" to supply the installation when the source "S1" is not available.

A mechanical and/or electrical interlocking system between two circuit breakers or switch-disconnectors avoids all risk of parallel connection of the sources during switching.

> page A-52

A source-changeover system can be:

- manual with mechanical device interlocking
- remote controlled with mechanical and/or electrical device interlocking
- automatic by adding a controller to manage switching from one source to the other on the basis of external parameters.

(See Source-changeover catalogue for dimensions, connections and electrical drawings).

They can be combined with the FDM121 switchboard display unit to provide all the functions of a Power Meter as well as operating assistance.

### Power Meter functions

[> page A-18](#)



PB103960.eps

All Compact circuit breakers are equipped with a Micrologic control unit that can be changed on site.

Control units are designed to protect Power circuits and loads. Alarms may be programmed for remote indications. In addition to protection functions, Micrologic S/A/E/P control units offer all the functions of Power Meter products as well as operating-assistance for the circuit breaker.



PB111801-32\_J.eps

### Operating-assistance functions

[> page A-20](#)



PB111801-19\_J.eps

Integration of measurement functions provides operators with operating assistance functions including alarms tripped by user-selected measurement values, time-stamped event tables and histories, and maintenance indicators.

### Switchboard-display unit functions

[> page A-21](#)

The main measurements can be read on the built-in screen of Micrologic 2 / 5 / 6 / 7 trip units.

They can also be displayed on the FDM switchboard display unit along with pop-up windows signalling the main alarms.



PB104839\_ME.eps

### Communication

[> page A-28](#)



screen2b.eps

Compact NS equipped with Micrologic provide communication capabilities. Simple RJ45 cords connect to a Modbus interface module.

- IFM: Modbus interface module.
- IFE: Ethernet interface module.
- I/O application module.
- Electrical Asset Manager software.



PB104831\_ME.eps



DE416829.eps




PB119112.eps




PB119111.eps

# Introduction

## General characteristics for NS630b to 3200 range

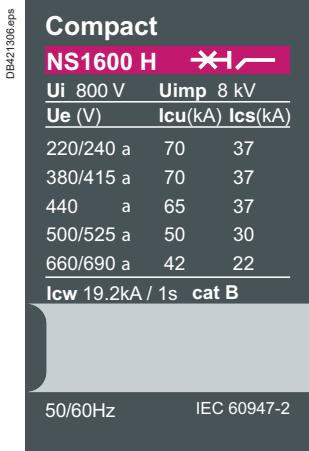

Electrically operated Compact NS circuit breaker.

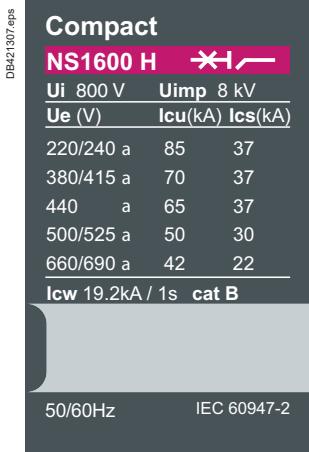

Manually operated Compact NS circuit breaker.

Standardised characteristics indicated on the rating plate:

- Ui: rated insulation voltage
- Uimp: rated impulse withstand voltage
- Icu: ultimate breaking capacity, for various values of the rated operational voltage Ue
- cat: utilisation category
- Icw: rated short-time withstand current
- Ics: service breaking capacity
- In: rated current
- suitable for isolation

### Compliance with standards

Compact NS circuit breakers and auxiliaries comply with the following:

- international recommendations:
  - IEC 60947-1 - general rules
  - IEC 60947-2 - circuit breakers
  - IEC 60947-3 - switches, disconnectors, switch-disconnectors, etc.
  - IEC 60947-4 - contactors and motor starters
  - IEC 60947-5.1 and following - control circuit devices and switching elements; automatic control components
- European (EN 60947-1 and EN 60947-2) and the corresponding national standards:
  - France NF
  - Germany VDE
  - U.K. BS
  - Australia AS
  - Italy CEI
- the specifications of the marine classification companies (Veritas, Lloyd's Register of Shipping, Det Norske Veritas, etc.)
- French standard NF C 79-130 and the recommendations issued by the CNOMO organisation for the protection of machine tools.

For U.S. UL, Canadian CSA, Mexican NOM and Japanese JIS standards, please consult us.

### Pollution degree

Compact NS circuit breakers are certified for operation in pollution-degree 3 environments as defined by IEC standard 60947 (industrial environments).

### Tropicalisation

Compact NS circuit breakers have successfully passed the tests prescribed by the following standards for extreme atmospheric conditions:

- IEC 60068-2-1 - dry cold (-55 °C)
- IEC 60068-2-2 - dry heat (+85 °C)
- IEC 60068-2-30 - damp heat (95 % relative humidity at 55 °C)
- IEC 60068-2-52 - salt mist (severity level 2).

### Environmental protection


Compact NS circuit breakers take into account important concerns for environmental protection. Most components are recyclable and the parts of Compact NS630b to NS3200 circuit breakers are marked as specified in applicable standards.

### Ambient temperature

- Compact NS circuit breakers may be used between -25 °C and +70 °C. For temperatures higher than 40 °C (65 °C for circuit breakers used to protect motor feeders), devices must be derated as indicated in the documentation.
- circuit-breakers should be put into service under normal ambient operating-temperature conditions. Exceptionally, the circuit breaker may be put into service when the ambient temperature is between -35 °C and -25 °C. the permissible storage-temperature range for Compact NS circuit breakers in the original packing is -50 °C [1] to +85 °C.

### Discrimination

As standard, the Compact NS range ensures discrimination between two circuit breakers positioned in series in an installation.

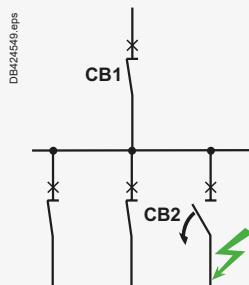

[1] -40 °C for Micrologic control units with an LCD screen.

# Introduction


## General characteristics for NS630b to 3200 range

### Positive contact indication

All Compact NS circuit breakers are suitable for isolation as defined in IEC standard 60947-2:

- the isolation position corresponds to the O (OFF) position
  - the operating handle cannot indicate the "OFF" position unless the contacts are effectively open
  - padlocks may not be installed unless the contacts are open.
- Installation of a rotary handle or a motor mechanism does not alter the reliability of the position-indication system.
- The isolation function is certified by tests guaranteeing:
- the mechanical reliability of the position indication system
  - the absence of leakage currents
  - overvoltage withstand capacity between upstream and downstream connections.

DB401831.eps

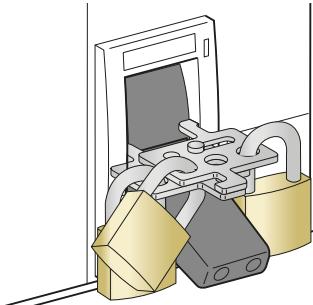


### Installation in class II switchboards

All Compact NS circuit breakers are class II front face devices. They may be installed through the door of class II switchboards (as per IEC standard 60664), without downgrading switchboard insulation. Installation requires no special operations, even when the circuit breaker is equipped with a rotary handle or a motor mechanism.


### Degree of protection

As per standards IEC 60529 (IP degree of protection) and EN 50102 (IK degree of protection against external mechanical impacts).


### Bare circuit breaker with terminal shields

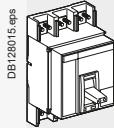



With toggle IP40 IK07

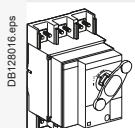With direct rotary handle IP40 IK07  
standard / VDE

### Circuit breaker installed in a switchboard

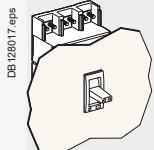

With toggle IP40 IK07

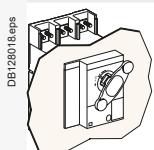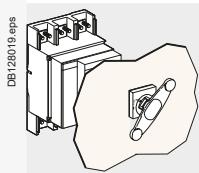With direct rotary handle IP40 IK07  
standard / VDE  
MCC IP435  
CNOMO IP547

With extended rotary handle IP55 IK08


# Protection of distribution systems

## Overview of solutions

Protection of distribution systems means protection of:

- systems supplied by a transformer
- systems supplied by an engine generator set
- long cables in IT and TN systems.

DB128023.eps

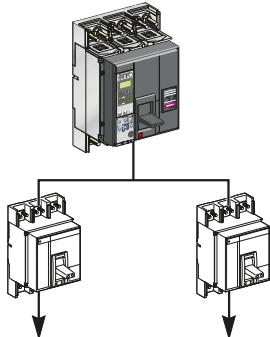

DB417642.eps



DB425941.eps



DB417643.eps



### Power distribution

Selection of circuit breakers from 630 to 3200 A page A-2

Rated current (A)	630	800	1000	1250	1600
Compact	NS630b	NS800	NS1000	NS1250	NS1600

PB104839\_ME.eps



Breaking capacity (kA rms) 380/415 V	N	50	50	50	50
	H	70	70	70	70
	L	150	150	150	-
	LB [1]	200	200	-	-

Rated current (A)	1600	2000	2500	3200
Compact	NS1600b	NS2000	NS2500	NS3200

PB104833.eps



Breaking capacity (kA rms) 380/415 V	N	70	70	70
	H	85	85	85

### Accompanying control units up to 3200 A page A-20

Micrologic electronic control units may be used on all Compact NS630b to NS3200 circuit breakers and can be changed on site.

[1] Only for manual operated version.

# Functions and characteristics

A

<b>Protection of distribution systems</b>	
Compact NS circuit breakers from 630b up to 3200 A.....	A-2
<b>Micrologic control units .....</b>	
Overview of functions.....	A-6
For Compact NS630b to 3200.....	A-8
Micrologic A "ammeter" .....	A-10
Micrologic E "energy" .....	A-12
Micrologic P "power" .....	A-14
<b>Power Meter functions</b>	
Micrologic A/E/P control unit with COM option (BCM ULP) and COM Ethernet gateway .....	A-18
<b>Operating-assistance functions</b>	
Micrologic A/E/P control unit with COM option (BCM ULP).....	A-20
<b>Switchboard-display functions</b>	
Micrologic A/E/P control unit with COM option (BCM ULP).....	A-21
Micrologic A/E/P control unit with COM Ethernet gateway .....	A-23
<b>Protection of distribution systems</b>	
Micrologic control units for Compact NS630b to 3200.....	A-25
<b>Enerlin'X communication system</b>	
Products overview .....	A-28
<b>Communication</b>	
Communication wiring system.....	A-30
Overview of functions.....	A-31
COM option in Compact.....	A-32
Communication architecture.....	A-33
<b>IFE Ethernet interface.....</b>	A-34
<b>IFM Modbus communication interface.....</b>	A-36
Connection of the IFE to a fixed or drawout Compact NS.....	A-38
Connection of the IFM to a fixed or drawout Compact NS.....	A-39
I/O application module .....	A-40
<b>Electrical Asset Manager Configuration Engineering tool.....</b>	A-42
<b>Motor protection</b>	
Overview of solutions .....	A-44
<b>Earth-leakage protection</b>	
Overview of solutions .....	A-45
<b>Control and isolation</b>	
Overview of solutions .....	A-46
<b>Control and disconnection</b>	
Compact NS630bNA to 1600NA switch-disconnectors.....	A-48
Compact NS1600bNA to 3200NA switch-disconnectors.....	A-50
<b>Source-changeover systems</b>	
Presentation .....	A-52
Manual source-changeover systems .....	A-53
<b>Electrical interlocking</b>	
IVE unit .....	A-54
Remote-operated systems .....	A-55
<b>Source-changeover systems</b>	
Associated controllers .....	A-56
<b>Electrical and mechanical accessories</b>	
Compact NS630b to 1600 (fixed version).....	A-58
Compact NS630b to 1600 (withdrawable version) .....	A-59
Compact NS630b to 1600 .....	A-60
Compact NS1600b to 3200 (fixed version).....	A-77
Compact NS1600b to 3200 .....	A-78

# Protection of distribution systems

Compact NS circuit breakers from 630b up to 3200 A

A



Compact NS800L.



Compact NS1600H.



Compact NS2000H.

[1] 65 °C with vertical connections. See the temperature derating tables for other types of connections.

## Compact circuit breakers

### Number of poles

Control	manual	toggle direct or extended rotary handle
	electric	

### Type of circuit breaker

Connections	fixed	front connection rear connection front connection with bare cables
	withdrawable (on chassis)	front connection rear connection

### Electrical characteristics as per IEC 60947-2 and EN 60947-2

Rated current (A)	In	50 °C 65 °C [1]
Rated insulation voltage (V)	Ui	
Rated impulse withstand voltage (kV)	Ui <sub>imp</sub>	

Rated operational voltage (V)	Ue	AC 50/60 Hz
-------------------------------	----	-------------

### Type of circuit breaker

Ultimate breaking capacity (kA rms)	Manual	Icu	AC 50/60 Hz	220/240 V 380/415 V 440 V 500/525 V 660/690 V
		Ics	AC 50/60 Hz	220/240 V 380/415 V 440 V 500/525 V 660/690 V
	Electrical	Icu	AC 50/60 Hz	220/240 V 380/415 V 440 V 500/525 V 660/690 V
		Ics	AC 50/60 Hz	220/240 V 380/415 V 440 V 500/525 V 660/690 V

Short-time withstand current (kA rms)	Icw	AC 50/60 Hz	1 s 3 s
---------------------------------------	-----	-------------	------------

Integrated instantaneous protection kA peak ±10 %

Suitability for isolation

Utilisation category

Durability (C-O cycles)	mechanical electrical
	440 V In/2
	690 V In/2

Pollution degree

# Protection of distribution systems

## Compact NS circuit breakers from 630b up to 3200 A

NS630b	NS800	NS1000	NS1250	NS1600	NS1600b	NS2000	NS2500	NS3200
3, 4			3, 4		3, 4	3, 4		3, 4
○			○		○	○		○
○			○		○	○	-	
○ (except LB)			○		○		-	
N	H	L	LB	N	H	L	N	H
○	○	○	-	○	○	○	○	○
○	○	○	○	○	○	○	○	-
○	○	-	-	○	○	○	-	-
○	○	○	○	○	○	○	○	-
○	○	○	○	○	○	○	○	-
630	800	1000		1250	1600	1600	2000	2500
630	800	1000		1250	1510	1550	1900	2500
800		800		800	800	800		
8		8		8	8	8		
690		690		690	690	690		
N	H	L	LB	N	H	L	N	H
85	85	150	200	85	85	150	85	85
50	70	150	200	50	70	150	50	70
50	65	130	200	50	65	130	50	65
40	50	100	100	40	50	100	40	50
30	42	-	75	30	42	-	30	42
50	50	150	200	50	52	150	50	52
50	50	150	200	50	52	150	50	52
50	50	130	200	50	48	130	50	48
40	40	100	100	40	37	100	40	37
30	30	-	75	30	31	-	30	31
50	70	150	-	50	70	150	50	70
50	70	150	-	50	70	150	50	70
50	65	130	-	50	65	130	50	65
40	50	100	-	40	50	100	40	50
30	42	-	-	30	42	-	30	42
37	37	150	-	37	37	150	37	37
37	37	150	-	37	37	150	37	37
37	37	130	-	37	37	130	37	37
30	30	100	-	30	30	100	30	30
22	22	-	-	22	22	-	22	22
19.2	19.2	-	-	19.2	19.2	-	19.2	19.2
-	-	-	-	-	-	-	-	32
40	40	-	-	40	40	-	40	40
○				○			○	
B	B	A	A	B	B	A	B	B
10000				10000			10000	5000
6000	6000	4000	4000	6000	6000	4000	5000	3000
5000	5000	3000	3000	5000	5000	3000	4000	2000
4000	4000	3000	3000	4000	4000	3000	3000	2000
2000	2000	2000	2000	2000	2000	2000	2000	1000
3				3			3	

A

# Protection of distribution systems

Compact NS circuit breakers from 630b up to 3200 A



PB104831\_ME.eps

Electrically operated device.

A

## Compact circuit breakers

### Protection and measurements

#### Interchangeable control units

Overload protection	long time	$I_r (In \times \dots)$
Short-circuit protection	short time	$I_{sd} (I_r \times \dots)$
	instantaneous	$I_i (In \times \dots)$
Earth-fault protection		$I_g (In \times \dots)$
Residual earth-leakage protection		$I_{\Delta n}$
Zone selective interlocking		<b>ZSI</b>
Protection of the fourth pole		
Current measurements		
Power measurements		
Advanced protection		
Quick view		

### Remote communication by bus

#### Device-status indication

#### Device remote operation [2]

#### Transmission of settings

#### Indication and identification of protection devices and alarms

#### Transmission of measured current values

## Compact circuit breakers

### Additional indication and control auxiliaries

#### Indication contacts

Voltage releases	MX shunt release/MN undervoltage release
------------------	--

### Installation

Accessories	terminal extensions and spreaders terminal shields and interphase barriers escutcheons
-------------	--

Dimensions fixed devices, front connections (mm)	3P
--	----

H x W x D	4P
-----------	----

Weight fixed devices, front connections (kg)	3P
--	----

	4P
--	----

### Source changeover system (see section on "source changeover systems")

Manual, remote-operated and automatic source changeover systems

[1] Except 1600b-3200.

[2] With NS630b...NS1600, remote operation is possible with electrically operated device. With NS1600...NS3200, remote operation is not possible.

## Protection of distribution systems

A

# Micrologic control units

## Overview of functions

A

All Compact circuit breakers are equipped with a Micrologic control unit that can be changed on site. Control units are designed to protect Power circuits and loads. Alarms may be programmed for remote indications. Measurements of current, voltage, frequency, power and power quality optimise continuity of service and energy management.

### Dependability

Integration of protection functions in an ASIC electronic component used in all Micrologic control units guarantees a high degree of reliability and immunity to conducted or radiated disturbances.

On Micrologic A, E and P control units, advanced functions are managed by an independent microprocessor.

### Accessories

Certain functions require the addition of Micrologic control unit accessories, described on page A-28.

The rules governing the various possible combinations can be found in the documentation accessible via the Products and services menu of the [www.schneider-electric.com](http://www.schneider-electric.com) web site.

### Micrologic name codes

**2.0 E**  
X Y Z

X: type of protection

- 2 for basic protection
- 5 for selective protection
- 6 for selective + earth-fault protection
- 7 for selective + earth-leakage protection.

Y: control-unit generation

Identification of the control-unit generation.

"0" signifies the first generation.


Z: type of measurement

- A for "ammeter"
- E for "energy"
- P for "power meter"




### Current protection


#### Micrologic 2: basic protection

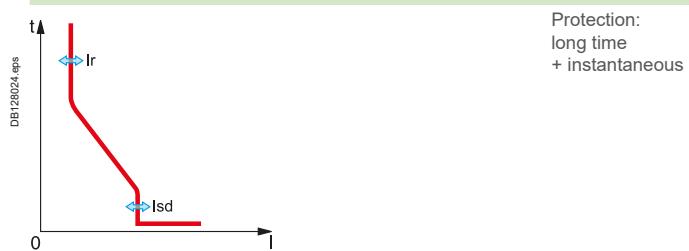


#### Micrologic 5: selective protection

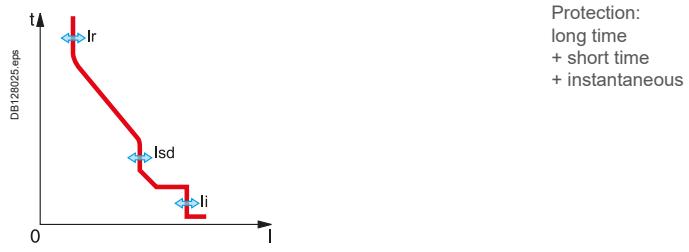

#### Micrologic 6: selective + earth-fault protection

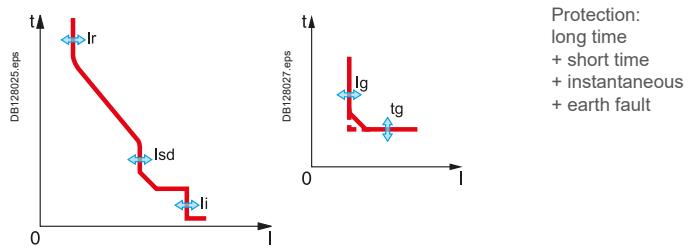

#### Micrologic 7: selective + earth-leakage

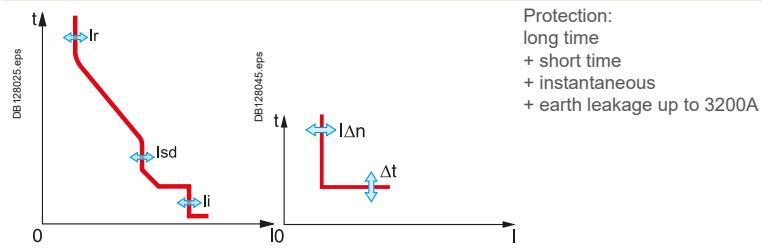

# Functions and characteristics

## Micrologic control units

### Overview of functions

#### **Micrologic without measurement**

#### **Measurements and programmable protection**

A

##### **A: ammeter**

- $I_1, I_2, I_3, I_N, I_{\text{earth-fault}}, I_{\text{earth-leakage}}$  and maximeter for these measurements
- fault indications
- settings in amperes and in seconds.

##### **E: Energy**

- incorporates all the rms measurements of Micrologic A, plus voltage, power factor, power and energy metering measurements.
- calculates the current demand value
- "Quickview" function for the automatic cyclical display of the most useful values (as standard or by selection).

##### **P: A + power meter + programmable protection**

- measurements of V, A, W, VAR, VA, Wh, VARh, VAh, Hz,  $V_{\text{peak}}$ ,  $A_{\text{peak}}$ , power factor and maximeters and minimeters
- IDMTL long-time protection, minimum and maximum voltage and frequency, voltage and current imbalance, phase sequence, reverse power
- load shedding and reconnection depending on power or current
- measurements of interrupted currents, differentiated fault indications, maintenance indications, event histories and time-stamping, etc.




# Micrologic control units

## For Compact NS630b to 3200

A

Micrologic 2.0, 5.0 and 6.0 control units protect power circuits. Micrologic 5.0 and 6.0 offers time discrimination for short-circuits as well.

DB414487.eps

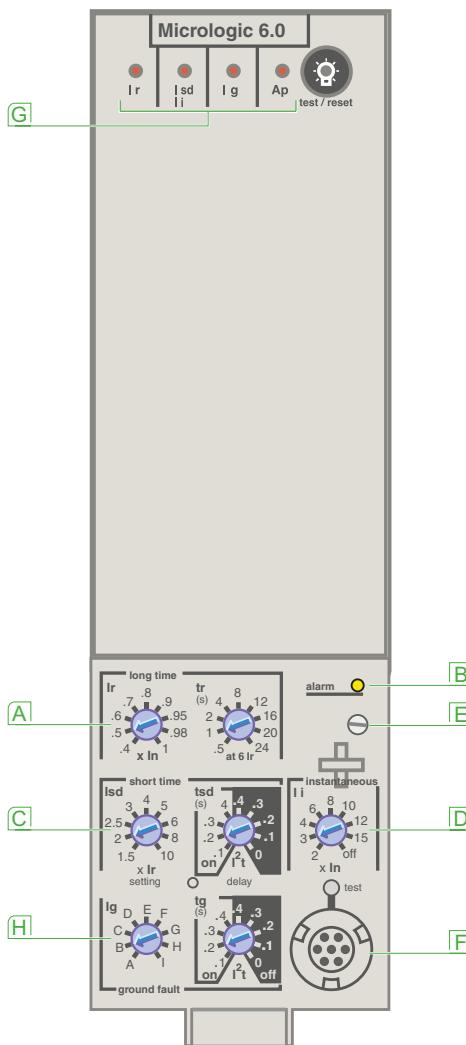

- [A] long-time threshold and tripping delay
- [B] overload alarm (LED)
- [C] short-time pick-up and tripping delay
- [D] instantaneous pick-up
- [E] fixing screw for long-time rating plug
- [F] test connector
- [G] indication of tripping cause
- [H] earth-leakage or earth-fault pick-up and tripping delay

**Note:** Micrologic control units are equipped with a transparent lead-seal cover as standard.

### Protection

Protection thresholds and delays are set using the adjustment dials.

#### Overload protection

True rms long-time protection.

Thermal memory: thermal image before and after tripping.

Setting accuracy may be enhanced by limiting the setting range using a different long-time rating plug.

Overload protection can be cancelled using a specific LT rating plug "Off".

#### Short-circuit protection

Short-time (rms) and instantaneous protection.

Selection of  $I^2t$  type (ON or OFF) for short-time delay.

#### Earth-fault protection

Residual or source ground return earth fault protection.

Selection of  $I^2t$  type (ON or OFF) for delay.

#### Neutral protection

On three-pole circuit breakers, neutral protection is not possible.

On four-pole circuit breakers, neutral protection may be set using a three-position switch: neutral unprotected (4P 3d), neutral protection at 0.5 Ir (4P 3d + N/2) or neutral protection at Ir (4P 4d).

#### Indications

Overload indication by alarm LED on the front; the LED goes on when the current exceeds the long-time trip threshold.

#### Test

A mini test kit or a portable test kit may be connected to the test connector on the front to check circuit-breaker operation after installing the trip unit or accessories.

#### Fault indications (only for micrologic 6.0)

LEDs indicate the type of fault:

- overload (long-time protection Ir)
- short-circuit (short-time lsd or instantaneous lg protection)
- earth fault or earth leakage (lg)
- internal fault (Ap).

#### Battery power


The fault indication LEDs remain on until the test/reset button is pressed. Under normal operating conditions, the battery supplying the LEDs has a service life of approximately 10 years.

# Functions and characteristics

## Micrologic control units

### For Compact NS630b to 3200

#### Micrológic 2.0

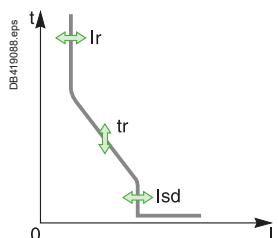


##### Long-time

Current setting (A)	$Ir = \ln x \dots$	0.4	0.5	0.6	0.7	0.8	0.9	0.95	0.98	1	
tripping between 1.05 and 1.20 x Ir	other ranges or disable by changing long-time rating plug										
Time setting	$t_r$ (s)	$tr = 0.5 \text{ s to } 24 \text{ s, step } 0.5 \text{ s for } 6 Ir$									
Time setting exemple:	Accuracy: 0 to -30 %	1.5 x Ir	12.5	25	50	100	200	300	400	500	600
time delay (s)	Accuracy: 0 to -20 %	6 x Ir	0.5 [1]	1	2	4	8	12	16	20	24
	Accuracy: 0 to -20 %	7.2 x Ir	0.7 [2]	0.69	1.38	2.7	5.5	8.3	11	13.8	16.6
Thermal memory	20 minutes before and after tripping										

##### Instantaneous

Pick-up (A)	$Isd = Ir x \dots$	1.5	2	2.5	3	4	5	6	8	10
Accuracy: $\pm 10\%$										
Time delay	Max resettable time: 20 ms Max break time: 80 ms									

#### Micrológic 5.0 / 6.0 / 7.0

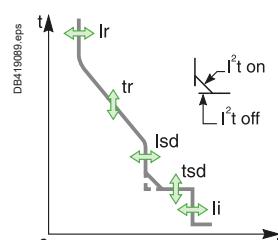

##### Long-time

Current setting (A)	$Ir = \ln x \dots$	0.4	0.5	0.6	0.7	0.8	0.9	0.95	0.98	1	
Tripping between 1.05 and 1.20 x Ir	Other ranges or disable by changing long-time rating plug										
Time setting	$tr$ (s)	0.5	1	2	4	8	12	16	20	24	
Time setting exemple:	Accuracy: 0 to -30 %	1.5 x Ir	12.5	25	50	100	200	300	400	500	600
time delay (s)	Accuracy: 0 to -20 %	6 x Ir	0.5 [1]	1	2	4	8	12	16	20	24
	Accuracy: 0 to -20 %	7.2 x Ir	0.7 [2]	0.69	1.38	2.7	5.5	8.3	11	13.8	16.6
Thermal memory	20 minutes before and after tripping										


##### Short-time

Pick-up (A)	$Isd = Ir x \dots$	1.5	2	2.5	3	4	5	6	8	10
Accuracy: $\pm 10\%$										
Time setting $tsd$ (s)	Settings	$I^2t$ Off	0	0.1	0.2	0.3	0.4			
		$I^2t$ On	-	0.1	0.2	0.3	0.4			
Operating time at $10 \times Ir$	max resettable time		20	80	140	230	350			
$I^2t$ Off or $I^2t$ On	max break time		80	140	200	320	500			

##### Instantaneous

Pick-up (A)	$II = \ln x \dots$	2	3	4	6	8	10	12	15	off
Accuracy: $\pm 10\%$										
Operating time	Standard									
	max resettable time 20 ms									
	max break time 50 ms									

#### Micrológic 6.0

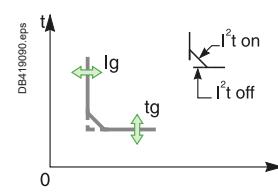

##### Earth fault

Pick-up (A)	$Ig = \ln x \dots$	A	B	C	D	E	F	G	H	J
Accuracy: $\pm 10\%$										
$Ig \leq 400 \text{ A}$		0.3	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1
$400 \text{ A} < Ig < 1250 \text{ A}$		0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1
$Ig \geq 1250 \text{ A}$		500	640	720	800	880	960	1040	1120	1200
Time setting $t_g$ (s)	Settings	$I^2t$ Off	0	0.1	0.2	0.3	0.4			
		$I^2t$ On	-	0.1	0.2	0.3	0.4			
Time delay (ms)	$t_g = \text{max resettable time}$		20	80	140	230	350			
at $Ig$ or $1200 \text{ A}$	$t_g = \text{max break time}$		80	140	200	320	500			

**Note:** all current-based protection functions require no auxiliary source.

The test / reset button resets maximeters, clears the tripping indication and tests the battery.

[1] 0 to -40 % - [2] 0 to -60 %

A


# Micrologic control units

## Micrologic A "ammeter"

A

Micrologic A control units protect power circuits. They also offer measurements, display, communication and current maximeters. Version 6 provides earth-fault protection, version 7 provides earth-leakage protection.

DB128033eps

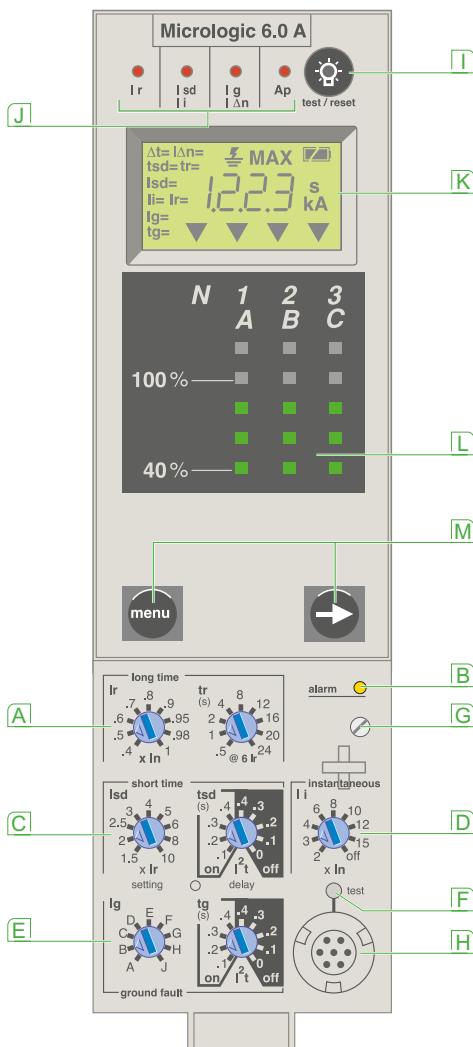

- [A] long-time threshold and tripping delay
- [B] overload alarm (LED) at 1.125 Ir
- [C] short-time pick-up and tripping delay
- [D] instantaneous pick-up
- [E] earth-leakage or earth-fault pick-up and tripping delay
- [F] earth-leakage or earth-fault test button
- [G] long-time rating plug screw
- [H] test connector
- [I] lamp test, reset and battery test
- [J] indication of tripping cause
- [K] digital display
- [L] three-phase bargraph and ammeter
- [M] navigation buttons

**Note:** Micrologic A control units come with a transparent lead-seal cover as standard.

### "Ammeter" measurements

Micrologic A control units measure the true (rms) value of currents. They provide continuous current measurements from 0.2 to 1.2 In and are accurate to within 1.5 % (including the sensors).

A digital LCD screen continuously displays the most heavily loaded phase ( $I_{max}$ ) or displays the  $I_1$ ,  $I_2$ ,  $I_3$ ,  $I_N$ ,  $I_{\Delta n}$ , stored-current (maximeter) and setting values by successively pressing the navigation button.

The optional external power supply makes it possible to display currents < 20 % In. Below 0.1 In, measurements are not significant. Between 0.1 and 0.2 In, accuracy changes linearly from 4 % to 1.5 %.

### Communication option (COM)

In conjunction with the communication option, the control unit transmits the following:

- settings
- all "ammeter" measurements
- tripping causes
- maximeter readings.

### Protection

Protection thresholds and delays are set using the adjustment dials.

### Overload protection

True rms long-time protection.

Thermal memory: thermal image before and after tripping.

Setting accuracy may be enhanced by limiting the setting range using a different long-time rating plug.

Overload protection can be cancelled using a specific LT rating plug "Off".

### Short-circuit protection

Short-time (rms) and instantaneous protection.

Selection of  $I^2t$  type (ON or OFF) for short-time delay.

### Earth-fault protection

Residual or source ground return earth fault protection.

Selection of  $I^2t$  type (ON or OFF) for delay.

### Residual earth-leakage protection (Vigi).

Operation without an external power supply.  $\Delta$  Protected against nuisance tripping.

$\Delta$  DC-component withstand class A up to 10 A.

### Neutral protection

On three-pole circuit breakers, neutral protection is not possible. On four-pole circuit breakers, neutral protection may be set using a three-position switch: neutral unprotected (4P 3d), neutral protection at 0.5 Ir (4P 3d + N/2), neutral protection at Ir (4P 4d).

### Zone selective interlocking (ZSI)

A ZSI terminal block may be used to interconnect a number of control units to provide total discrimination for short-time and earth-fault protection, without a delay before tripping.

### Overload alarm

A yellow alarm LED goes on when the current exceeds the long-time trip threshold.

### Fault indications

LEDs indicate the type of fault:

- overload (long-time protection Ir)
- short-circuit (short-time Isd or instantaneous Ii protection)
- earth fault or earth leakage (Ig or  $I_{\Delta n}$ )
- internal fault (Ap).

### Battery power

The fault indication LEDs remain on until the test/reset button is pressed. Under normal operating conditions, the battery supplying the LEDs has a service life of approximately 10 years.

### Test

A mini test kit or a portable test kit may be connected to the test connector on the front to check circuit-breaker operation. For Micrologic 6.0 A and 7.0 A control units, the operation of earth-fault or earth-leakage protection can be checked by pressing the test button located above the test connector.

# Micrologic control units

## Micrologic A "ammeter"

### Micrologic 2.0 A

<b>Long-time</b>		<b>ANSI Code 49</b>
Current setting (A)	$Ir = In \times \dots$	0.4 0.5 0.6 0.7 0.8 0.9 0.95 0.98 1 Other ranges or disable by changing long-time rating plug
Time setting exemple: time delay (s)		tr (s) 0.5 1 2 4 8 12 16 20 24 Accuracy: 0 to -30 % 1.5 x Ir 12.5 25 50 100 200 300 400 500 600 Accuracy: 0 to -20 % 6 x Ir 0.7 <sup>[1]</sup> 1 2 4 8 12 16 20 24 Accuracy: 0 to -20 % 7.2 x Ir 0.7 <sup>[2]</sup> 0.69 1.38 2.7 5.5 8.3 11 13.8 16.6
Thermal memory		20 minutes before and after tripping
<b>Instantaneous</b>		<b>ANSI Code 50</b>
Pick-up (A)	$Isd = Ir \times \dots$	1.5 2 2.5 3 4 5 6 8 10 Accuracy: ±10 %
Time delay		Max resettable time: 20 ms Max break time: 80 ms

A

### Micrologic 5.0 / 6.0 / 7.0 A

<b>Long-time</b>		<b>ANSI Code 49</b>
Current setting (A)	$Ir = In \times \dots$	0.4 0.5 0.6 0.7 0.8 0.9 0.95 0.98 1 Other ranges or disable by changing long-time rating plug
Tripping between 1.05 and 1.20 x Ir		tr (s) 0.5 1 2 4 8 12 16 20 24 Accuracy: 0 to -30 % 1.5 x Ir 12.5 25 50 100 200 300 400 500 600 Accuracy: 0 to -20 % 6 x Ir 0.7 <sup>[1]</sup> 1 2 4 8 12 16 20 24 Accuracy: 0 to -20 % 7.2 x Ir 0.7 <sup>[2]</sup> 0.69 1.38 2.7 5.5 8.3 11 13.8 16.6
Thermal memory		20 minutes before and after tripping
<b>Short-time</b>		<b>ANSI Code 51</b>
Pick-up (A)	$Isd = Ir \times \dots$	1.5 2 2.5 3 4 5 6 8 10 Accuracy: ±10 %
Time setting tsd (s)	Settings	$I^2t$ Off 0 0.1 0.2 0.3 0.4 $I^2t$ On - 0.1 0.2 0.3 0.4
Operating time at 10 x Ir $I^2t$ Off or $I^2t$ On	$tsd$ (max resettable time) $tsd$ (max break time)	20 80 140 230 350 80 140 200 320 500
<b>Instantaneous</b>		<b>ANSI Code 50</b>
Pick-up (A)	$Il = In \times \dots$	2 3 4 6 8 10 12 15 off Accuracy: ±10 %
Operating time	max resettable time	20 ms
	max break time	50 ms

### Micrologic 6.0 A

<b>Earth fault</b>		<b>ANSI Code 51N</b>
Pick-up (A)	$lg = In \times \dots$	A B C D E F G H J
Accuracy: ±10 %	$In \leq 400 A$	0.3 0.3 0.4 0.5 0.6 0.7 0.8 0.9 1
	$400 A < In < 1250 A$	0.2 0.3 0.4 0.5 0.6 0.7 0.8 0.9 1
	$In \geq 1250 A$	500 640 720 800 880 960 1040 1120 1200
Time setting $t_g$ (s)	Settings	$I^2t$ Off 0 0.1 0.2 0.3 0.4 $I^2t$ On - 0.1 0.2 0.3 0.4
Time delay (ms) at $In$ or 1200 A ( $I^2t$ Off or $I^2t$ On)	$t_g$ = max resettable time $t_g$ = max break time	20 80 140 230 350 80 140 200 320 500

### Micrologic 7.0 A

<b>Residual earth leakage (Vigi) ANSI Code 51G</b>		
Sensitivity (A)	$I\Delta n$	0.5 1 2 3 5 7 10 20 30
Accuracy: 0 to -20 %		
Time delay $\Delta t$ (ms)	Settings	60 140 230 350 800
	max resettable time	60 140 230 350 800
	max break time	140 200 320 500 1000

### Micrologic 5.0 / 6.0 / 7.0 A

<b>Ammeter</b>		
Instantaneous currents	$I_1, I_2, I_3, In$	$0.2 \times In$ to $1.2 \times In$ ±1.5 %
	$lg$ (6.0 A)	$0.2 \times In$ to $In$ ±10 %
	$I\Delta n$ (7.0 A)	0 to 30 A ±1.5 %
Current maximeters of	$I_1, I_2, I_3, In$	$0.2 \times In$ to $1.2 \times In$ ±1.5 %

**Note:** all current-based protection functions require no auxiliary source.


The test / reset button resets maximeters, clears the tripping indication and tests the battery.

[1] 0 to -40 % - [2] 0 to -60 %

# Micrologic control units

## Micrologic E "energy"

Micrologic E control units protect power circuits. They also offer measurements, display, communication and current maximeters. Version 6 provides earth-fault protection.

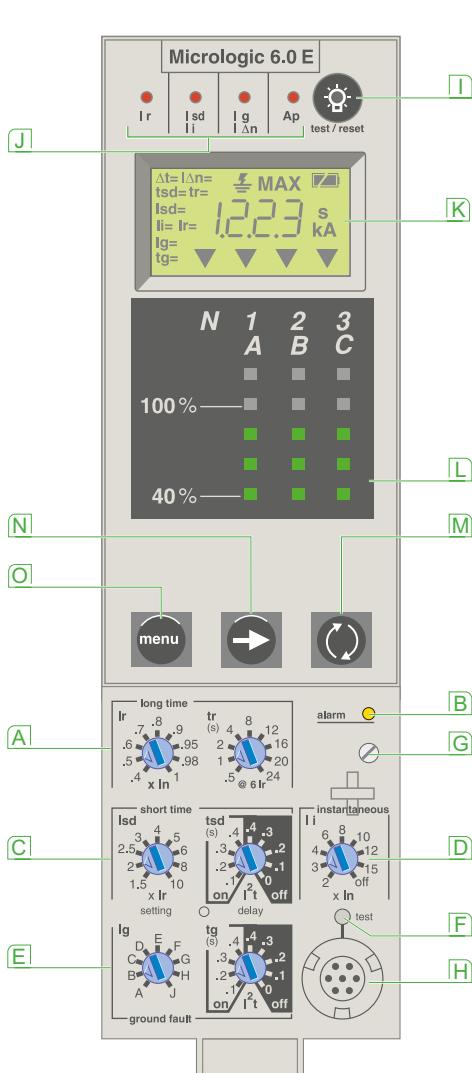

- [A] long-time threshold and tripping delay
- [B] overload alarm (LED) at 1.125 Ir
- [C] short-time pick-up and tripping delay
- [D] instantaneous pick-up
- [E] earth-leakage or earth-fault pick-up and tripping delay
- [F] earth-leakage or earth-fault test button
- [G] long-time rating plug screw
- [H] test connector
- [I] lamp test, reset and battery test
- [J] indication of tripping cause
- [K] digital display
- [L] three-phase bargraph and ammeter
- [M] navigation button "quick View" (only with Micrologic E)
- [N] navigation button to view menu contents
- [O] navigation button to change menu

[1] Display on FDM121 only.

**Note:** Micrologic E control units come with a transparent lead-seal cover as standard.

### "Energy meter" measurements

In addition to the ammeter measurements of Micrologic A, Micrologic E control units measure and display:

- current demand
- voltages: phase to phase, phase to neutral, average [1] and unbalanced [1]
- instantaneous power: P, Q, S
- power factor: PF
- power demand: P demand
- energy: Ep, Eq [1], Es [1]

Accuracy of active energy Ep is 2% (including the sensors). The range of measurement is the same as current with Micrologic A, depending of an external power supply module (24 V DC).

### Communication option (COM)

In conjunction with the communication option, the control unit transmits the following:

- settings
- all "ammeter" and "energy" measurements
- enable connection to FDM128
- tripping causes
- maximeter / minimeter readings.

### Protection

Protection thresholds and delays are set using the adjustment dials.

#### Overload protection

True rms long-time protection.

Thermal memory: thermal image before and after tripping.  
Setting accuracy may be enhanced by limiting the setting range using a different long-time rating plug. Overload protection can be cancelled using a specific LT rating plug "Off".

#### Short-circuit protection

Short-time (rms) and instantaneous protection.

Selection of I<sup>2</sup>t type (ON or OFF) for short-time delay.

#### Earth-fault protection

Residual or source ground return earth fault protection.

Selection of I<sup>2</sup>t type (ON or OFF) for delay.

#### Neutral protection

On three-pole circuit breakers, neutral protection is not possible.

On four-pole circuit breakers, neutral protection may be set using a three-position switch: neutral unprotected (4P 3d), neutral protection at 0.5 Ir (4P 3d + N/2), neutral protection at Ir (4P 4d).

#### Zone selective interlocking (ZSI)

A ZSI terminal block may be used to interconnect a number of control units to provide total discrimination for short-time and earth-fault protection, without a delay before tripping.

### Overload alarm

A yellow alarm LED goes on when the current exceeds the long-time trip threshold.

### Programmable contacts

The programmable contacts may be used to signal events

(Ir, Isd, Alarm Ir, Alarm Ig, Ig). They can be programmed using the keypad on the Micrologic E control unit or remotely using the COM option (BCM ULP) and RSU software.

### Fault indications

LEDs indicate the type of fault:

- overload (long-time protection Ir)
- short-circuit (short-time Isd or instantaneous li protection)
- earth fault (Ig)
- internal fault (Ap).

### Trip history

The trip history displays the list of the last 10 trips. For each trip, the following indications are recorded and displayed:

- the tripping cause: Ir, Isd, li, Ig or Auto-protection (Ap) trips
- the date and time of the trip (requires communication option).

### Battery power

The fault indication LEDs remain on until the test/reset button is pressed. Under normal operating conditions, the battery supplying the LEDs has a service life of approximately 10 years.

### Test

A mini test kit or a portable test kit may be connected to the test connector on the front to check circuit-breaker operation. For Micrologic 6.0 E control units, the operation of earth-fault or earth-leakage protection can be checked by pressing the test button located above the test connector.

# Micrologic control units

## Micrologic E "energy"

### Micrologic 2.0 E

<b>Long-time</b>		<b>ANSI Code 49</b>												
Current setting (A)	$I_r = I_n \times \dots$	0.4 0.5 0.6 0.7 0.8 0.9 0.95 0.98 1 Other ranges or disable by changing long-time rating plug												
Time setting exemple: time delay (s)		tr (s)	0.5 1 2 4 8 12 16 20 24	Accuracy: 0 to -30 % 1.5 x $I_r$ 12.5 25 50 100 200 300 400 500 600										
			6 x $I_r$	0.7 <sup>[1]</sup> 1 2 4 8 12 16 20 24	Accuracy: 0 to -20 % 7.2 x $I_r$ 0.7 <sup>[2]</sup> 0.69 1.38 2.7 5.5 8.3 11 13.8 16.6									
Thermal memory	20 minutes before and after tripping													
<b>Instantaneous</b>		<b>ANSI Code 50</b>												
Pick-up (A)	$I_{sd} = I_r \times \dots$	1.5 2 2.5 3 4 5 6 8 10	Accuracy: $\pm 10\%$											
Time delay	Max resettable time: 20 ms Max break time: 80 ms													

A

### Micrologic 5.0 / 6.0 E

<b>Long-time</b>		<b>ANSI Code 49</b>												
Current setting (A)	$I_r = I_n \times \dots$	0.4 0.5 0.6 0.7 0.8 0.9 0.95 0.98 1 Other ranges or disable by changing long-time rating plug												
Tripping between 1.05 and 1.20 x $I_r$		Accuracy: 0 to -30 % 1.5 x $I_r$ 12.5 25 50 100 200 300 400 500 600												
Time setting exemple: time delay (s)	tr (s)	0.5 1 2 4 8 12 16 20 24	Accuracy: 0 to -20 % 6 x $I_r$ 0.7 <sup>[1]</sup> 1 2 4 8 12 16 20 24											
			7.2 x $I_r$	0.7 <sup>[2]</sup> 0.69 1.38 2.7 5.5 8.3 11 13.8 16.6	Accuracy: 0 to -20 % 20 minutes before and after tripping									
<b>Short-time</b>		<b>ANSI Code 51</b>												
Pick-up (A)	$I_{sd} = I_r \times \dots$	1.5 2 2.5 3 4 5 6 8 10	Accuracy: $\pm 10\%$											
Time setting $t_{sd}$ (s)	Settings	$I^2t$ Off 0 0.1 0.2 0.3 0.4	$I^2t$ On - 0.1 0.2 0.3 0.4											
Operating time at 10 x $I_r$ $I^2t$ Off or $I^2t$ On	$t_{sd}$ (max resettable time)	20 80 140 230 350	$t_{sd}$ (max break time)											
		80 140 200 320 500												
<b>Instantaneous</b>		<b>ANSI Code 50</b>												
Pick-up (A)	$I_i = I_n \times \dots$	2 3 4 6 8 10 12 15 off	Accuracy: $\pm 10\%$											
Operating time	max resettable time	20 ms	max break time											

### Micrologic 6.0 E

<b>Earth fault</b>		<b>ANSI Code 51N</b>										
Pick-up (A)	$I_g = I_n \times \dots$	A B C D E F G H J										
Accuracy: $\pm 10\%$	$I_n \leq 400 A$	0.3 0.3 0.4 0.5 0.6 0.7 0.8 0.9 1	$I_n < 400 A < 1250 A$									
	$I_n \geq 1250 A$	0.2 0.3 0.4 0.5 0.6 0.7 0.8 0.9 1	500 640 720 800 880 960 1040 1120 1200									
Time setting $t_g$ (s)	Settings	$I^2t$ Off 0 0.1 0.2 0.3 0.4	$I^2t$ On - 0.1 0.2 0.3 0.4									
Time delay (ms) at $I_n$ or 1200 A ( $I^2t$ Off or $I^2t$ On)	$t_g$ = max resettable time	20 80 140 230 350	$t_g$ = max break time									
		80 140 200 320 500										

### Micrologic 5.0 / 6.0 / 7.0 E


<b>Energy</b>																					
Instantaneous currents	$I_1, I_2, I_3, I_n$	0.2 x $I_n$ to 1.2 x $I_n$																			
	$I_g$ (6.0 E)	0.2 x $I_n$ to $I_n$																			
Current maximeters of	$I_1, I_2, I_3, I_n$	0.2 x $I_n$ to 1.2 x $I_n$																			
Demand currents of $I_1, I_2, I_3, I_g$		0.2 x $I_n$ to 1.2 x $I_n$																			
Voltages	V12, V23, V31, V1N, V2N, V3N	100 to 690 V																			
Active power	P	30 to 2000 kW																			
Power factor	PF	0 to 1																			
Demand power	P demand	30 to 2000 kW																			
Active energy	Ep	-10 <sup>10</sup> GWh to 10 <sup>10</sup> GWh																			
<b>Note:</b> all current-based protection functions require no auxiliary source.																					
The test / reset button resets maximeters, clears the tripping indication and tests the battery.																					
[1] 0 to -40 % - [2] 0 to -60 %																					

# Micrologic control units

## Micrologic P "power"

A

Micrologic P control units include all the functions offered by Micrologic A. In addition, they measure voltages and calculate power and energy values. They also offer new protection functions based on currents, voltages, frequency and power reinforce load protection in real time.

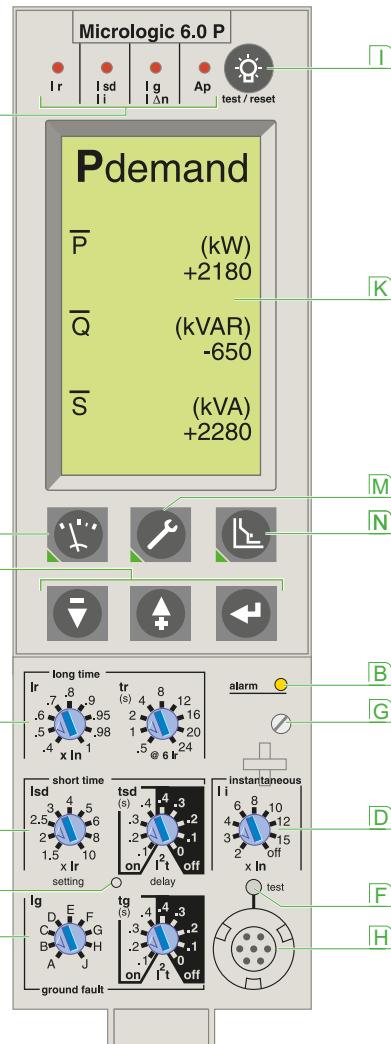

- [A] long-time current setting and tripping delay
- [B] overload signal (LED)
- [C] short-time pick-up and tripping delay
- [D] instantaneous pick-up
- [E] earth-leakage or earth-fault pick-up and tripping delay
- [F] earth-leakage or earth-fault test button
- [G] long-time rating plug screw
- [H] test connector
- [I] lamp + battery test and indications reset
- [J] indication of tripping cause
- [K] high-resolution screen
- [L] measurement display
- [M] maintenance indicators
- [N] navigation buttons
- [O] navigation buttons
- [P] hole for settings lockout pin on cover

**Note:** Micrologic P control units come with a non-transparent lead-seal cover as standard.

### Protection

#### Protection settings

The adjustable protection functions are identical to those of Micrologic A (overloads, short-circuits, earth-fault and earth-leakage protection).

#### Fine adjustment

Within the range determined by the adjustment dial, fine adjustment of thresholds (to within one ampere) and time delays (to within one second) is possible on the keypad or remotely using the COM option.

#### IDMTL (Inverse Definite Minimum Time Lag) setting

Coordination with fuse-type or medium-voltage protection systems is optimised by adjusting the slope of the overload-protection curve. This setting also ensures better operation of this protection function with certain loads.

#### Neutral protection

On three-pole circuit breakers, neutral protection may be set using the keypad or remotely using the COM option, to one of four positions: neutral unprotected (4P 3d), neutral protection at 0.5 I<sub>r</sub> (4P 3d + N/2), neutral protection at I<sub>r</sub> (4P 4d) and neutral protection at 1.6 I<sub>r</sub> (4P 3d + 1.6N). Neutral protection at 1.6 I<sub>r</sub> is used when the neutral conductor is twice the size of the phase conductors (major load imbalance, high level of third order harmonics).

On four-pole circuit breakers, neutral protection may be set using a three-position switch or the keypad: neutral unprotected (4P 3d), neutral protection at 0.5 I<sub>r</sub> (4P 3d + N/2), neutral protection at I<sub>r</sub> (4P 4d). Neutral protection produces no effect if the long-time curve is set to one of the IDMTL protection settings.

#### Programmable alarms and other protection

Depending on the thresholds and time delays set using the keypad or remotely using the COM option, the Micrologic P control unit monitors currents and voltage, power, frequency and the phase sequence. Each threshold overrun is signalled remotely via the COM option. Each threshold overrun may be combined with tripping (protection) or an indication carried out by an optional M6C programmable contact (alarm), or both (protection and alarm).

#### Load shedding and reconnection

Load shedding and reconnection parameters may be set according to the power or the current flowing through the circuit breaker. Load shedding is carried out by a supervisor via the COM option or by an M6C programmable contact.

#### Indication option via programmable contacts

The M6C (six contacts) auxiliary contacts may be used to signal threshold overruns or status changes. They can be programmed using the keypad on the Micrologic P control unit or remotely using the COM option (BCM ULP) and RSU software.


#### Communication option (COM)

The communication option may be used to:

- remotely read and set parameters for the protection functions
- transmit all the calculated indicators and measurements
- signal the causes of tripping and alarms
- consult the history files and the maintenance-indicator register
- maximeter reset.


An event log and a maintenance register, stored in control-unit memory but not available locally, may be accessed in addition via the COM option.

**Micrologic 5.0 / 6.0 / 7.0 P (Protection)**

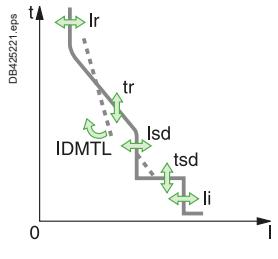
		<b>ANSI Code 49</b>									
		Current setting (A) $I_r = I_n \times \dots$									
		Tripping between 1.05 and 1.20 $\times I_r$									
		Time setting example: time delay (s) Accuracy: 0 to -30 %									
		IDMTL (EIT) Accuracy: 0 to -20 %									
		IDMTL setting Accuracy: 0 to -20 %									
		Thermal memory Curve slope									
		20 minutes before and after tripping									
		<b>ANSI Code 51</b>									
		Pick-up (A) $I_{sd} = I_n \times \dots$									
		Accuracy: ±10 %									
		Time setting $t_{sd}$ (s) Settings $I^2t$ Off 0 0.1 0.2 0.3 0.4									
		Operating time at $10 \times I_r$ $I^2t$ On - 0.1 0.2 0.3 0.4									
		Time setting $t_{sd}$ (max resettable time) $I^2t$ Off 20 80 140 230 350									
		$I^2t$ On 80 140 200 320 500									
		<b>ANSI Code 50</b>									
		Pick-up (A) $I_i = I_n \times \dots$									
		Accuracy: ±10 %									
		Operating time max resettable time 20 ms									
		max break time 50 ms									

A


**Micrologic 6.0 P (Protection)**

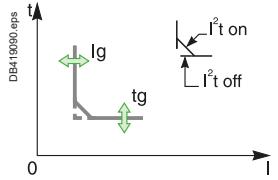		<b>ANSI Code 51N</b>									
		Pick-up (A) $I_g = I_n \times \dots$									
		Accuracy: ±10 %									
		Time setting $t_g$ (s) Settings $I^2t$ Off 0 0.1 0.2 0.3 0.4									
		Time setting $t_g$ (ms) $I^2t$ On - 0.1 0.2 0.3 0.4									
		$t_g$ = max resettable time at $I_n$ or $1200 A (I^2t$ Off or $I^2t$ On) $t_g$ = max break time 20 ms									
		80 140 200 320 500									


**Micrologic 7.0 P (Protection)**

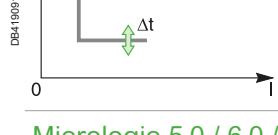		<b>Residual earth leakage (Vigi) ANSI Code 51G</b>									
		Sensitivity (A) $I_{\Delta n}$									
		Accuracy: 0 to -20 %									
		Time delay $\Delta t$ (ms) Settings max resettable time 60 140 230 350 800									
		max break time 60 140 230 350 800									

**Micrologic 5.0 / 6.0 / 7.0 P (Alarms and other protection)**

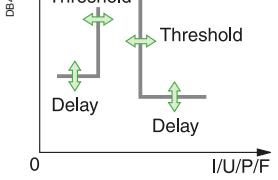		<b>Current</b>				<b>Threshold</b>				<b>Delay</b>			
		<b>ANSI Code 46</b>											
		Current unbalance				0.05 to 0.6 leverage				1 to 40 s			
		Max. demand current				$I_{max}$ demand : $I_1, I_2, I_3, IN$				15 to 1500 s			
		<b>Earth fault alarm</b>				$I_{\perp}$				10 to 100 % $I_n$ [3]			
		Voltage unbalance				Uunbalance 47 2 to 30 % $x$ Uaverage				1 to 40 s			
		Minimum voltage				$U_{min}$ 27 100 to $U_{max}$ between phases				1.2 to 10 s			
		Maximum voltage [4]				$U_{max}$ 59 $U_{min}$ to 1200 between phases				1.2 to 10 s			
		<b>Power</b>				Reverse power $rP$ 32P 5 to 500 kW				0.2 to 20 s			
		<b>Frequency</b>				Minimum frequency $F_{min}$ 81L 45 to $F_{max}$				1.2 to 5 s			
		Maximum frequency $F_{max}$				81H $F_{min}$ to 440 Hz				1.2 to 5 s			
		<b>Phase sequence</b>				Sequence (alarm) $\Delta\phi$ Ø1/2/3 or Ø1/3/2				0.3 s			

**Micrologic 5.0 / 6.0 / 7.0 P (Load shedding and reconnection)**

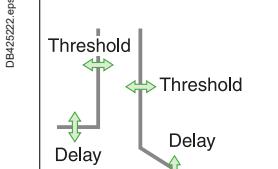		<b>Measured value</b>				<b>Threshold</b>				<b>Delay</b>			
		<b>ANSI Code 46</b>											
		Current				0.5 to 1 $I_r$ per phases				20 % $tr$ to 80 % $tr$			
		Power				200 kW to 10 MW				10 to 3600 s			
		Threshold				Delay				Delay			

**Micrologic 5.0 / 6.0 / 7.0 P (Power)**

		<b>Type of measurements</b>				<b>Range</b>				<b>Accuracy</b>			
		Current maximeters of $I_1, I_2, I_3, IN$				0.2 x $I_n$ to 1.2 x $I_n$				± 1.5 %			
		Volatges $V_{12}, V_{23}, V_{31}, V_{1N}, V_{2N}, V_{3N}$				100 to 690 V				± 0.5 %			
		Power factor PF				0 to 1				± 2 %			
		Frequency (Hz)				0.1 %							

[1] 0 to -40 % - [2] 0 to -60 % - [3]  $I_n \leq 400 A$  30 %  $400 A < I_n < 1250 A$  20 %  $I_n \leq 1250 A$  10 % -

[4] For 690 V applications, a step-down transformer must be used if the voltage exceeds the nominal value of 690 V by more than 10 %.


**Note:** all current-based protection functions require no auxiliary source.

Voltage-based protection functions are connected to AC power via a voltage measurement input built into the circuit breaker.


# Micrologic control units

## Micrologic P "power"


A

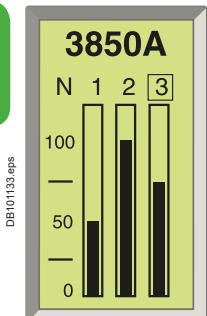


Default display.

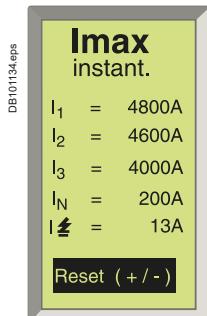


Display of a maximum current.

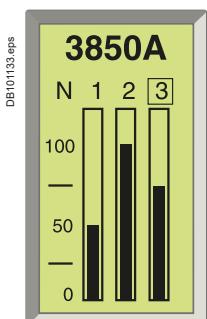


Display of a voltage.

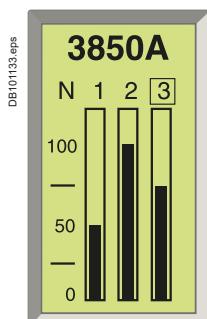

Display of a power.

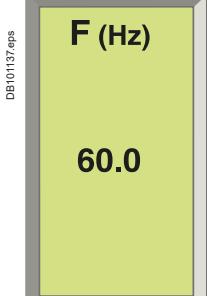

Display of a frequency.

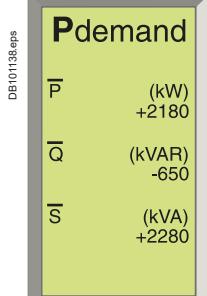

Display of a demand power.



PME software.

### Measurements

The Micrologic P control unit calculates in real time all the electrical values (V, A, W, VAR, VA, Wh, VARh, VAh, Hz), power factors and cosj factors.

The Micrologic P control unit also calculates demand current and demand power over an adjustable time period. Each measurement is associated with a minimeter and a maximeter.

In the event of tripping on a fault, the interrupted current is stored. The optional external power supply makes it possible to display the value with the circuit breaker open or not supplied.

### Instantaneous values

The value displayed on the screen is refreshed every second.

Minimum and maximum values of measurements are stored in memory (minimeters and maximeters).

### Currents

I rms	A	1	2	3	N
I max rms	A	E-fault			E-leakage
	A	1	2	3	N

### Voltages

U rms	V	12	23	31
V rms	V	1N	2N	3N
U average rms	V	(U12 + U23 + U31) / 3		
U unbalance	% (U12 - U23 - U31) / 3			

### Power, energy

P active, Q reactive, S apparent	W, Var, VA	Totals
E active, E reactive, E apparent	Wh, VARh, VAh	Totals consumed
		Totals supplied
		Total

### Power factor

### Frequencies

F	Hz
---	----

### Demand metering

The demand is calculated over a fixed or sliding time window that may be programmed from 5 to 60 minutes. According to the contract signed with the power supplier, an indicator associated with a load shedding function makes it possible to avoid or minimise the costs of overrunning the subscribed power. Maximum demand values are systematically stored and time stamped (maximeter).

### Currents

I demand	A	1	2	3	N
I max demand	A	E-fault			E-leakage
	A	1	2	3	N

### Power

P, Q, S demand	W, Var, VA	Totals
P, Q, S max demand	W, Var, VA	Totals

### Minimeters and maximeters

Only the current and power maximeters may be displayed on the screen.

#### Time-stamping

Time-stamping is activated as soon as time is set manually or by a supervisor.

No external power supply module is required (max. drift of 1 hour per year).

### Reset

An individual reset, via the keypad or remotely, acts on alarms, minimum and maximum data, peak values, the counters and the indicators.

### Additional measurements accessible with the COM option (BCM ULP)

Some measured or calculated values are only accessible with the COM communication option:

- I peak /  $\sqrt{2}$ ,  $(I_1 + I_2 + I_3)/3$ , I unbalance
- load level in % Ir
- total power factor.

The maximeters and minimeters are available only via the COM option (BCM ULP) for use with a supervisor.

### Additional info

Accuracy of measurements (including sensors):

- voltage (V) 0.5 %
- current (A) 1.5 %
- frequency (Hz) 0.1 %
- power (W) and energy (Wh) 2 %.

# Functions and characteristics

## Micrologic control units

### Micrologic P "power"

A

#### Histories and maintenance indicators

The last ten trips and alarms are recorded in two separate history files that may be displayed on the screen:

- tripping history:
  - type of fault
  - date and time
  - values measured at the time of tripping (interrupted current, etc.)
- alarm history:
  - type of alarm
  - date and time
  - values measured at the time of the alarm.

All the other events are recorded in a third history file which is only accessible through the communication network.

- Event log history (only accessible through the communication network)
  - modifications to settings and parameters
  - counter resets
  - system faults
  - fallback position
  - thermal self-protection
  - loss of time
  - overrun of wear indicators
  - test-kit connections
  - etc.

**Note:** all the events are time stamped: time-stamping is activated as soon as time is set manually or by a supervisor. No external power supply module is required (max. drift of 1 hour per year).

#### Maintenance indicators with COM option (BCM ULP)

A number of maintenance indicators may be called up on the screen to better plan for device maintenance:

- contact wear
- operation counter:
- cumulative total
- total since last reset.

Additional maintenance indicators are also available through the COM network, and can be used as an aid in troubleshooting:

- highest current measured
- number of test-kit connections
- number of trips in operating mode and in test mode.

#### Additional technical characteristics

##### Safety

Measurement functions are independent of the protection functions. The high-accuracy measurement module operates independently of the protection module.

##### Simplicity and multi-language

Navigation from one display to another is intuitive. The six buttons on the keypad provide access to the menus and easy selection of values. When the setting cover is closed, the keypad may no longer be used to access the protection settings, but still provides access to the displays for measurements, histories, indicators, etc.

Micrologic is also multi-language, including the following languages: English, Spanish, Portuguese, Russian, Chinese, French, German...

##### Intelligent measurement

Measurement-calculation mode:


- energies are calculated on the basis of the instantaneous power values, in two manners:
  - the traditional mode where only positive (consumed) energies are considered
  - the signed mode where the positive (consumed) and negative (supplied) energies are considered separately
- measurement functions implement the new "zero blind time" concept which consists in continuously measuring signals at a high sampling rate. The traditional "blind window" used to process samples no longer exists. This method ensures accurate energy calculations even for highly variable loads (welding machines, robots, etc.).

##### Always powered


All current-based protection functions require no auxiliary source. Voltage-based protection functions are connected to AC power via a voltage measurement input built into the circuit breaker.

##### Stored information

The fine setting adjustments, the last 100 events and the maintenance register remain in the control-unit memory even when power is lost.

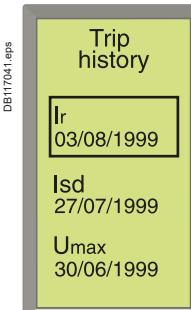

Display of a tripping history.

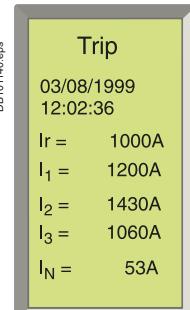


Display after tripping.

# Power Meter functions


Micrologic A/E/P control unit with COM option (BCM ULP) and COM Ethernet gateway

In addition to protection functions, Micrologic A/E/P control units offer all the functions of Power Meter products as well as operating-assistance for the circuit breaker.


A

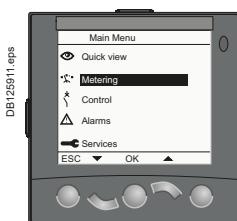


FDM121 display:  
navigation.

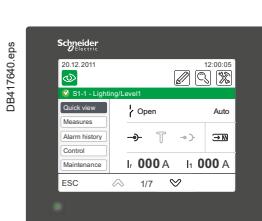


FDM128 display:  
navigation.

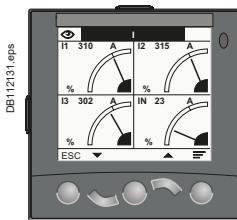

FDM121 display:  
current.

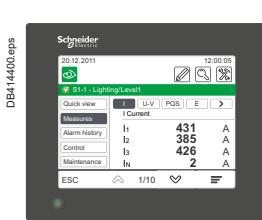


FDM128 display: current.

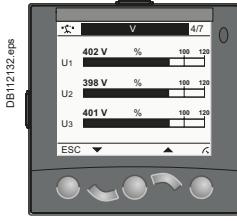

FDM121 display:  
voltage.




FDM128 display: voltage.

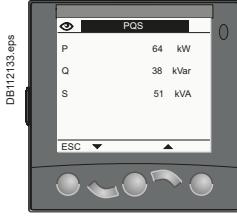

FDM121 display:  
power.



FDM128 display: power.

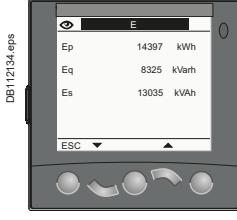

FDM121 display:  
consumption.



FDM128 display:  
consumption.

Examples of measurement screens on the FDM121 display unit.

Micrologic A/E/P measurement functions are made possible by Micrologic intelligence and the accuracy of the sensors. They are handled by a microprocessor that operates independent of protection functions.

## Display

### FDM121 display unit (one to one)

The FDM121 switchboard display unit can be connected to a COM option (BCM ULP) using a breaker ULP cord to display all measurements on a screen [1]. The result is a veritable 96 x 96 mm Power Meter.

The FDM121 display unit requires a 24 V DC power supply. The COM option (BCM ULP) unit is supplied by the same power supply via the breaker ULP cord connecting it to the FDM121.

[1] See page A-28.

### FDM128 display unit (one to eight)

Using an IFE Ethernet interface for LV breakers.

For all FDM, in addition to the information displayed on the Micrologic LCD, the FDM screen shows demand, power quality and maximeter/minimeter values along with histories and maintenance indicators.

## Measurements

### Instantaneous rms measurements

The Micrologic continuously display the RMS value of the highest current of the three phases and neutral (Imax). The navigation buttons can be used to scroll through the main measurements.

In the event of a fault trip, the trip cause is displayed.

The Micrologic A measures phase, neutral, ground fault currents.

The Micrologic E offers voltage, power, Power Factor, measurements in addition to the measurements provided by Micrologic A.

The Micrologic P offer frequency, cos. $\phi$  in addition to the measurements provided by Micrologic E.

### Maximeters / minimeters

Every instantaneous measurement provided by Micrologic A or E can be associated with a maximeter/minimeter. The maximeters for the highest current of the 3 phases and neutral, the demand current and power can be reset via the FDM display unit or the communication system.

### Energy metering

The Micrologic E/P also measures the energy consumed since the last reset of the meter. The active energy meter can be reset via Micrologic keypad or the FDM display unit or the communication system.

### Demand and maximum demand values

Micrologic E/P also calculates demand current and power values. These calculations can be made using a block or sliding interval that can be set from 5 to 60 minutes in steps of 1 minute. The window can be synchronised with a signal sent via the communication system. Whatever the calculation method, the calculated values can be recovered on a PC via Modbus communication.

Ordinary spreadsheet software can be used to provide trend curves and forecasts based on this data. They will provide a basis for load shedding and reconnection operations used to adjust consumption to the subscribed power.

# Power Meter functions

## Micrologic A/E/P control unit with COM option (BCM ULP) and COM Ethernet gateway



A

Micrologic A/E/P integrated Power Meter functions		Type	Display		
		A/E	P	Micrologic LCD	FDM display
<b>Display of protection settings</b>					
Pick-ups (A) and delays	All settings can be displayed	Ir, tr, lsd, tsd, li, lg, tg	A/E	P	○ -
<b>Measurements</b>					
<b>Instantaneous rms measurements</b>					
Currents (A)	Phases and neutral	I1, I2, I3, IN	A/E	P	○ ○
	Average of phases	lavg = (I1 + I2 + I3) / 3	A/E	P	- ○
	Highest current of the 3 phases and neutral	Imax of I1, I2, I3, IN	A/E	P	○ ○
	Ground fault (Micrologic 6)	% Ig (pick-up setting)	A/E	P	○ ○
	Current unbalance between phases	% lavg	- / E	P	- ○
Voltages (V)	Phase-to-phase	V12, V23, V31	- / E	P	○ ○
	Phase-to-neutral	V1N, V2N, V3N	- / E	P	○ ○
	Average of phase-to-phase voltages	Vavg = (V12 + V23 + V31) / 3	- / E	P	- ○
	Average of phase-to-neutral voltages	Vavg = (V1N + V2N + V3N) / 3	- / E	P	- ○
	Ph-Ph and Ph-N voltage unbalance	% Vavg and % Vavg	- / E	P	- ○
	Phase sequence	1-2-3, 1-3-2	- / -	P	○ ○ [3]
Frequency (Hz)	Power system	f	- / -	P	○ ○
Power	Active (kW)	P, total	- / E	P	○ ○
		P, per phase	- / E	P	○ ○ [2]
	Reactive (kVAR)	Q, total	- / E	P	○ ○
		Q, per phase	- / -	P	○ ○
	Apparent (kVA)	S, total	- / E	P	○ ○
		S, per phase	- / -	P	○ ○
	Power Factor	PF, total	- / E	P	○ ○
		PF, per phase	- / -	P	○ ○
	Cos.φ	Cos.φ, total	- / -	P	○ ○
		Cos.φ, per phase	- / -	P	○ ○
<b>Maximeters / minimeters</b>					
Associated with instantaneous rms measurements	Reset via FDM display unit and Micrologic keypad	A/E	P	○ ○	
<b>Energy metering</b>					
Energy	Active (kW), reactive (kVARh), apparent (kVAh)	Total since last reset	- / E	P	○ ○
<b>Demand and maximum demand values</b>					
Demand current (A)	Phases and neutral	Present value on the selected window	- / E	P	○ ○
		Maximum demand since last reset	- / E	P	○ ○ [2]
Demand power	Active (kWh), reactive (kVAR), apparent (kVA)	Present value on the selected window	- / E	P	○ ○
		Maximum demand since last reset	- / E	P	○ ○ [2]
Calculation window	Sliding, fixed or com-synchronised	Adjustable from 5 to 60 minutes in 1 minute steps [1]	- / E	P	- -

[1] Available via the communication system only.

[2] Available for Micrologic P only.

[3] FDM121 only.

# Operating-assistance functions

Micrologic A/E/P control unit with COM option (BCM ULP)

A

## Histories

- Trip indications in clear text in a number of user-selectable languages.
- Time-stamping: date and time of trip.

## Maintenance indicators

Micrologic control unit have indicators for, among others, the number of operating cycles, contact wear P, load profile and operating times (operating hours counter) of the Masterpact circuit breaker.

It is possible to assign an alarm to the operating cycle counter to plan maintenance. The various indicators can be used together with the trip histories to analyse the level of stresses the device has been subjected to.

## Management of installed devices

Each circuit breaker equipped with a COM option (BCM ULP) can be identified via the communication system:

- serial number
- firmware version
- hardware version
- device name assigned by the user.

This information together with the previously described indications provides a clear view of the installed devices.

Micrologic A/E/P operating assistance functions			Type	Display		
			A/E	P	Micrologic LCD	FDM121 display
<b>Operating assistance</b>						
<b>Trip history</b>						
Trips	Cause of tripping	Ir, Isd, Ii, Ig, IΔn	- / E	P		
<b>Maintenance indicators</b>						
Counter	Mechanical cycles	Assignable to an alarm	A/E	P	-	
	Electrical cycles	Assignable to an alarm	A/E	P	-	
	Hours	Total operating time (hours) <sup>[1]</sup>	A/E	P	-	-
Indicator	Contact wear	%	- / -	P	-	
		% of hours in four current ranges:				
Load profile	Hours at different load levels	0-49 % In, 50-79 % In, 80-89 % In and ≥ 90 % In	A/E	P	-	

<sup>[1]</sup> Also available via the communication system.

## Additional technical characteristics

### Contact wear

Each time Compact opens, the Micrologic P trip unit measures the interrupted current and increments the contact-wear indicator as a function of the interrupted current, according to test results stored in memory. Breaking under normal load conditions results in a very slight increment. The indicator value may be read on the FDM121 display. It provides an estimation of contact wear calculated on the basis of the cumulative forces affecting the circuit breaker. When the indicator reaches 100 %, it is advised to inspect the circuit breaker to ensure the availability of the protected equipment.

### Circuit breaker load profile

Micrologic A/E/P calculates the load profile of the circuit breaker protecting a load circuit. The profile indicates the percentage of the total operating time at four current levels (% of breaker In):

- 0 to 49 % In
- 50 to 79 % In
- 80 to 89 % In
- ≥ 90 % In.

This information can be used to optimise use of the protected equipment or to plan ahead for extensions.

# Switchboard-display functions

## Micrologic A/E/P control unit with COM option (BCM ULP)

Micrologic measurement capabilities come into full play with the FDM121 switchboard display. It connects to COM option (BCM ULP) via a breaker ULP cord and displays Micrologic information. The result is a true integrated unit combining a circuit breaker and a Power Meter. Additional operating assistance functions can also be displayed.

A

### FDM121 switchboard display

An FDM121 switchboard display unit can be connected to a ULP IMU using a prefabricated cord to display all measurements, alarms, histories and event tables, maintenance indicators, management of installed devices on a screen. The result is a veritable 96 x 96 mm Power Meter.

The FMD121 display unit requires a 24 V DC power supply.

The FDM121 is a switchboard display unit that can be integrated in the Compact NSX100 to 630 A, Powerpact H/J/L/P/R, Compact NS or Masterpact systems. It uses the sensors and processing capacity of the Micrologic trip unit. It is easy to use and requires no special software or settings. It is immediately operational when connected to the Compact NSX by a simple cord.

Also, it provides monitoring and control with the use of the I/O application module, the motor mechanism module, or the Breaker Status module.

The FDM121 is a large display, but requires very little depth. The anti-glare graphic screen is backlit for very easy reading even under poor ambient lighting and at sharp angles.

#### Display of Micrologic measurements and alarms

The FDM121 is intended to display Micrologic 5 / 6 measurements, alarms and operating information. It cannot be used to modify the protection settings. Measurements may be easily accessed via a menu. All user-defined alarms are automatically displayed. The display mode depends on the priority level selected during alarm set-up:

- high priority: a pop-up window displays the time-stamped description of the alarm and the orange LED flashes
- medium priority: the orange "Alarm" LED goes steady on
- low priority: no display on the screen.

All faults resulting in a trip automatically produce a high-priority alarm, without any special settings required. In all cases, the alarm history is updated. Micrologic saves the information in its non-volatile memory in the event of an FDM121 power failure.

#### Status indications and remote control

When the circuit breaker is equipped with the Breaker Status Module, the FDM121 display can also be used to view circuit breaker status conditions:

- O/F: ON/OFF
- SD: trip indication
- SDE: Fault-trip indication (overload, short-circuit, ground fault).

When the circuit breaker system is equipped with the I/O application module, the FDM121 can monitor and control:

- craddle management
- circuit breaker operation
- light and load control
- custom application.

When the circuit breaker system is equipped with the motor mechanism module, the FDM121 offers remote closing and opening control.

#### Main characteristics

- 96 x 96 x 30 mm screen requiring 10 mm behind the door (or 20 mm when the 24 V power supply connector is used).
- White backlighting.
- Wide viewing angle: vertical  $\pm 60^\circ$ , horizontal  $\pm 30^\circ$ .
- High resolution: excellent reading of graphic symbols.
- Alarm LED: flashing orange for alarm pick-up, steady orange after operator reset if alarm condition persists.
- Operating temperature range  $-10^\circ\text{C}$  to  $+55^\circ\text{C}$ .
- CE / UL / CSA marking (pending).
- 24 V DC power supply, with tolerances 24 V -20 % (19.2 V) to 24 V +10 % (26.4 V). When the FDM121 is connected to the communication network, the 24 V DC can be supplied by the communication system wiring system.
- Consumption 40 mA.

#### Mounting

The FDM121 is easily installed in a switchboard.

- Standard door cut-out 92 x 92 mm.
- Attached using clips.

To avoid a cut-out in the door, an accessory is available for surface mounting by drilling only two 22 mm diameter holes. The FDM121 degree of protection is IP54 in front. IP54 is maintained after switchboard mounting by using the supplied gasket during installation.

#### Connection

The FDM121 is equipped with:

- a 24 V DC terminal block:
- plug-in type with 2 wire inputs per point for easy daisy-chaining
- power supply range of 24 V DC -20 % (19.2 V) to 24 V DC +10 % (26.4 V).

A 24 V DC type auxiliary power supply must be connected to a single point on the ULP system. The FDM121 display unit has a 2-point screw connector on the rear panel of the module for this purpose. The ULP module to which the auxiliary power supply is connected distributes the supply via the ULP cable to all the ULP modules connected to the system and therefore also to Micrologic.

- two RJ45 jacks.



FDM121 display.



Surface mount accessory.




Connection with FDM121 display unit.


# Switchboard-display functions

## Micrologic A/E/P control unit with COM option (BCM ULP)


A

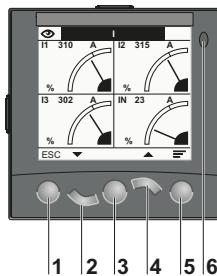


- 1 escape
- 2 down
- 3 ok
- 4 up
- 5 context
- 6 alarm LED

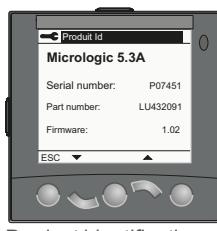


Product identification.

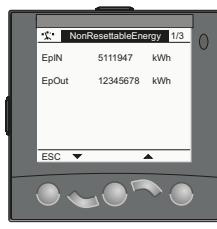

Metering: meter.

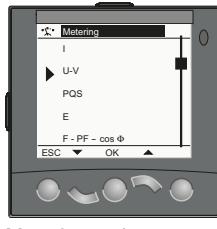

Metering: sub-menu.

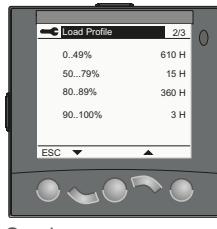

Services.

The Micrologic connects to the internal communication terminal block on the Masterpact via the breaker ULP cord. Connection to one of the RJ45 connectors on the FDM121 automatically establishes communication between the Micrologic and the FDM121 and supplies power to the Micrologic measurement functions. When the second connector is not used, it must be fitted with a line terminator.

### Navigation

Five buttons are used for intuitive and fast navigation.

The "Context" button may be used to select the type of display (digital, bargraph, analogue).

The user can select the display language (Chinese, English, French, German, Italian, Portuguese, Spanish, etc.).

### Screens

#### Main menu

When powered up, the FDM121 screen automatically displays the ON/OFF status of the device.



When not in use, the screen is not backlit. Backlighting can be activated by pressing one of the buttons. It goes off after 3 minutes.

#### Fast access to essential information

■ "Quick view" provides access to five screens that display a summary of essential operating information (I, U, f, P, E, THD, circuit breaker On / Off).

#### Access to detailed information


■ "Metering" can be used to display the measurement data (I, U-V, f, P, Q, S, E, THD, PF) with the corresponding min/max values.

■ Alarms displays active alarms and the alarm history.

■ Services provides access to the operation counters, energy and maximeter reset

■ function, maintenance indicators, identification of modules connected to the internal bus and FDM121 internal settings (language, contrast, etc.).

### Communication components and FDM121 connections

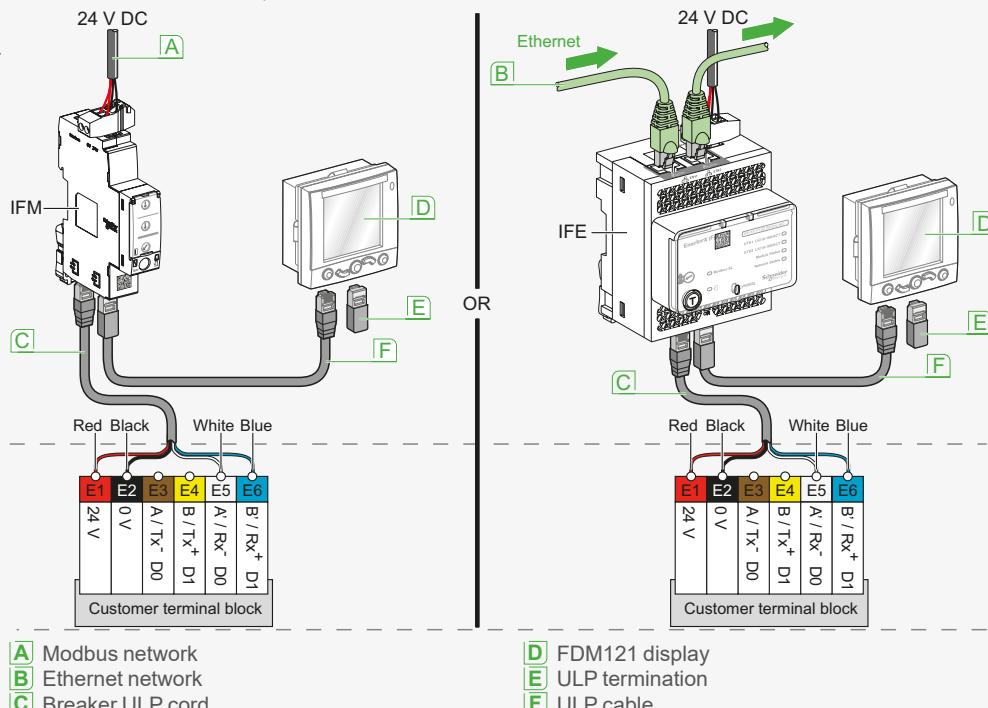

### Connections

■ Compact NS is connected to the ULP devices (FDM121 display, IFM, IFE or I/O application module) unit via the breaker ULP cord.

□ cord available in three lengths: 0.35 m, 1.3 m and 3 m.

□ lengths up to 10 m possible using extensions.

# Switchboard-display functions

## Micrologic A/E/P control unit with COM Ethernet gateway

Micrologic measurement capabilities come into full play with the FDM128 switchboard display. It connects to Ethernet communication via RJ45 port and displays Micrologic information. The result is a true integrated unit combining a circuit breaker and a Power Meter. Additional operating assistance functions can also be displayed.

A

### FDM128 switchboard display

The FDM128 is an intelligent Ethernet display. It collects the data from up to 8 devices via Ethernet network. The FDM128 switchboard display unit can be connected to a Micrologic COM option (BCM ULP via IFE). It uses the sensors and processing capacity of the Micrologic control unit. It is easy to use and requires no special software or settings.

The FDM128 is a large display, but requires very little depth. The anti-glare graphic screen is backlit for very easy reading even under poor ambient lighting and at sharp angles.

FDM128 switchboard display is designed to manage up to 8 devices (Masterpact, Compact NS, Compact NSX or Smartlink).

#### Display of Micrologic measurements and trips

The FDM128 is intended to display Micrologic A/E/P measurements, trips and operating information.

It cannot be used to modify the protection settings.

Measurements may be easily accessed via a menu.

Trips are automatically displayed.

A pop-up window displays the time-stamped description of the trip.

#### Status indications

When the circuit breaker is equipped with the Breaker Status Command Module (BSCM) and NSX cord, the FDM128 display can also be used to view circuit breaker status conditions:

- O/F: ON/OFF
- SDE: Fault-trip indication (overload, short-circuit, ground fault)
- CE, CD, CT cradle management with I/O application module.

#### Remote control

When the circuit breaker is equipped with the COM option (BCM ULP) (including its kit for connection to communication voltage releases), the FDM128 display can also be used to control (open/close) the circuit breaker.

Two operating mode are available:


- local mode : open/close commands are enabled from FDM128 while disable from communication network
- remote mode : open/close commands are disabled from FDM128 while, enabled from communication network.

#### Main characteristics

- 115.2 x 86.4 mm with 5.7" QVGA display 320 x 240 pixels.
- Color TFT LCD, LED backlight.
- Wide viewing angle: vertical  $\pm 80^\circ$ , horizontal  $\pm 70^\circ$ .
- High resolution: excellent reading of graphic symbols.
- Operating temperature range -10 °C to +55 °C.
- CE / UL / CSA marking (pending).
- 24 V DC power supply, with tolerances 24 V (limit 20.4 - 28.8 V DC).
- Consumption  $\leq 6.8$  W.



FDM128 display.

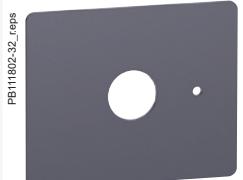

Surface mount accessory.



# Switchboard-display functions


Micrologic A/E/P control unit with COM Ethernet gateway



Product identification.



Metering: meter.

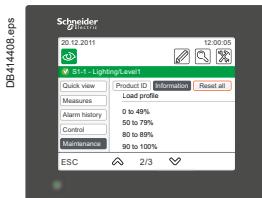

Services.


## Navigation

Touch screen is used for intuitive and fast navigation.

The user can select the display language (Chinese, English, French, German, Italian, Portuguese, Spanish, etc.).

## Screens

### Main menu

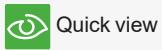

Quick view



Alarms



Metering



Maintenance.



Control

When not in use, the screen is automatically shifted to low back-lighting.

### Fast access to essential information

- "Quick view" provides access to five screens that display a summary of essential operating information (I, U, f, P, E, THD, circuit breaker On / Off).

### Access to detailed information

- "Metering" can be used to display the measurement data (I, U-V, f, P, Q, S, E, THD, PF) with the corresponding min/max values.
- Alarms displays the trip history.
- Services provides access to the operation counters, energy and maximeter reset function, maintenance indicators, identification of modules connected to the internal bus and FDM128 internal settings (language, contrast, etc.).

# Protection of distribution systems

## Micrologic control units for Compact NS630b to 3200

A

### External sensors


#### External sensor for earth-fault and neutral protection

The sensors, used with the 3P circuit breakers, are installed on the neutral conductor for:

- neutral protection (with Micrologic P)
- residual type earth-fault protection (with Micrologic A, E and P).

The rating of the sensor (CT) must be compatible with the rating of the circuit breaker:


- NS630b to 1600 A - 400/1600 CT
- NS1600b to 3200 A - 1000/4000 CT.

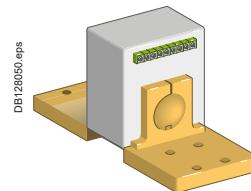

External sensor (CT).



External sensor for earth leakage protection.

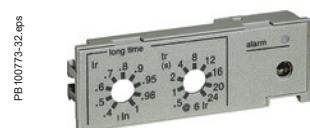

Long-time rating plug.

#### Rectangular sensor for earth-leakage protection

The sensor is installed around the busbars (phases + neutral) to detect the zero-phase sequence current required for the earth-leakage protection. Rectangular sensors are available in two sizes.

Inside dimensions (mm)

- 280 x 115 up to 1600 A for Compact NS630b to 1600 A (L1)
- 470 x 160 up to 3200 A for Compact NS1600b to 3200 A (L2).

#### External sensor for source ground return protection

The sensor is installed around the connection of the transformer neutral point to earth and connects to the Micrologic 6.0 control unit via an MDGF module to provide the source ground return (SGR) protection.

#### Long-time rating plug

Four interchangeable plugs may be used to limit the long-time threshold setting range for higher accuracy.

The time delay settings indicated on the plugs are for an overload of 6 Ir (for further details, see the characteristics on [page A-13](#) and [page A-17](#)).

As standard, control units are equipped with the 0.4 to 1 plug.

#### Setting ranges

Standard	$Ir = In \times ...$	0.4	0.5	0.6	0.7	0.8	0.9	0.95	0.98	1
Low-setting option	$Ir = In \times ...$	0.4	0.45	0.50	0.55	0.60	0.65	0.70	0.75	0.8
High-setting option	$Ir = In \times ...$	0.80	0.82	0.85	0.88	0.90	0.92	0.95	0.98	1
Off plug		No long-time protection ( $Ir = In$ for $Isd$ setting)								

**Important:** long-time rating plugs must always be removed before carrying out insulation or dielectric withstand tests.

#### External 24 V DC power-supply module (AD)

The external power-supply module makes it possible to use the display even if the circuit breaker is open or not supplied (for the exact conditions of use, see the "electrical diagrams" part of this catalogue).

This module powers both the control unit (100 mA) and the M2C and M6C programmable contacts (100 mA).

With the Micrologic A/E control unit, this module makes it possible to display currents of less than 20 % of  $In$ .

With the Micrologic P and H, it can be used to display fault currents after tripping.

If the COM option is used, a second dedicated power supply shall be used.

We recommend to use the AD power supply due to its low stray primary secondary capacitance. Good operation of the Micrologic trip unit in noisy environment is not guaranteed with other power supplies.

#### Characteristics

- Power supply:
- 110/130, 200/240, 380/415 V AC, 50/60 Hz (+10 % -15 %)
- 24/30, 48/60, 100/125 V DC (+20 % -20 %).
- Output voltage: 24 V DC  $\pm 5\%$ , 1 A.
- Ripple < 1 %.
- Dielectric withstand : 3.5 kV rms between input/output, for 1 minute.
- Overvoltage category: as per IEC 60947-1 cat. 4.




External 24 V DC power supply module.

# Protection of distribution systems

## Micrologic control units for Compact NS630b to 3200



## Battery module.

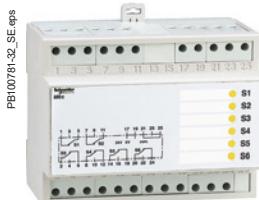

M6C.



### Lead-seal cover.

## Battery module

The battery module maintains display operation and communication with the supervisor if the power supply to the Micrologic control unit is interrupted.

It is installed in series between the Micrologic control unit and the AD module.

## **Characteristics**

- Battery run-time: 4 hours (approximately).
  - Mounted on vertical backplate or symmetrical rail.

### M6C programmable contacts

These contacts are optional equipment for the Micrologic P control units. They are described with the indication contacts for the circuit breakers.

<b>Micrologic</b>		<b>Type P</b>
<b>Characteristics</b>		<b>M6C</b>
Minimum load		100 mA/24 V
Breaking capacity (A)	V AC 240	5
p.f.: 0.7	380	3
	V DC 24	1.8
	48	1.5
	125	0.4
	250	0.15

M6C: external 24 V DC power supply required (consumption 100 mA).

## Spare parts

## Lead-seal covers

**Lead seal covers**  
A lead-seal cover controls access to the adjustment dials.

When the cover is closed:

- it is impossible to modify settings using the keypad unless the settings lockout pin on the cover is removed
  - the test connector remains accessible
  - the test button for the earth-fault and earth-leakage protection function remains accessible.

### **Characteristics**

- Transparent cover for basic Micrologic and Micrologic A, E control units.
  - Non-transparent cover for Micrologic P control units.

## Spare battery

A battery supplies power to the LEDs identifying the tripping causes. Battery service life is approximately ten years.

A test button on the front of the control unit is used to check the battery condition. The battery may be replaced on site when discharged.

# Protection of distribution systems

## Micrologic control units for Compact NS630b to 3200

A

### Test equipment

#### Hand-held test kit

The hand-held mini test kit may be used to:

- check operation of the control unit and the tripping and pole-opening system by sending a signal simulating a short-circuit
  - supply power to the control units for settings via the keypad when the circuit breaker is open (Micrologic P control units).
- Power source: standard LR6-AA battery.

#### Full function test kit

The test kit can be used alone or with a supporting personal computer.

The test kit without PC may be used to check:

- the mechanical operation of the circuit breaker
- the electrical continuity of the connection between the circuit breaker and the control unit
- operation of the control unit:
- display of settings
- automatic and manual tests on protection functions
- test on the zone-selective interlocking (ZSI) function
- inhibition of the earth-fault protection
- inhibition of the thermal memory.

The test kit with PC offers in addition:

- the test report (software available on request).



Portable test kit.

# Enerlin'X communication system


## Products overview

A

Enerlin'X communication system provides access to status, electrical values and devices control using Ethernet and Modbus SL communication protocols.

**Ethernet** has become the universal link between switchboards, computers and communication devices inside the building. The large amount of information which can be transferred makes the connection of Enerlin'X digital system to hosted web services of Schneider Electric a reality. More advantages are offered to integrators thanks to configuration web pages available remotely or on the local Ethernet network.

**Modbus SL** is the most widely used communication protocol in industrial networks. It operates in master-slave mode. The devices (slaves) communicate one after the other with a gateway (master).

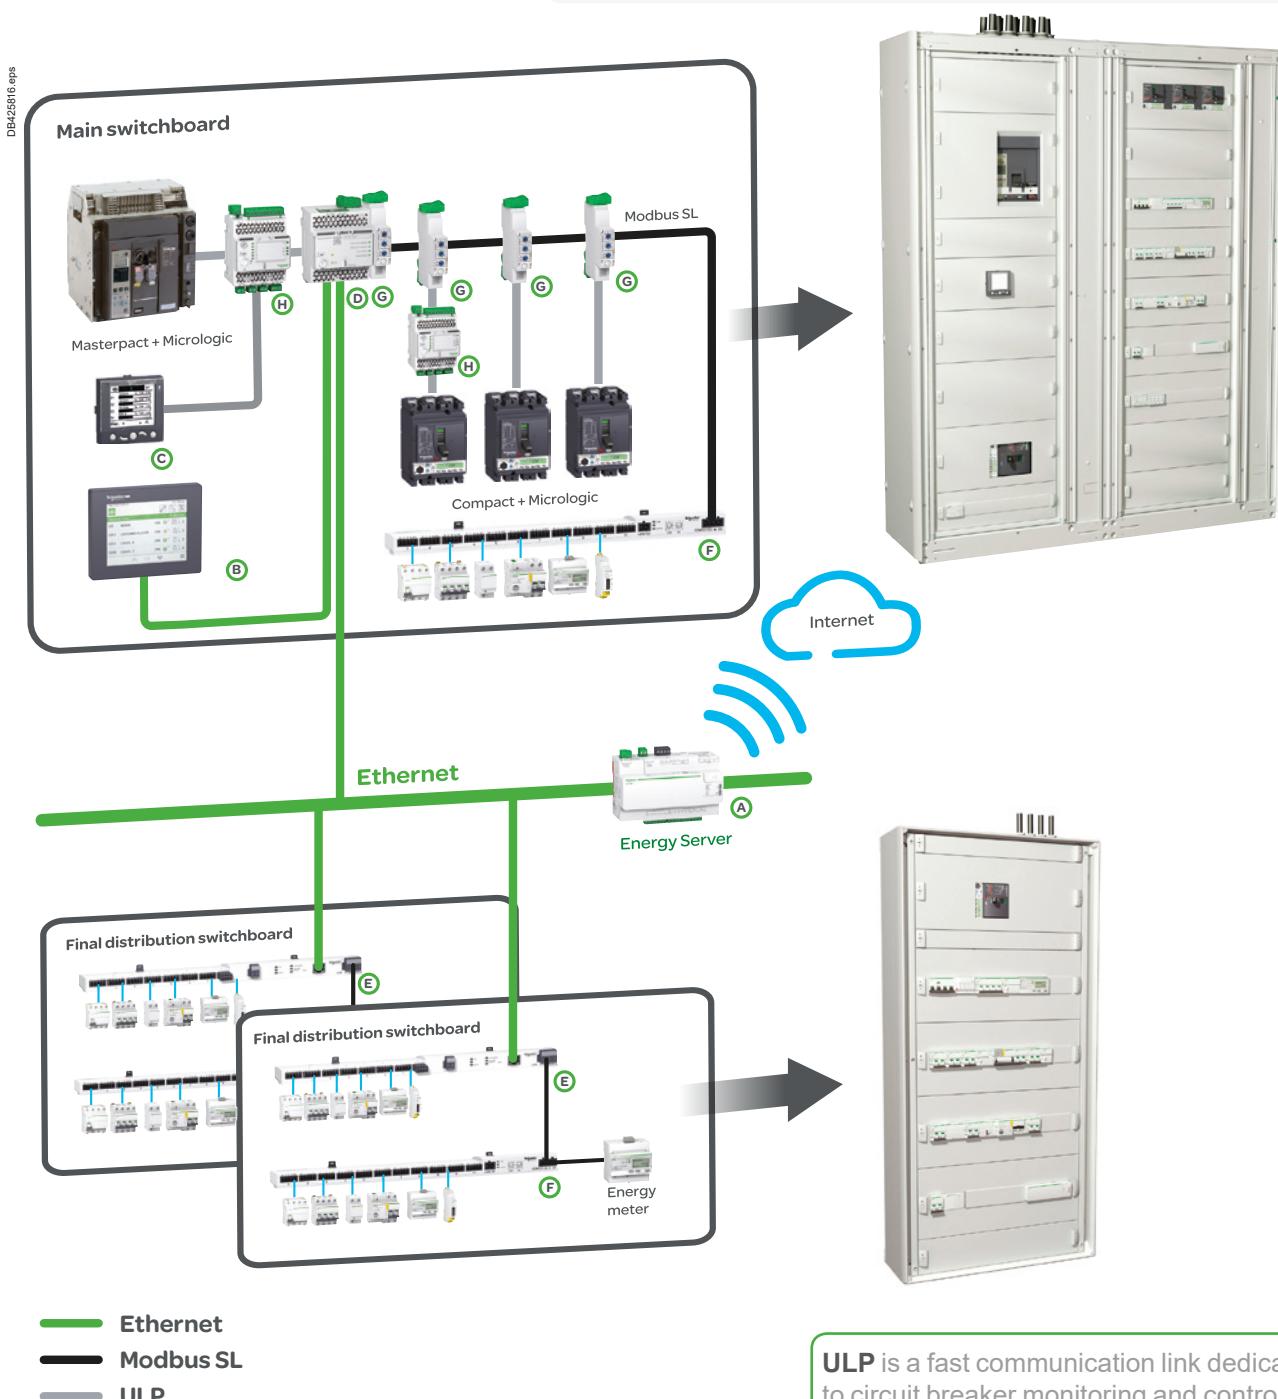

**ULP** is a fast communication link dedicated to circuit breaker monitoring and control.

# Enerlin'X communication system

## Products overview

A

### Enerlin'X communication devices and displays

	Name	Function	Port	(to device)	(to server)	Bin. Input	Analog. Input	Bin. Output	Cial. Ref.
A	Com'X 200	Energy Server with Ethernet Gateway [1]	Modbus Master	Ethernet cable + WiFi	6	2	-	-	EBX200
B	FDM128	Ethernet LCD colour touch screen	-	Ethernet	-	-	-	-	LV434128
C	FDM121	LCD display for circuit breaker	ULP	-	-	-	-	-	TRV00121
D	IFE interface + gateway IFE interface	Ethernet interface [2] & Gateway Ethernet interface for circuit breakers	Modbus Master & ULP ULP	Ethernet	-	-	-	-	LV434002
E	Acti9 Smartlink Ethernet	Ethernet interface with Input/Output functions & Gateway	Modbus Master	Ethernet	14	2	7	-	A9XMEA08
F	Acti9 Smartlink Modbus	Modbus interface with Input/Output functions	-	Modbus Slave	22	-	11	-	A9XMSB11
G	IFM	Modbus interface for circuit breaker	ULP	Modbus Slave	-	-	-	-	LV434000
H	I/O	Input/Output application module for circuit breaker	ULP	ULP	6	-	3	-	LV434063

[1] Gateway: transfers data from a network to another (ie.: Modbus to Ethernet).

[2] Interface: transfers data from an equipment to a network.(ie.: ULP to Modbus).

### Commissioning / maintenance tools

Web pages embedded into Com'X 200 and Acti9 Smartlink Ethernet gateways

Access with a standard PC and common browser:

- commissioning,
- communication diagnosis,
- functional tests...

### Electrical Asset Manager

Loaded into a standard PC Error free commissioning. Time saving, easier management and maintenance thanks to the advanced services:

- project management,
- configuration of controllers, gateways, ...
- test of communication networks, diagnostic report...



Plug and play commissioning tools give a real peace of mind to panel builders as their panels can be functionally checked before delivery.

# Communication


## Communication wiring system

A

### Wiring system ULP

The wiring system is designed for low-voltage power switchboards. Installation requires no tools or special skills. The prefabricated wiring ensures both data transmission (Modbus protocol) and 24 V DC power distribution for the communications modules on the Micrologic control units.

PB19123.aspx

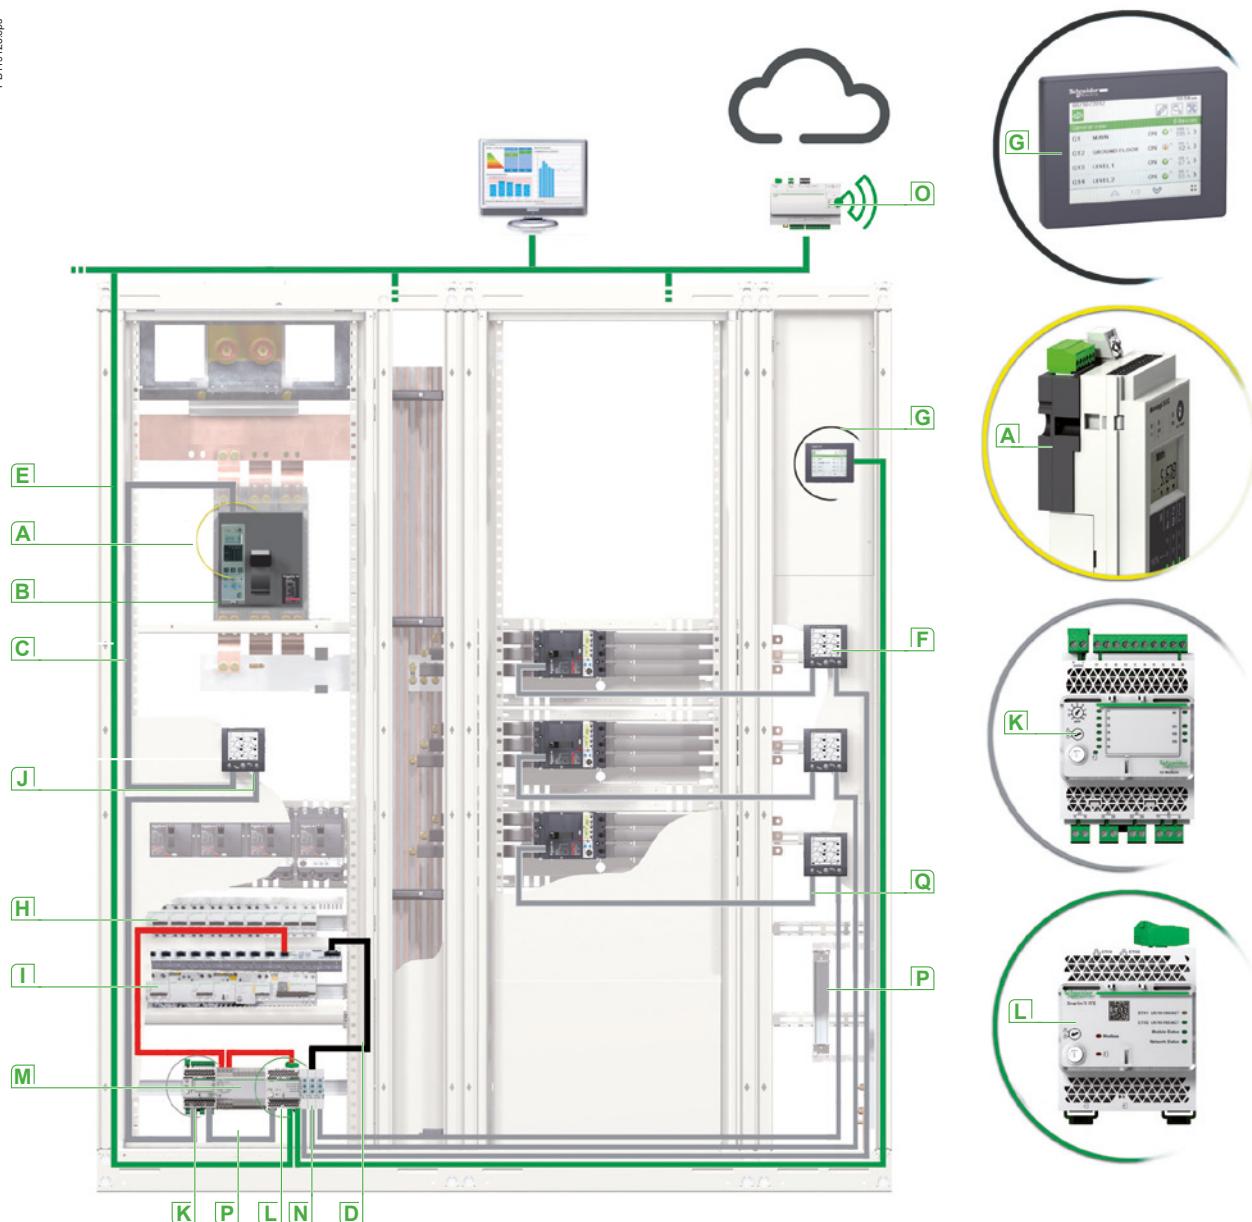

[A] BCM ULP: Breaker Communication Module with ULP port	
[B] Micrologic control unit	
[C] Breaker ULP cord	0.35 m 1.3 m 3 m
[D] Modbus cable	LV434195 LV434196 LV434197
[E] Ethernet cable	
[F] FDM121: Front Display Module	TRV00121
[G] FDM128: Front Display Module	LV434128
[H] Smartlink	A9XMSB11
[I] Acti9	
[J] ULP line terminators	TRV00880
[K] I/O (Input/Output) application module	LV434063

[L] IFE: Ethernet interface	LV434001 or LV434002
[M] External 24 V DC power supply module	LV434000
[N] IFM: Modbus-SL interface	TRV00810
[O] Com'X 200	0.3 m 0.6 m 1 m 2 m 3 m 5 m
[P] ULP cable	TRV00803 TRV00806 TRV00810 TRV00820 TRV00830 TRV00850
[Q] NSX cord	0.35 m 1.3 m 3 m
	LV434200 LV434201 LV434202
	Ethernet Modbus ULP 24 V DC

# Communication

## Overview of functions

A

### Four functional levels

The Compact can be integrated into a Modbus communication environment. There are four possible functional levels that can be combined.

	Switch-disconnectors	Circuit breaker
<b>Status indications</b>		
ON/OFF (O/F)	●	S A E P
Spring charged CH	●	S A E P
Ready to close	●	S A E P
Fault-trip SDE	●	S A E P
Connected / disconnected / test position	●	S A E P
CE/CD/CT (I/O application module only)		S A E P
<b>Controls</b>		
MX open release	●	S A E P
Closing release	●	S A E P
<b>Measurements</b>		
Instantaneous measurement information	●	A E P
Averaged measurement information	●	E P
Maximeter / minimeter	●	A E P
Energy metering	●	E P
Demand for current and power	●	E P
Power quality	●	
<b>Operating assistance</b>		
Protection and alarm settings		A E P
Histories		A E P
Time stamped event tables		A E P
Maintenance indicators		A E P

### Communication Modbus bus

The Modbus RS 485 (RTU protocol) system is an open bus on which communicating Modbus devices (Compact NS with Modbus COM, Power Meter PM700, PM800, Sepam, Vigilohm, Compact NSX, etc.) are installed. All types of PLCs and microcomputers may be connected to the bus.

### Addresses

The Modbus communication parameters (address, baud rate, parity) are entered using the keypad on the Micrologic A, E, P. For a switch-disconnector, it is necessary to use the RSU (Remote Setting Utility) Micrologic utility.

### Modbus addresses

@xx	Circuit breaker manager	(1 to 47)
@xx + 50	Chassis manager	(51 to 97)
@xx + 200	Measurement manager	(201 to 247)
@xx + 100	Protection manager	(101 to 147)

The manager addresses are automatically derived from the circuit breaker address @xx entered via the Micrologic control unit (the default address is 47).

### Number of devices

The maximum number of devices that may be connected to the Modbus bus depends on the type of device (Compact with Modbus COM, PM700, PM800, Sepam, Vigilohm, Compact NSX, etc.), the baud rate (19200 is recommended), the volume of data exchanged and the desired response time. The RS 485 physical layer offers up to 32 connection points on the bus (1 master, 31 slaves). A fixed device requires only one connection point (communication module on the device). A drawout device uses two connection points (communication modules on the device and on the chassis).

The number must never exceed 31 fixed devices or 15 drawout devices.

### Length of bus

The maximum recommended length for the Modbus bus is 1200 meters.

### Bus power source

A 24 V DC power supply is required (less than 20 % ripple, insulation class II).



S: Micrologic without measurement.

A: Micrologic with ammeter

E: Micrologic "Energy"

P: Micrologic "Power"

**Note:** see the description of the Micrologic control units for further details on protection and alarms, measurements, waveform capture, histories, logs and maintenance indicators.

# Communication

## COM option in Compact

A

All the Compact devices can be fitted with the communication function thanks to the COM option. Compact uses the Ethernet or Modbus communications protocol for full compatibility with the supervision management systems. Eco COM is limited to the transmission of metering data and status. It is not used to communicate controls.

### For fixed devices, the COM option is made up of:

- a BCM ULP module, installed behind the Micrologic control unit and supplied with its set of sensors (OF, SDE, PF and CH micro switches) its kit for connection to communicating voltage releases and its COM terminal block (inputs E1 to E6)
- IFM, this module required for connection to the network, contains the Modbus address (1 to 99) declared by the user via the two dials in front. It automatically adapts (baud rate, parity) to the Modbus network in which it is installed.

Or

- IFE, the Ethernet interface for LV circuit breaker enables an intelligent modular unit (IMU), for example a Compact NS circuit breaker to be connected to an Ethernet network. Each circuit breaker has its own IFE and a corresponding IP address.

### For drawout devices, the COM option is made up of:

- a BCM ULP module, installed behind the Micrologic control unit and supplied with its set of sensors (OF, SDE, PF and CH micro switches) its kit for connection to communicating voltage releases and its COM terminal block (inputs E1 to E6).
- IFM, this module required for connection to the network, contains the Modbus address (1 to 99) declared by the user via the two dials in front. It automatically adapts (baud rate, parity) to the Modbus network in which it is installed.

Or

- IFE, the Ethernet interface for LV circuit breaker enables an intelligent modular unit (IMU), for example a Compact NS circuit breaker to be connected to an Ethernet network. Each circuit breaker has its own IFE and a corresponding IP address.
- I/O (Input/Output) application module for LV breaker, the I/O application module is delivered with withdrawable devices ordered with the COM option, for cradle management. It must be installed on a DIN rail near the device. It must be connected to the ULP system and to the position contacts (CD, CT, CE) that transmit the position of the device in the cradle.

#### BCM ULP module

This module is independent of the control unit. It receives and transmits information on the communication network. An infra-red link transmits data between the control unit and the communication module.

Consumption: 30 mA, 24 V.


#### XF and MX1 communicating voltage releases

The XF and MX1 communicating voltage releases are equipped for connection to the "device" communication module.

The remote-tripping function (MX2 or MN) are independent of the communication option. They are not equipped for connection to the "device" communication module.



BCM ULP.

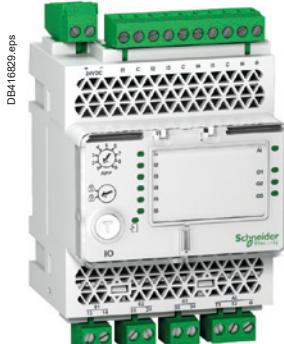


I/O application module.

# Functions and characteristics

## Communication

### Communication architecture

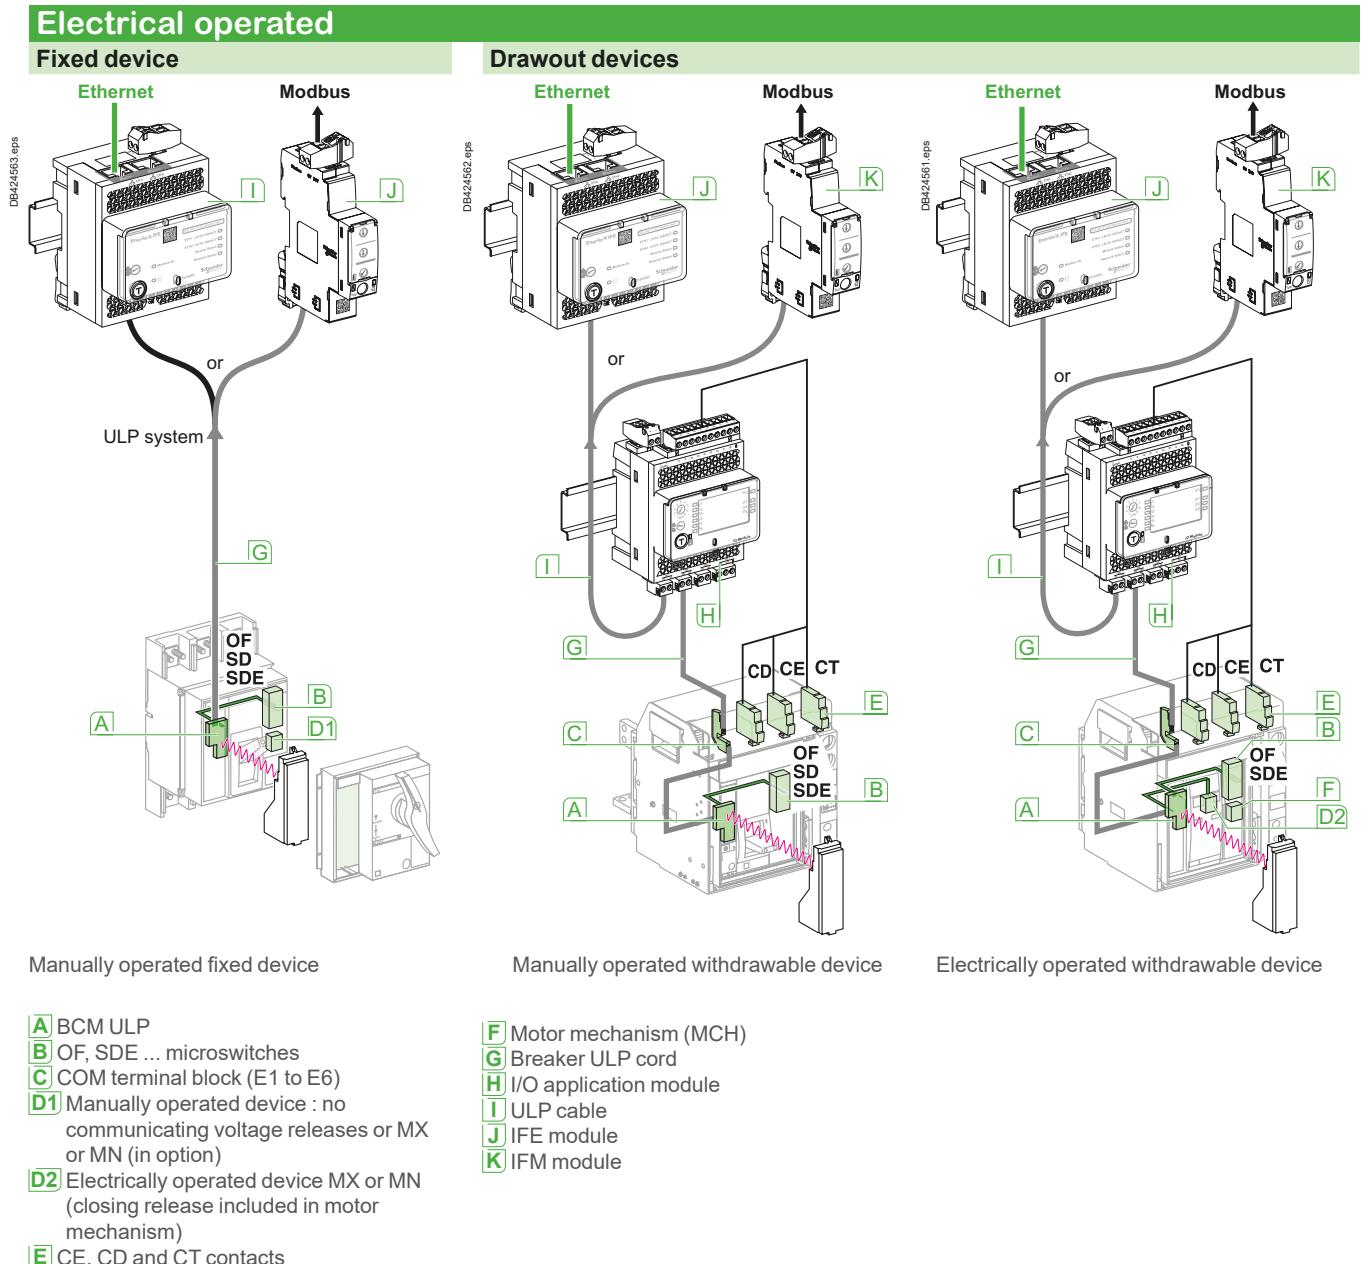

# Functions and characteristics IFE Ethernet interface

www.schneider-electric.com

A



IFE interface, ref.: LV434001



IFE interface + gateway, ref.: LV434002

## IFE interface, IFE interface + gateway description

### Introduction

The IFE interface and IFE interface + gateway enable LV circuit breakers as Masterpact, Compact NSX or Powerpact to be connected to an Ethernet network.

### IFE interface: ref. LV434001

Provides an Ethernet access to a single LV circuit breaker.

### Function

Interface - one circuit breaker is connected to the IFE interface via its ULP port.

### IFE interface + gateway: ref. LV434002

Provides an Ethernet access to one or several LV circuit breakers.

### Functions

- Interface - one circuit breaker is connected to the IFE interface via its ULP port.
- Gateway: several circuit breakers on a Modbus network are connected via the IFE interface + gateway master Modbus port.

### IFE interface, IFE interface + gateway features

- Dual 10/100 Mbps Ethernet port for simple daisy chain connection.
- Device profile web service for discovery of the IFE interface, IFE interface + gateway on the LAN.
- ULP compliant for localization of the IFE interface in the switchboard.
- Ethernet interface for Compact, Masterpact and Powerpact circuit breakers.
- Gateway for Modbus-SL connected devices (IFE interface + gateway only).
- Embedded set-up web pages.
- Embedded monitoring web pages.
- Embedded control web pages.
- Built-in e-mail alarm notification.

### Mounting

The IFE interface, IFE interface + gateway are DIN rail mounting devices. A stacking accessory enables the user to connect several IFMs (ULP to Modbus interfaces) to an IFE interface + gateway without additional wiring.

### 24 V DC power supply

The IFE interface, IFE interface + gateway must always be supplied with 24 V DC. The IFMs stacked to an IFE interface + gateway are supplied by the IFE interface + gateway, thus it is not necessary to supply them separately. It is recommended to use an UL listed and recognized limited voltage/limited current or a class 2 power supply with a 24 V DC, 3 A maximum.

### IFE interface, IFE interface + gateway firmware update

The firmware can be updated using:

- FTP
- customer engineering tool.

### Required circuit breaker communication modules

The connection to IFE interface or IFE interface + gateway requires a communication module embedded into the circuit breaker:

- Compact NS: BCM ULP communication module.
- Withdrawable Compact NS: BCM ULP and its respective I/O (Input/Output) application module. All connection configurations for Compact NS require the breaker ULP cord. The insulated NSX cord is mandatory for system voltages greater than 480 V AC. When the second ULP RJ45 connector is not used, it must be closed with an ULP terminator (TRV00880).

### Network communication interface

This screenshot shows the web-based configuration interface for the IFE/Gateway. It includes sections for 'Single Device Control', 'Breaker application', and 'IO application'. The 'Single Device Control' section shows various parameters like Date/Time, Min/Max, Peak Demand Current, and Accumulated Energy. The 'Breaker application' section shows the breaker status as 'Open' and the operation as 'Open.Close' via 'BCM ULP'. The 'IO application' section lists Reset Input Counters and Reset Output Counters.

Characteristic	Value
Type of interface module	Modbus RTU, RS485 serial connection Modbus TCP/IP Ethernet
Transmission	Modbus RS485 Ethernet
	Transfer rate: 9,600...19,200 Baud Medium Double shielded twisted pair Impedance 120 Ω Transfer rate : 10/100 Mbps Medium STP, Cat5e, straight cable
Structure	Type Method
Device type	Modbus Master Ethernet Server
Turnaround time	Modbus Ethernet
Maximum length of cable	Modbus Ethernet
Type of bus connector	Modbus Ethernet

### General characteristics

#### Environmental characteristics

Conforming to standards	UL 508, UL 60950, IEC 60950, 60947-6-2
Certification	cUIUs, GOST, FCC, CE
Ambient temperature	-20 to +70 °C (-4 to +158 °F)
Relative humidity	5–85 %
Level of pollution	Level 3
Flame resistance	ULV0

#### Mechanical characteristics

Shock resistance	1000 m/s <sup>2</sup>
Resistance to sinusoidal vibrations	-5 Hz < f < 8.4 Hz

#### Electrical characteristics

Resistance to electromagnetic discharge	Conforming to IEC/EN 61000-4-3
Immunity to radiated fields	10 V/m
Immunity to surges	Conforming to IEC/EN 61000-4-5
Consumption	120 mA at 24 V input

#### Physical characteristics

Dimensions	72 x 105 x 71 mm (2.83 x 4.13 x 2.79 in.)
Mounting	DIN rail
Weight	182.5 g (0.41 lb)
Degree of protection of the installed IO	<ul style="list-style-type: none"> <li>■ On the front panel (wall mounted enclosure): IP4x</li> <li>■ Connectors: IP2x</li> <li>■ Other parts: IP3x</li> </ul>
Connections	Screw type terminal blocks

#### Technical characteristics - 24 V DC power supply

Power supply type	Regulated switch type
Rated power	72 W
Input voltage	100–120 V AC for single phase 200–500 V AC phase-to-phase
PFC filter	With IEC 61000-3-2
Output voltage	24 V DC
Power supply out current	3 A

**Note:** it is recommended to use an UL listed/UL listed recognized limited voltage/Limited current or a class 2 power supply with a 24 V DC, 3 A maximum.

### IFE web page description

#### Monitoring web page

Real time data 67



Device logging



#### Control web page

Single device control



#### Diagnostics web page

Statistics



Device information



IMU information



Read device registers



Communication check



#### Maintenance web page

Maintenance log



Maintenance counters



#### Setup web page

Device localization/name



Ethernet configuration (dual port)



IP configuration



Modbus TCP/IP filtering



Serial port



Date and time



E-mail server configuration



Alarms to be e-mailed



Device list



Device logging



Device log export



SNMP parameters



Documentation links



Preferences






Advanced services control



User accounts



Web page access

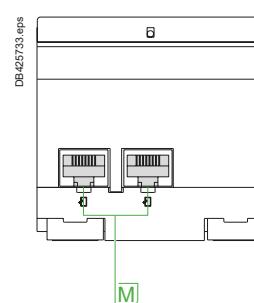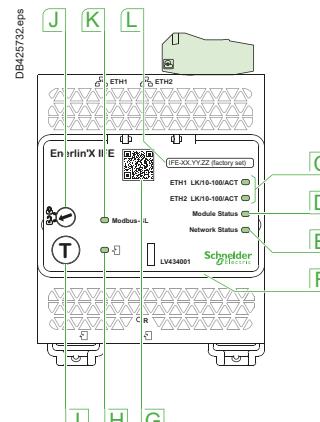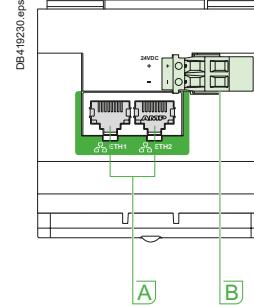

[A] Ethernet 1 and Ethernet 2 communication port.

[B] 24 V DC power supply terminal block.

[C] Ethernet communication LEDs:

yellow: 10 Mb

green: 100 Mb.

[D] Module status LED:

steady off: no power

steady green: device operational

steady red: major fault

flashing green: standby

flashing red: minor fault

flashing green/red: self-test.

[E] Network status LED:

steady off: no power/no valid IP address

steady green: connected, valid IP address

steady orange: default IP address

steady red: duplicated IP address

flashing green/red: self-test.

[F] Sealable transparent cover.

[G] QR code to product information.

[H] ULP status LED.

[I] Test button (with cover closed).

[J] Locking pad.

[K] Modbus traffic status LED (LV434002 only).

[L] Device name label.

[M] ULP ports.

A

# IFM Modbus communication interface

A



IFM Modbus communication interface.  
Ref.: LV434000.

## Function

IFM - Modbus communication interface - is required for connecting Masterpact or Compact NS and NSX to Modbus network whenever the circuit breaker has an ULP port (Universal Logic Plug). The port is available on BCM ULP for Masterpact range and BSCM module for Compact range.

**Note:** IFM is defined as an IMU (Intelligent Modular Unit) in the ULP connection System documentation.

Once connected to IFM, the circuit breaker is considered as a slave by the Modbus master. Its electrical values, alarm status, open/close signals can be monitored or controlled by a Programmable Logic Controller or any other system.

## Characteristics

### ULP port

2 RJ45 sockets, internal parallel wiring.

- Connection of a single circuit breaker (eventually via its I/O application module).
- An ULP line terminator or FDM121 display unit must be connected to the second RJ45 ULP socket.

The RJ45 sockets deliver a 24 V DC supply fed from the Modbus socket.


Built-in test function, for checking the correct connection to the circuit breaker and FDM121 display unit.

### Modbus slave port

- Modbus SL RJ45 port - RJ45 connector ensures fast and reliable wiring.
- Lateral socket, for Din-rail stackable connector.
- Both top and lateral sockets are internally parallel wired.
- Multiple IFM can be stacked, thus sharing a common power supply and Modbus line without individual wiring.
- On the front face:
  - Modbus address setting (1 to 99): 2 coded rotary switches
  - Modbus locking pad: enables or disable the circuit breaker remote control and modification of IFM parameters.
  - Self adjusting communication format (Baud rate, parity).

### 24 V DC power supply

- Screw clamp terminal block
- High electrical insulation between Modbus and 24 V DC connectors + separated lines ensure improved communication robustness.

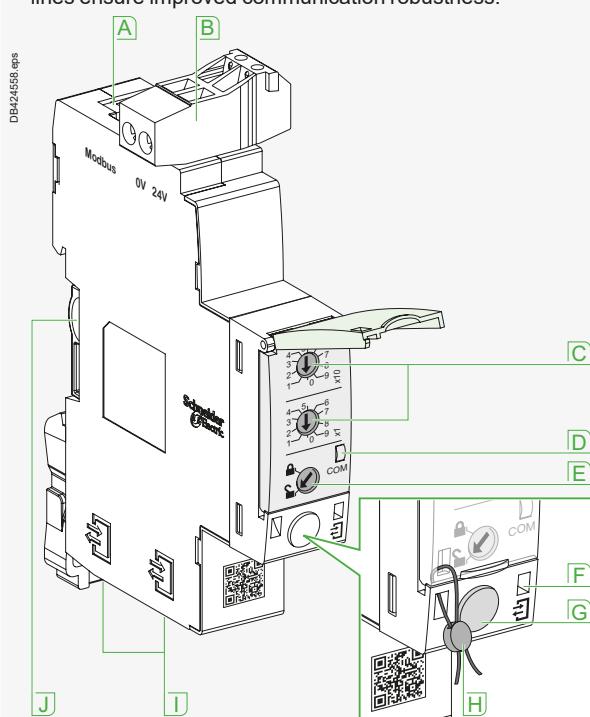

**A** Modbus SL RJ45 port.

**B** 0-24 V DC power supply.

**C** Modbus address switches.

**D** Modbus traffic LED.

**E** Modbus locking pad.

**F** ULP activity LED.

**G** Test button.

**H** Mechanical lock.

**I** ULP RJ45 connectors.

**J** Stacking accessory connection.

# IFM Modbus communication interface

A

## Technical characteristics

### IFM Modbus communication interface


Dimensions	18 x 73 x 90 mm
Maximum number of stacked IFM	12
Degree of protection of the installed module	Part projecting beyond the escutcheon IP4x Other module parts IP3x Connectors IP2x
Operating temperature	-25...+70 °C
Power supply voltage	24 V DC -20 %/+10 % (19.2...26.4 V DC)
Consumption	Typical 21 mA/24 V DC at 20 °C Maximum 30 mA/19.2 V DC at 60 °C

### Certification


CE	IEC/EN 60947-1
UL	UL 508 - Industrial Control Equipment
CSA	No. 142-M1987 - Process Control Equipment ■ CAN/CSA C22.2 No. 0-M91 - General requirements - Canadian Electrical Code Part ■ CAN/CSA C22.2 No. 14-05 - Industrial Control Equipment

## Recommended IFM installation

### Stacking IFM


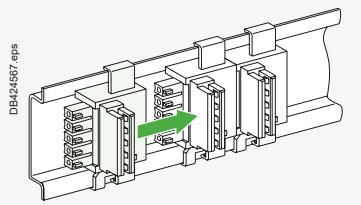


Stacking accessories

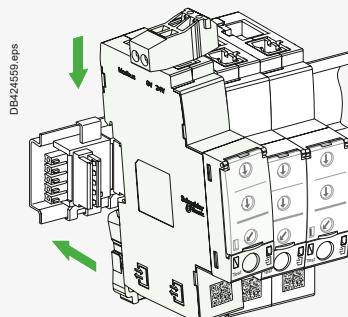

Up to 12 stacked IFM


### Stacking an IFE interface + gateway with IFM

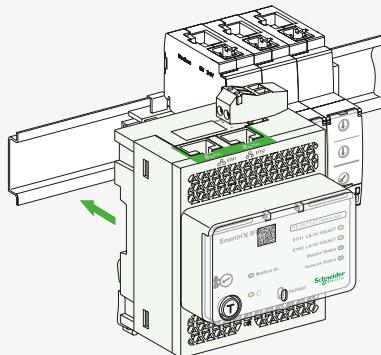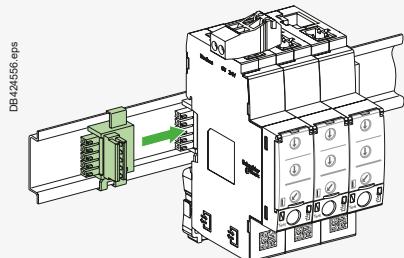

# Connection of the IFE to a fixed or drawout Compact NS


A

**Connect the IFE to a fixed manual operated Compact NS or circuit breaker using the breaker ULP cord**

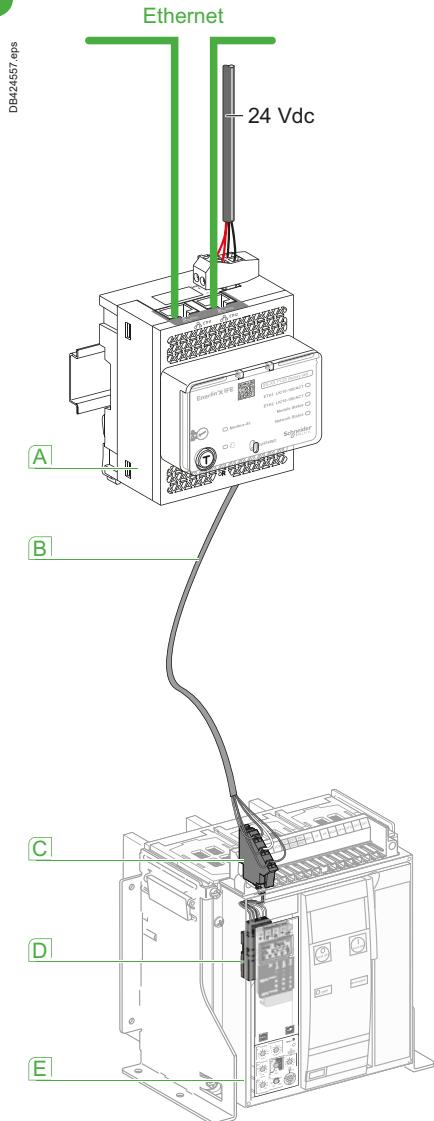

- [A] IFE Ethernet interface for LV circuit breaker
- [B] Breaker ULP cord
- [C] Fixed terminal block
- [D] BCM ULP communication module
- [E] Fixed electrically operated circuit breaker

**Connect the IFE to a drawout Compact NS or circuit breaker using the breaker ULP cord**

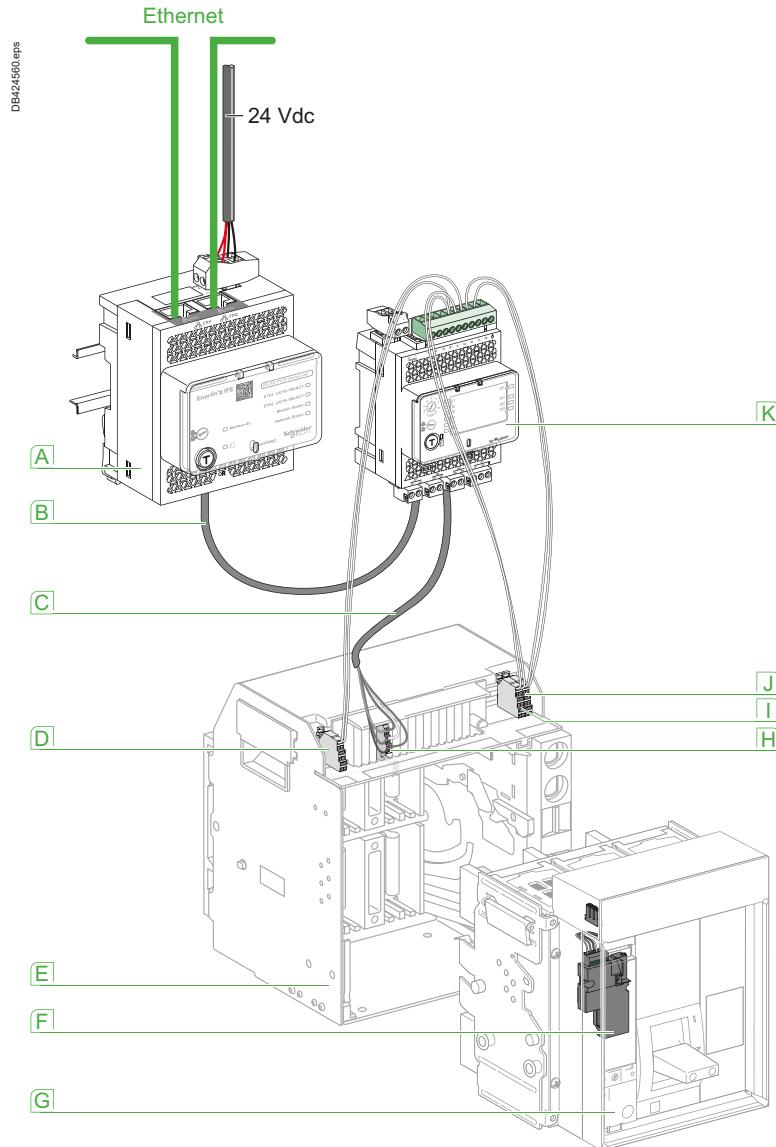

- [A] IFE Ethernet interface for LV circuit breaker
- [B] ULP cable
- [C] Breaker ULP cord
- [D] Circuit breaker disconnected position contact (CD)
- [E] Circuit breaker cradle
- [F] BCM ULP communication module
- [G] Drawout circuit breaker
- [H] Drawout terminal block
- [I] Circuit breaker connected position contact (CE)
- [J] Circuit breaker test position contact (CT)
- [K] I/O (Input/Output) application module for LV circuit breaker

# Connection of the IFM to a fixed or drawout Compact NS

## Modbus interface module IFM

### Functions

This module, required for connection to the network, contains the Modbus address (1 to 99) declared by the user via the two dials in front. It automatically adapts (baud rate, parity) to the Modbus network in which it is installed.


It is equipped with a lock-out switch to enable or disable operations involving writing to Micrologic, i.e. reset, counter reset, setting modifications, device opening and closing commands, etc.

There is a built-in test function to check the connections of the Modbus interface module with the Micrologic and FDM121 display unit.


### Mounting

The module is mounted on a DIN rail. A number of modules may be clipped one next to the other. For this, a stacking accessory is available for fast clip-connection of both the Modbus link and the 24 V DC supply.

The Modbus interface module supplies 24 V DC to the corresponding Micrologic, FDM121 display and BSCM module. Module consumption is 60 mA / 24 V DC.

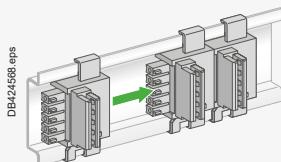


Mounting with stacking accessory.

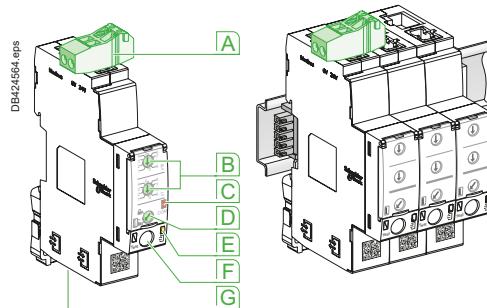


- A Five-point Modbus and 24 V DC connector
- B Two Modbus address dials (1 to 99)
- C Modbus traffic LED
- D Lock-out to disable writing to the NSX
- E Test LED
- F Test button
- G Two connectors for RJ45 cable

### Connect the IFM to a fixed manual operated Compact NS or circuit breaker using the breaker ULP cord

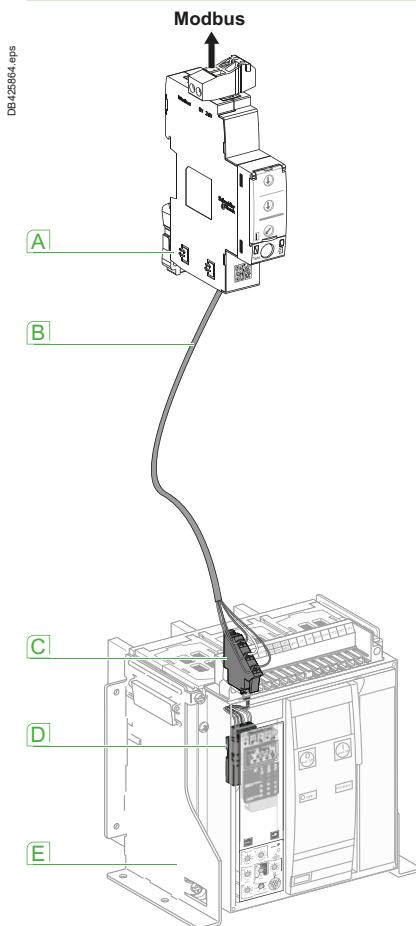



- A IFM Ethernet interface for LV circuit breaker
- B Breaker ULP cord
- C Fixed terminal block
- D BCM ULP communication module
- E Fixed electrically operated circuit breaker

### Connect the IFM to a drawout Compact NS or circuit breaker using the breaker ULP cord

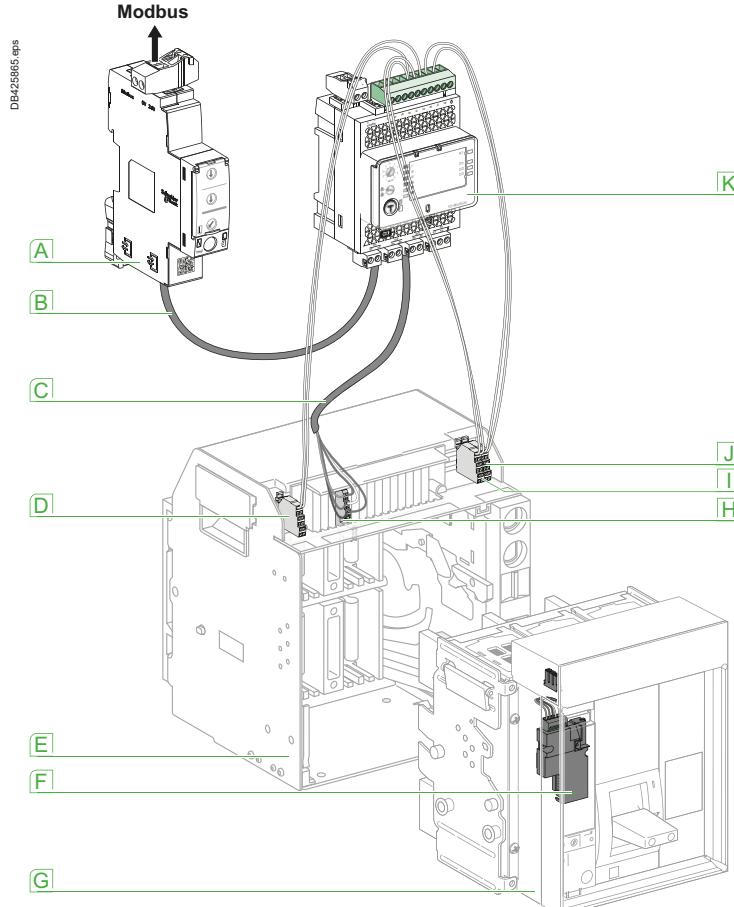

- A IFM Ethernet interface for LV circuit breaker
- B ULP cable
- C Breaker ULP cord
- D Circuit breaker disconnected position contact (CD)
- E Circuit breaker cradle
- F BCM ULP communication module
- G Drawout circuit breaker
- H Drawout terminal block
- I Circuit breaker connected position contact (CE)
- J Circuit breaker test position contact (CT)
- K I/O (Input/Output) application module for LV circuit breaker

# I/O application module

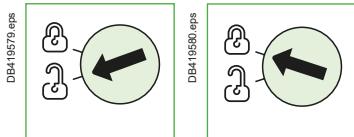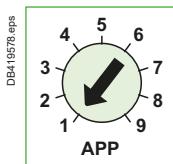

## I/O application module description

### Description

The I/O (Input/Output) application module for LV breaker is part of an ULP system with built-in functionalities and applications to enhance the application needs. The ULP system architecture can be built without any restrictions using the wide range of circuit breakers.

The I/O application module is compliant with the ULP system specifications. Two I/O application module can be connected in the same ULP network.

The ranges of LV circuit breakers enhanced by the I/O application module are:

- Masterpact
- Compact NS1600b-3200
- Compact NS630b-1600
- Compact NSX100-630 A.

### I/O (Input/Output) application module for LV breaker resources

The I/O application module module ressources are:

- 6 digital inputs that are self powered for either NO and NC dry contact or pulse counter
- 3 digital outputs that are bistable relay (5 A maximum)
- 1 analog input for Pt100 temperature sensor.

### Pre-defined applications

Pre-defined application adds new functions to the IMU in a simple way:

- selection by the application rotary switch on the I/O application module, defining the application with pre-defined input/output assignment and wiring diagram.
- no additional setting with the customer engineering tool required.

The resources not assigned to the pre-defined application are free for additional user-defined applications:

- cradle management
- breaker operation
- light and load control
- custom.

### User-defined applications

User-defined applications are processed by the I/O application module in addition to the pre-defined application selected.

The user-defined applications are available depending on:

- the pre-defined application selected
- the I/O application module resources (inputs and outputs) not used by the application.

The resources required by user-defined applications are assigned using the customer engineering tool:

- protection
- control
- energy management
- monitoring.

### Mounting

The I/O application module is a DIN rail mounting device.

### Application rotary switch

The application rotary switch enables the selection of the pre-defined application.

It has 9 positions and each position is assigned to a pre-defined application.

The factory set position of the switch is pre-defined application 1.

### Setting locking pad

The setting locking pad on the front panel of the I/O application module enables the setting of the I/O application module by the customer engineering tool.

A

### General characteristics

#### Environmental characteristics

Conforming to standards	UL 508, UL 60950, IED 60950, 60947-6-2
Certification	cUIUs, GOST, FCC, CE
Ambient temperature	-20 to +70 °C (-4 to +158 °F)
Relative humidity	5–85 %
Level of pollution	Level 3
Flame resistance	ULV0

#### Mechanical characteristics

Shock resistance	1000 m/s <sup>2</sup>
Resistance to sinusoidal vibrations	-5 Hz < f < 8.4 Hz

#### Electrical characteristics

Resistance to electromagnetic discharge	Conforming to IEC/EN 61000-4-3
Immunity to radiated fields	10 V/m
Immunity to surges	Conforming to IEC/EN 61000-4-5
Consumption	165 mA

#### Physical characteristics

Dimensions	71.7 x 116 x 70.6 mm (2.83 x 4.56 x 2.78 in.)
Mounting	DIN rail
Weight	229.5 g (0.51 lb)
Degree of protection of the installed I/O application module	On the front panel (wall mounted enclosure): IP4x IO parts: IP3x Connectors: IP2x
Connections	Screw type terminal blocks

#### Technical characteristics - 24 V DC power supply

Power supply type	Regulated switch type
Rated power	72 W
Input voltage	100–120 V AC for single phase 200–500 V AC phase-to-phase
PFC filter	With IEC 61000-3-2
Output voltage	24 V DC
Power supply out current	3 A

**Note:** it is recommended to use an UL listed/UL listed recognized limited voltage/Limited current or a class 2 power supply with a 24 V DC, 3 A maximum.

#### Digital inputs

Digital input type	Self powered digital input with current limitations as per IEC 61131-2 type 2 standards (7 mA)
Input limit values at state 1 (close)	19.8–25.2 V DC, 6.1–8.8 mA
Input limit values at state 0 (open)	0–19.8 V DC, 0 mA
Maximum cable length	10 m (33 ft)

**Note:** for a length greater than 10 m (33 ft) and up to 300 m (1,000 ft), it is mandatory to use a shielded twisted cable. The shield cable is connected to the I/O functional ground of the I/O application module.




#### Digital outputs

Digital output type	Bistable relay
Rated load	5 A at 250 V AC
Rated carry current	5 A
Maximum switching voltage	380 V AC, 125 V DC
Maximum switch current	5 A
Maximum switching power	1250 VA, 150 W
Minimum permissible load	10 mA at 5 V DC
Contact resistance	30 mΩ
Maximum operating frequency	18000 operations/hr (Mechanical) 1800 operations/hr (Electrical)
Digital output relay protection by an external fuse	External fuse of 5 A or less
Maximum cable length	10 m (33 ft)

#### Analog inputs

The I/O application module analog input can be connected to a Pt100 temperature sensor

Range	-30 to 200 °C	-22 to 392 °F
Accuracy	±2 °C from -30 to 20 °C	±3.6 °F from -22 to 68 °F
	±1 °C from 20 to 140 °C	±1.8 °F from 68 to 284 °F
Refresh interval	±2 °C from 140 to 200 °C	±3.6 °F from 284 to 392 °F


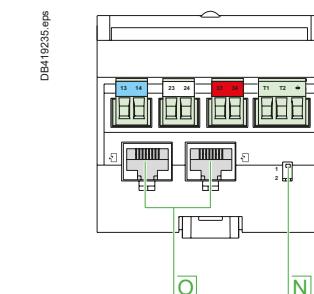
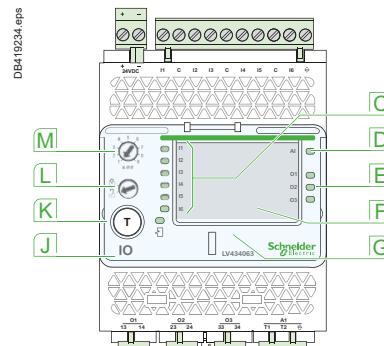
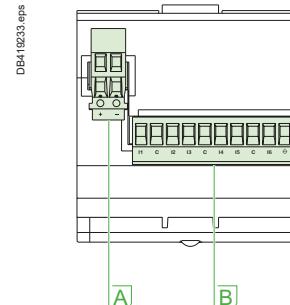


- [A] 24 V DC power supply terminal block.
- [B] Digital input terminal block: 6 inputs, 3 commons and 1 shield.
- [C] 6 input status LEDs.
- [D] Analog input status LED.
- [E] 3 output status LEDs.
- [F] I/O application module identification labels.
- [G] Sealable transparent cover.
- [H] Analog input terminal block.
- [I] Digital output terminal blocks.
- [J] ULP status LED.
- [K] Test/reset button (accessible with cover closed).
- [L] Setting locking pad.
- [M] Application rotary switch: 1 to 9.
- [N] Switch for I/O addressing (I/O 1 or I/O 2).
- [O] ULP connectors.

[1] 250 V AC OVC 2 according IEC/EN 60947-2 .  
For OVC 3 and 4 surge arresters are required on the polarizing voltage of the output contacts.

# Electrical Asset Manager Configuration Engineering tool

A

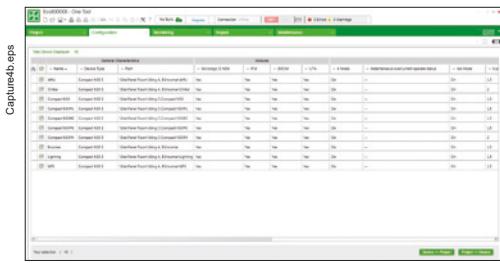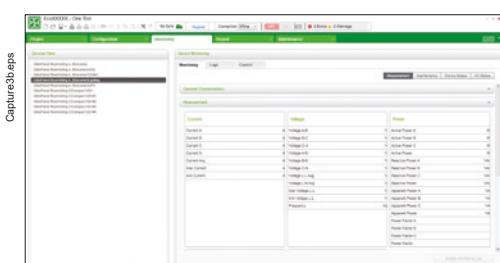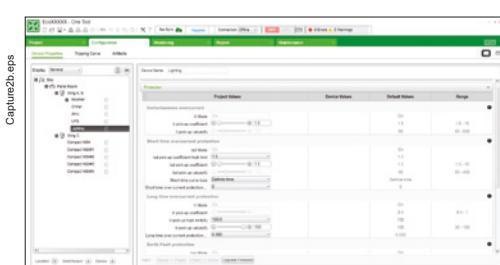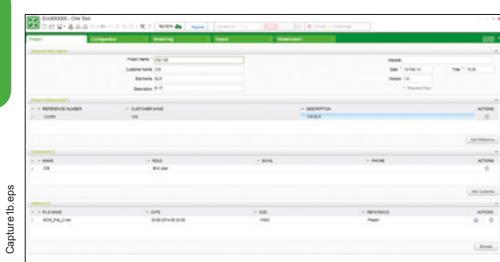

## Introduction

Electrical Asset Manager is a software application that helps the user to manage a project as part of designing, testing, site commissioning, and maintenance of the project life cycle.

It enables the user to prepare the settings of the devices offline (without connecting to the device) and configure them when connected with the devices.

Also it provides lot of other value added features for the user to manage the project such as, safe repository in cloud, attach artifacts to each device or at the project level, organize devices in switchboard wise, manage a hierarchical structure of the installation etc.

## Compatible devices (configuration and device management)

Electrical Asset Manager is compatible with the following devices:

- Compact NSX100-630 (IEC)
- PowerPact™ (UL) circuit breaker
- Compact NS630b-3200 (IEC)
- Masterpact (IEC and UL) circuit breaker
- Acti9 Smartlink.
- Compatible devices (Device Management in the project)
- Switch disconnectors (Compact NSX, Masterpact & PowerPact Family)
- Third party devices.

## References:

Electrical Asset Manager software package can be downloaded from our website [www.schneider-electric.com](http://www.schneider-electric.com).

## Features

Electrical Asset Manager supersedes the Schneider Electric customer engineering tools such as Remote setting Utility (RSU) and Remote Control Utility (RCU) with additional features.

Electrical Asset Manager supports the connection of Schneider Electric communicable devices to:

- create projects by device discovery, selection of devices, and import Bill of Material (BOM)
- monitor the status of protection and I/O status
- read information (alarms, measurements, parameters)
- check protection discrimination between two devices
- upload and download of configuration or settings in batch mode to multiple devices.
- carry out commands and tests
- generate and print device settings report and communication test report
- manage multiple devices with electrical and communication hierarchy model
- manage artifacts (project documents)
- check consistency in settings between devices on a communication network
- compare configuration settings between PC and device (online)
- download latest firmware.

Electrical Asset Manager enables the user to avail the advanced features of the software once the project is saved in Schneider Electric cloud.

# Electrical Asset Manager Configuration Engineering tool

## Functions

### Offline Mode

A project can be built in offline mode through 2 different ways:

- through BOM file import
- through Device Selection.

Additionally, the user can open an existing project and modify the settings offline. The user can do the discrimination curve check and firmware compatibility check for devices in the project.

### Online Mode

A project can be built in online mode through device discovery also other than the methods possible through offline method.


Once the project is built, the following functions can be performed in addition to the functions available in offline mode:

- compare the device parameters with project parameters
- load parameters from project to the device and vice versa
- firmware downloads to the device
- monitor the measurement, maintenance, device status and I/O status
- control functions.

### User Interface


Electrical Asset Manager software provides fast direct access to the project and the devices in the project through different tabs.

- Project: to provide the project information including customer details, project references and to add project artifacts (documents related to the project).
- Configuration: to build up the tree structure of the project architecture ; to have a table view of the devices added in the project ; to set the parameters of the devices ; to transfer the device settings ; to view the tripping curves; to attach device artifacts and to download the latest firmware, to do the communication test for all the devices and generate the test report.
- Monitoring: this allows the user to monitor the real time values of different devices through different sub tabs namely Monitoring, Logs and Control.
- Reports: report tab allows you to generate and print a report of the project settings from the report tab. The user details and project characteristics are automatically filled with the details entered in the Project page.

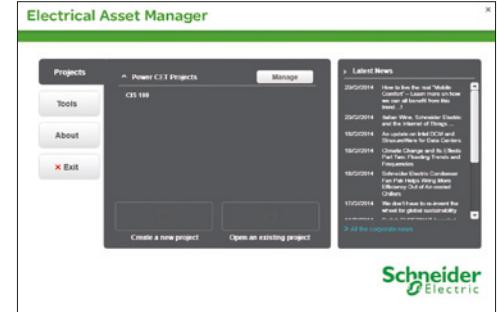


A


Capture5b.eps

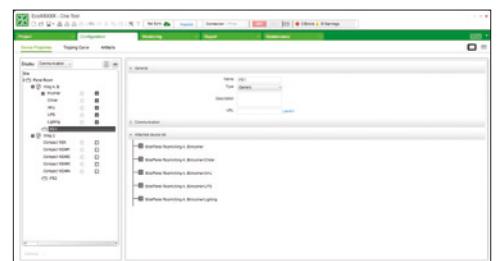

Capture6b.eps

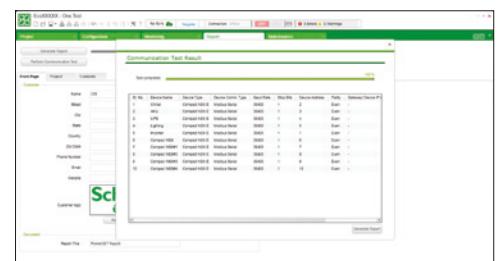

Capture7b.eps

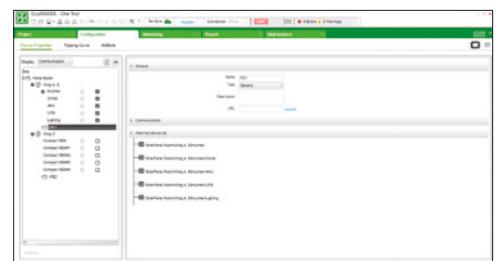


Capture8b.eps

# Motor protection

## Overview of solutions

A

The circuit breakers presented here provide protection against short circuits and are suitable for isolation as defined by standard IEC 60947-2. For complete protection of the motor and its control device, overload protection may be provided by either the circuit breaker or a separate Schneider Electric thermal relay. The control device may be of the direct on-line type (with or without reversing) or of the "star-delta" type. Combinations are governed by standard IEC 60947-4.1.

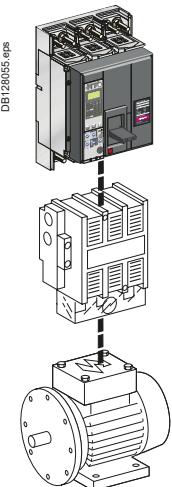

### Motor protection up to 750 kW

**Motor rating (kW)** 160...750

**Compact** NS630b to 1600



Breaking capacity (kA rms)  
380/415 V      N 50  
H 70  
L 150

#### General circuit breaker characteristics

**page A-12**

Compact NS630b to 1600 circuit breakers equipped with Micrologic control units are the same as those for distribution systems.

#### Accompanying control units

**page A-20**

Micrologic electronic control units may be used on all Compact NS630b to 1600 circuit breakers.  
Micrologic 2.0 A and 5.0 A electronic control units provide protection against short-circuits and overloads.  
Micrologic 7.0 A provides the same protection functions, plus earth-leakage protection.

#### Protection coordination (as defined by IEC 60947-4)

Whatever the power of the motor, the coordination between the circuit breaker, contactor and relay can be of either type 1 or 2.

Selection depends on operational requirements concerning continuity of service and the technical skills of servicing personnel.

All type 2 have been tested under the conditions defined by standards and they are certified ASEFA/LOVAG.

#### Selection of a trip unit or Micrologic control unit

P (kW) (400 V, 50 Hz)	0.37	1.1	5.5	18.5	37	110	160	250	560	750
Ir (A)	1.5	2.5	12	40	50	80	100	160	200	220
Compact NS630b ... NS1600										

Micrologic 2.0 A / 5.0 A / 6.0 A / 7.0 A  
Micrologic 2.0 E / 5.0 E / 6.0 E

Earth-leakage protection is obtained by:

- installing a Micrologic 7.0 A control unit (Compact NS630b to 3200).
- using a Vigirex relay and separate sensors (all Compact circuit breakers).

## Circuit breakers equipped with a control unit offering integrated earth-leakage protection and an external rectangular sensor

### Rated current (A)

630...1600

Compact NS630b to 1000 N/L  
NS1250 and 1600 N



1600...3200

Compact NS1600b to 3200



PB10434\_ME.eps

PB10433\_1\_ME.eps

PB10435\_ME.eps

### General circuit breaker characteristics

[page A-12](#)

Compact NS630b to 3200 circuit breakers are presented in the "Protection of distribution systems" section.

### Accompanying control units

[page A-22](#)

Micrologic 7.0 A electronic control units offer earth-leakage protection as standard.

## Earth-leakage protection using a Vigirex relay

### Earth-leakage relay



### Separate toroids



### Rectangular sensors



PB10435-16\_SE.eps

059476\_SE.eps

### Compact circuit breaker + Vigirex relay combination

Vigirex relays may be used to add external earth-leakage protection to Compact NS circuit breakers. The circuit breakers must be equipped with an MN or MX voltage release. Vigirex relays are very useful when special time-delay or tripping-threshold values are required, or when there are major installation constraints (circuit breaker already installed and connected, limited space available, etc.).

#### Vigirex-relay characteristics:

- rectangular sensors up to 3200 A
- 50/60/400 Hz distribution systems.

#### Options:


- trip alarm by a fail-safe contact
- pre-alarm LED and contact, etc.

#### Compliance with standards:


- IEC 60947-2, annex M
- IEC/EN 60755: general requirements for residual current operated protective devices
- IEC/EN 6100-4-2 to 4-6: immunity tests
- CISPR11: radio-frequency radiated and conducted emission tests
- UL1053 and CSA22.2 No. 144 for RH10, RH21 and RH99 relays at supply voltages up to and including 220/240 V.

# Control and isolation

## Overview of solutions

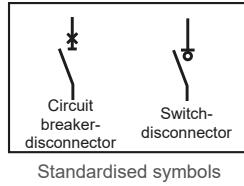

Standardised symbols

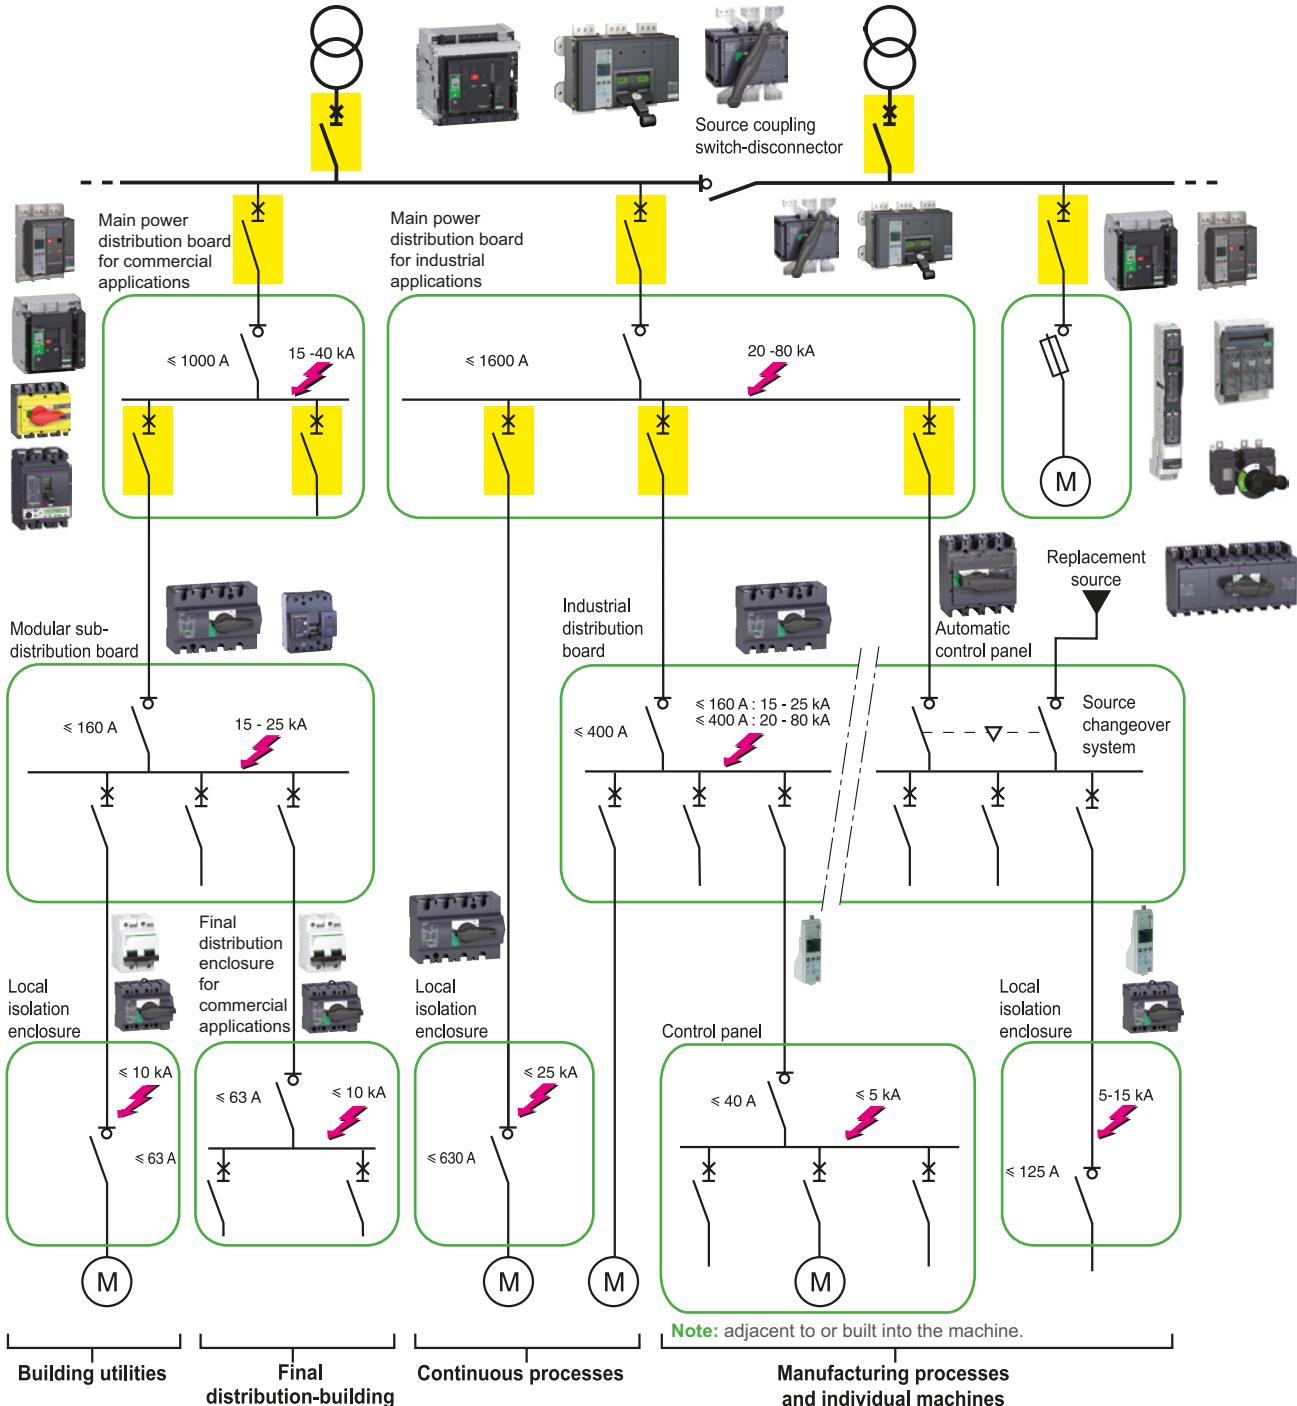

## LV devices



A

Compact switch-disconnectors are used to control and isolate electrical distribution circuits. In addition to these basic functions, other functions for safety, remote control and convenience include:

- earth-leakage protection
- auxiliary MN/MX releases
- remote operation.

Compact switch-disconnectors may be interlocked with another Compact switch-disconnector or circuit breaker to constitute a source-changeover system.

PB104837.eps



Compact NS1600NA manual switch-disconnector.

PB108359.eps



Compact NS1600NA electrical switch-disconnector.

# Control and disconnection

## Compact NS630bNA to 1600NA switch-disconnectors

Installation standards require upstream protection.

A



Compact NS1600NA manual switch-disconnector.



Compact NS1600NA electrical switch-disconnector.

### Compact switch-disconnectors

Number of poles		
Control	manual	toggle direct or extended rotary handle
Connections	fixed	front connection rear connection
	withdrawable (on chassis)	front connection rear connection

### Electrical characteristics as per IEC 60947-3 and EN 60947-3

Conventional thermal current (A)	<b>I<sub>th</sub></b>	60 °C
Rated insulation voltage (V)	<b>U<sub>i</sub></b>	
Rated impulse withstand voltage (kV)	<b>U<sub>imp</sub></b>	
Rated operational voltage (V)	<b>U<sub>e</sub></b>	AC 50/60 Hz
Rated operational current	<b>I<sub>e</sub></b>	AC 50/60 Hz
		220/240 V
		380/415 V
		440/480 V
		500/525 V
		660/690 V

Short-circuit making capacity	<b>I<sub>cm</sub></b>	(kA peak)
Short-time withstand current	<b>I<sub>cw</sub></b>	(kA rms) 0.5 s 20 s
Suitability for isolation		
Durability (C-O cycles)	mechanical	
	electrical	AC 440 V AC23A/In

### Positive contact indication

### Pollution degree

### Protection

Add-on earth-leakage protection combination with Vigirex relay

### Additional indication and control auxiliaries

#### Indication contacts

Voltage releases	MX shunt release
	MN undervoltage release

### Remote communication by bus

Device status indications (communicating auxiliary contacts)

Device remote operation (communicating motor mechanism)

### Installation

Accessories	terminal extensions and spreaders terminal shields and interphase barriers escutcheons
Dimensions (mm)	fixed 3P
W x H x D	4P
Weight (kg)	fixed 3P 4P

### Source-changeover system (see section "on source-changeover systems")

Manual source-changeover systems, remote-operated and automatic

## Control and disconnection

## Compact NS630bNA to 1600NA switch-disconnectors

A

<b>NS630bNA</b>	<b>NS800NA</b>	<b>NS1000NA</b>	<b>NS1250NA</b>	<b>NS1600NA</b>
3, 4	3, 4	3, 4	3, 4	3, 4
●	●	●	●	●
●	●	●	●	●
●	●	●	●	●
●	●	●	●	●
●	●	●	●	●
●	●	●	●	●
●	●	●	●	●
<b>630</b>	<b>800</b>	<b>1000</b>	<b>1250</b>	<b>1600</b>
800	800	800	800	800
8	8	8	8	8
690	690	690	690	690
AC23A	AC23A	AC23A	AC23A	AC23A
630	800	1000	1250	1600
630	800	1000	1250	1600
630	800	1000	1250	1600
630	800	1000	1250	1600
630	800	1000	1250	1600
52	52	52	52	52
25	25	25	25	25
4	4	4	4	4
●	●	●	●	●
10000	10000	10000	10000	10000
2000	2000	2000	2000	1000
●	●	●	●	●
3	3	3	3	3
●				
●				
●				
●				
●				
●				
●				
●				
327 x 210 x 147				
327 x 280 x 147				
14				
18				
●				

# Control and disconnection

## Compact NS1600bNA to 3200NA switch-disconnectors

A

Installation standards require upstream protection. However, Compact NS1600b to 3200NA switch-disconnectors are self-protected for all currents higher than 130 kA peak.



Compact NS2000NA.

### Compact switch-disconnectors

#### Number of poles

Control	manual	toggle direct or extended rotary handle
	electric	
Connections	fixed	front connection rear connection
	withdrawable (on chassis)	front connection rear connection

### Electrical characteristics as per IEC 60947-3 and EN 60947-3

Conventional thermal current (A)	I <sub>th</sub>	60 °C
Rated insulation voltage (V)	U <sub>i</sub>	
Rated impulse withstand voltage (kV)	U <sub>imp</sub>	
Rated operational voltage (V)	U <sub>e</sub>	AC 50/60 Hz
Rated operational current	I <sub>e</sub>	AC 50/60 Hz 220/240 V 380/415 V 440/480 V 500/525 V 660/690 V

Short-circuit making capacity	I <sub>cm</sub>	(kA peak)
Short-time withstand current	I <sub>cw</sub>	(kA rms) 3 s

Integrated instantaneous protection (kA peak ±10 %)

Suitability for isolation

Durability (C-O cycles)	mechanical	
	electrical	AC 440 V AC23A/In

Positive contact indication

Pollution degree

### Protection

Add-on earth-leakage protection combination with Vigirex relay

### Additional indication and control auxiliaries

Indication contacts

Voltage releases MX shunt release

MN undervoltage release

### Installation

Accessories escutcheons

Dimensions (mm) fixed 3P

W x H x D 4P

Weight (kg) fixed 3P

4P

### Source-changeover system (see section "on source-changeover systems")

Manual source-changeover systems, remote-operated and automatic

## Control and disconnection

## Compact NS1600bNA to 3200NA switch-disconnectors

A

NS1600bNA	NS2000NA	NS2500NA	NS3200NA
3, 4	3, 4	3, 4	3, 4
●	●	●	●
-	-	-	-
-	-	-	-
●	●	●	●
-	-	-	-
-	-	-	-
-	-	-	-
1600	2000	2500	3200
800	800	800	800
8	8	8	8
690	690	690	690
AC23A	AC23A	AC23A	AC23A
1600	2000	2500	3200
1600	2000	2500	3200
1600	2000	2500	3200
1600	2000	2500	3200
1600	2000	2500	3200
135	135	135	135
32	32	32	32
130	130	130	130
●	●	●	●
6000	6000	6000	6000
1000	1000	1000	1000
●	●	●	●
3	3	3	3
●			
●			
●			
●			
350 x 420 x 160			
350 x 535 x 160			
23			
36			
-			

# Source-changeover systems

## Presentation

A



Some installations use two supply sources to counter the temporary loss of the main supply.

A source-changeover system is required to safely switch between the two sources. The replacement source can be a generator set or another network.

### Manual source-changeover system or : Manual Transfer Switching Equipment

The simplest way to switch the load. It is controlled manually by an operator. The time required to switch from the S1 source to S2 source is variable.

#### System

2 or 3 mechanically interlocked circuit breakers or 2 switch-disconnectors.

#### Applications

Small commercial buildings and small and medium industrial activities where the need for continuity of service is significant but not a priority.



### Automatic source-changeover system or : Automatic Transfer Switching Equipment

An automatic controller may be added to a remote operated source-changeover system. It is possible to automatically control source transfer according to programmed (dedicated controllers) or programmable (PLC) operating modes. These solutions ensure optimum energy management.

The time required to switch from the S1 source to S2 source is fixed.

#### System

2 or 3 circuit breakers linked by an electrical interlocking system. A mechanical interlocking system protects also against incorrect manual operations, with an automatic control system (dedicated controllers).

#### Applications

Large infrastructures, industry, critical buildings & process where the continuity of service is a priority.



### Remote source-changeover system or : Remote Transfer Switching Equipment

In this case, no direct human intervention is required. The time required to switch from the S1 source to S2 source is fixed.

#### System

2 or 3 circuit breakers linked by an electrical interlocking system. A mechanical interlocking system protects also against incorrect manual operations. In this case is necessary to add a PLC controller not dedicated for source-changeover application.

#### Applications

Industry & Infrastructure where continuity of service requirements are meaningful but not a priority.

# Source-changeover systems

## Manual source-changeover systems

A manual source-changeover system can be installed on two to three manually-operated circuit breakers or switch-disconnectors. Interlocking is mechanical. Interlocks prevent connection to both sources at the same time, even momentarily.

A

### Interlocking of two devices with rotary handles

The rotary handles are padlocked with the devices in the OFF position. The mechanism inhibits the two devices being closed at the same time, but does allow for both to be open (OFF) at the same time.

#### Combinations of "Normal" and "Replacement" devices

All Compact NS630b to 1600 circuit breakers and switch-disconnectors with rotary handles can be interlocked.

Interlocking of a Compact NS630b with a Compact NS630b to 1600 is not possible.

#### Interlocking of a number of devices using keylocks (captive keys)

Interlocking uses two identical keylocks with a single key. This solution enables interlocking between two devices that are physically distant or that have significantly different characteristics, for example between a low and a medium-voltage device, or between Compact NS circuit breakers and switch-disconnectors. A system of wall-mounted units with captive keys makes possible a large number of combinations between many devices.

#### Combinations of Normal and Replacement devices

All Compact NS630b to 1600 circuit breakers and switch-disconnectors with rotary handles or motor mechanisms can be interlocked.

### Interlocking of two Compact NS630b to 1600 devices using connecting rods

The two devices must be mounted one above the other (either 2 fixed or 2 withdrawable/drawout devices).

#### Installation

This function requires:

- an adaptation fixture on the right side of each circuit breaker or switch-disconnector
- a set of connecting rods with no-slip adjustments.

The adaptation fixtures, connecting rods and circuit breakers or switch-disconnectors are supplied separately, ready for assembly by the customer.

The maximum vertical distance between the fixing planes is 900 mm.

#### Possible combinations of "S1" and "S2" source circuit breakers

Combinations are possible between Compact devices and between Compact NS devices with Masterpact MTZ devices.

### Interlocking of two Compact NS630b to 1600 devices using cables

For cable interlocking, the circuit breakers may be mounted one above the other or side-by-side.

The interlocked devices may be fixed or drawout, three-pole or four-pole, and have different ratings and sizes.

#### Installation

This function requires:

- an adaptation fixture on the right side of each device
- a set of cables with no-slip adjustments.

The maximum distance between the fixing planes (vertical or horizontal) is 2000 mm.

PB113831.eps




Interlocking with keylocks.

PB113832.eps




Interlocking of two devices with rotary handles.

DB128465.eps

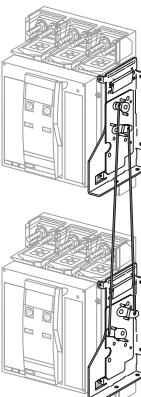

Interlocking with connecting rods.

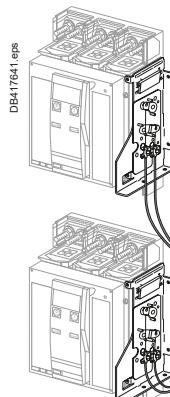

Interlocking with cables.

### Possible combinations of "S1" and "S2" source circuit breakers

Source "S1"	Source "S2"			
NS630b to NS1600	NS630b to NS1600	NT06 to NT16	NW08 to NW40	NW40b to NW63
NS630b to NS1600	NS630b to NS1600	NS630b to NS1600	NS630b to NS1600	-

# Electrical interlocking

## IVE unit

A

Electrical interlocking is used with a mechanical interlocking system. Moreover, the relays controlling the closing order to the "S1" and "S2" circuit breakers must be mechanically and/or electrically interlocked to prevent them from giving simultaneous closing commands.

Electrical interlocking is carried out by an electrical control device.

For Compact NS630b to NS1600, this function can be implemented in one of two ways:

- using the IVE unit
- by an electrician based on the diagrams in accordance with the chapter "Electric diagrams" source-changeover system.

### Characteristics of the IVE unit

- External connection terminal block:
- inputs: circuit breaker control signals
- outputs: status of the SDE contacts on the "S1" and "S2" source circuit breakers.
- 2 connectors for the two "S1" and "S2" source circuit breakers:
- inputs:
  - status of the OF contacts on each circuit breaker (ON or OFF)
  - status of the SDE contacts on the "S1" and "S2" source circuit breakers
- outputs: power supply for operating mechanisms.
- Control voltage:
- 24 to 250 V DC
- 48 to 415 V 50/60 Hz - 440 V 60 Hz.

The IVE unit control voltage must be same as that of the circuit breaker operating mechanisms.



PB104831\_ME.eps



PG134080\_150.eps

IVE unit.

**For Compact NS630b to NS1600, each circuit breaker must be equipped with:**

- a motor mechanism
- an available OF contact
- a CE connected-position contact (carriage switch) on withdrawable circuit breakers
- an SDE contact.

### Standard configuration for Compact NS

Types of mechanical interlocking	Possible combinations	Typical electrical diagrams	Diagram no.
<b>2 devices</b>			
	QN 0      QR 0	Compact NS630b to 1600: ■ electrical interlocking with lockout after fault:	
		□ Permanent replacement source (with IVE) <b>51201183 [1]</b>	
	QN 0      QR 1	□ with emergency off by shunt release MX <b>51201184 [1]</b>	
	QN 0      QR 1	□ with emergency off by undervoltage release MN <b>51201185 [1]</b>	

[1] See catalogue "Source changeover systems", ref. LVPED211022EN.

# Functions and characteristics


## Electrical interlocking

### Remote-operated systems

A

#### Source-changeover system with a controller

In this case, changeovers between the "Normal" and "Replacement" sources under predefined conditions are initiated by a Schneider Electric controller.

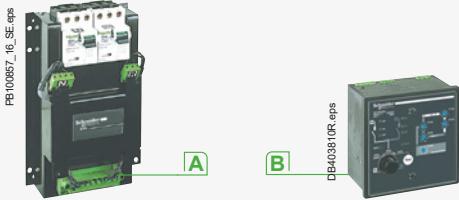


Control plate.


Controller.

#### Switching between sources can be automated by adding:

- [A] ACP control plate
- [B] BA or UA controller, or an electrical system provided by the installer for NS630b to 1600. Electrical system example: part no. 51156904 and 51156904 in the source-changeover system catalogue.

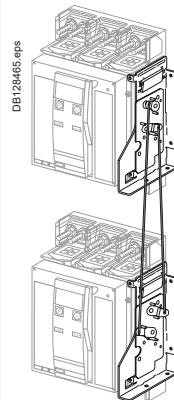

Interlocking by rods.

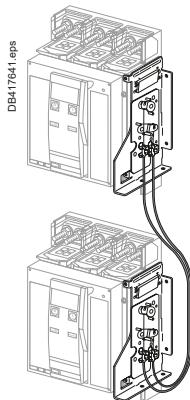

Interlocking by cables.

# Source-changeover systems

## Associated controllers

A

By combining a remote-operated source-changeover system with an integrated BA or UA automatic controller, it is possible to automatically control source transfer according to user-selected sequences. These controllers can be used on source-changeover systems comprising 2 circuit breakers. For source-changeover systems comprising 3 circuit breakers, the automatic control diagram must be prepared by the installer as a complement to the diagrams provided in the "electrical diagrams" section of this catalogue.



BA controller.



UA controller

[1] For example, 220 V single-phase or 220 V three-phase.  
[2] The controller is powered by the ACP control plate. The same voltage must be used for the ACP plate, the IVE unit and the operating mechanisms. If this voltage is the same as the source voltage, then the "Normal" and "Replacement" sources can be used directly for the power supply. If not, an isolation transformer must be used.

Controller	BA	UA
<b>4-position switch</b>		
Compatible circuit breaker	All Compact NS circuit breaker	
Automatic operation	<input checked="" type="radio"/>	<input checked="" type="radio"/>
Forced operation on "Normal" source	<input checked="" type="radio"/>	<input checked="" type="radio"/>
Forced operation on "Replacement" source	<input checked="" type="radio"/>	<input checked="" type="radio"/>
Stop (both Normal and Replacement sources OFF)	<input checked="" type="radio"/>	<input checked="" type="radio"/>
<b>Automatic operation</b>		
Monitoring of the "Normal" source and automatic transfer	<input checked="" type="radio"/>	<input checked="" type="radio"/>
Generator set startup control	<input checked="" type="radio"/>	
Delayed shutdown (adjustable) of engine generator set	<input checked="" type="radio"/>	
Load shedding and reconnection of non-priority circuits	<input checked="" type="radio"/>	
Transfer to the "Replacement" source if one of the phases of the "Normal" phase is absent	<input checked="" type="radio"/>	
<b>Test</b>		
By opening the P25M circuit breaker supplying the controller	<input checked="" type="radio"/>	
By pressing the test button on the front of the controller	<input checked="" type="radio"/>	
<b>Indications</b>		
Circuit breaker status indication on the front of the controller: on, off, fault trip	<input checked="" type="radio"/>	<input checked="" type="radio"/>
Automatic mode indication contact	<input checked="" type="radio"/>	<input checked="" type="radio"/>
<b>Other functions</b>		
Selection of type of "Normal" source (single-phase or three-phase) [1]	<input checked="" type="radio"/>	
Voluntary transfer to "Replacement" source (e.g. energy-management commands)	<input checked="" type="radio"/>	<input checked="" type="radio"/>
During peak-tariff periods (energy-management commands) forced operation on "Normal" source if "Replacement" source not operational	<input checked="" type="radio"/>	
Additional control contact (not in controller). Transfer to "Replacement" source only if contact closed (e.g. used to test the frequency of UR)	<input checked="" type="radio"/>	<input checked="" type="radio"/>
Setting of maximum startup time for the replacement source	<input checked="" type="radio"/>	
<b>Options</b>		
Communication option	<input checked="" type="radio"/>	
<b>Power supply</b>		
Control voltages [2]	110 V	<input checked="" type="radio"/>
	220 to 240 V 50/60 Hz	<input checked="" type="radio"/>
	380 to 415 V 50/60 Hz	<input checked="" type="radio"/>
	440 V 60 Hz	<input checked="" type="radio"/>
<b>Operating thresholds</b>		
Undervoltage	0.35 Un ≤ voltage ≤ 0.7 Un	<input checked="" type="radio"/>
Phase failure	0.5 Un ≤ voltage ≤ 0.7 Un	<input checked="" type="radio"/>
Voltage presence	voltage ≥ 0.85 Un	<input checked="" type="radio"/>

# Source-changeover systems


## Associated controllers

A

Controller		BA	UA			
<b>IP degree of protection (EN 60529) and IK degree of protection against external mechanical impacts (EN 50102)</b>						
Front	IP40	●	●			
Side	IP30	●	●			
Connectors	IP20	●	●			
Front	IK07	●	●			
<b>Characteristics of output contacts (dry, volt-free contacts)</b>						
Rated thermal current (A)	8					
Minimum load	10 mA at 12 V					
Output contacts:		●	●			
Position of the Auto/Stop switch						
Load shedding and reconnection order		●				
Generator set start order		●				
	AC	DC				
Utilisation category (IEC 60947-5-1)	AC12 AC13 AC14 AC15 DC12 DC13					
Operational current (A)	24 V 48 V 110 V 220/240 V 250 V 380/415 V 440 V 660/690 V	8 8 8 8 - 5 4 -	7 7 6 4 - - 3 -	5 5 4 4 - - 0.6 -	6 5 4 3 - - 0.4 -	8 2 - - - - - -

# Electrical and mechanical accessories

## Compact NS630b to 1600 (fixed version)

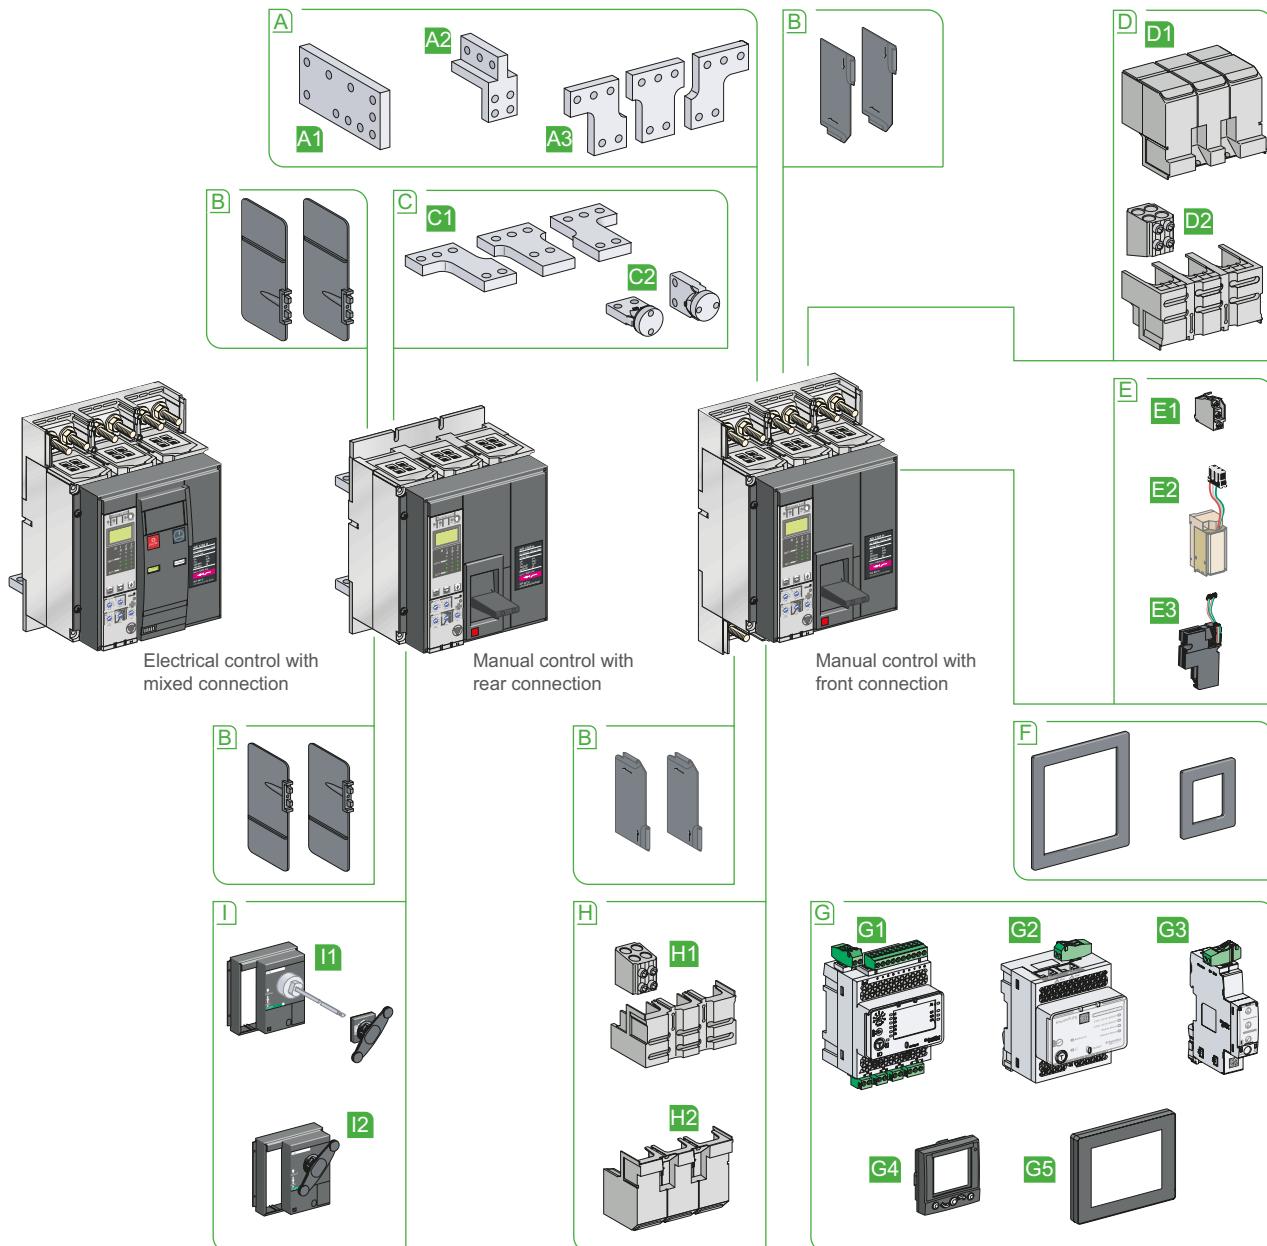

- A1** Terminal extension for cables with lugs
- A2** Vertical connection adapter
- A3** Spreader
- B** Interphase barriers
- C1** Spreader
- C2** Rear connectors
- D1** Sealable terminal shield
- D2** Connection kit for connectors

- E1** Auxiliary contact
- E2** Voltage release
- E3** Communications module
- F** Escutcheon
- G1** IFE
- G2** I/O
- G3** IFM
- G4** FDM121


- G5** FDM128
- H1** Connection kit for connectors
- H2** Sealable terminal shield
- I1** Extended rotary handle
- I2** Direct rotary handle

# Electrical and mechanical accessories

## Compact NS630b to 1600 (withdrawable version)

DB425308.eps

A

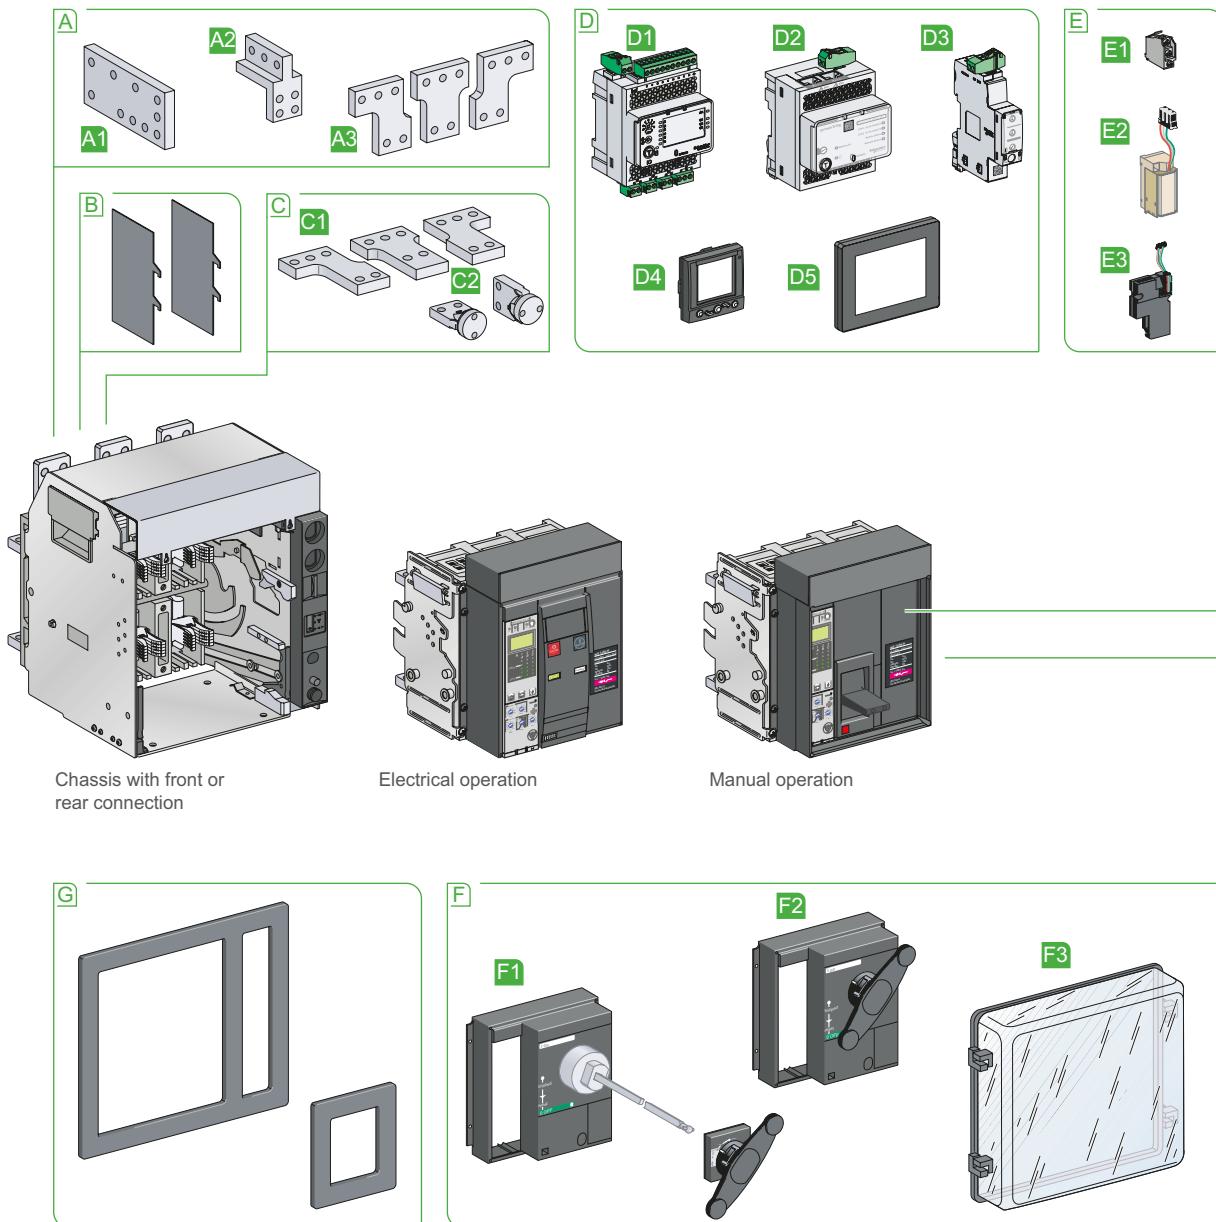

- A1** Terminal extension for cables with lugs
- A2** Vertical connection adapter
- A3** Spreader
- B** Interphase barriers
- C1** Spreader
- C2** Rear connectors
- D1** IFE
- D2** I/O
- D3** IFM
- D4** FDM121
- D5** FDM128

- E1** Auxiliary contact
- E2** Voltage release
- E3** Communications module
- F1** Extended rotary handle
- F2** Direct rotary handle
- F3** Transparent cover
- G** Escutcheon

# Electrical and mechanical accessories

## Compact NS630b to 1600

A

The withdrawable configuration makes it possible to:


- extract and/or rapidly replace the circuit breaker without having to touch connections;
- allow for the addition of future circuits at a later date.




Manually operated fixed Compact NS800.



Electrically operated fixed Compact NS1600.

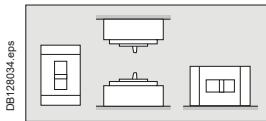


Electrically operated withdrawable Compact NS800H.

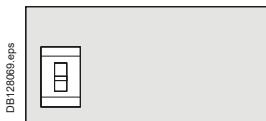


### Installation

#### Fixed configuration

Compact NS630b to 1600 circuit breakers may be installed vertically, horizontally or flat on their back.

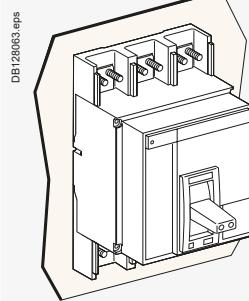


Mounting on a backplate.

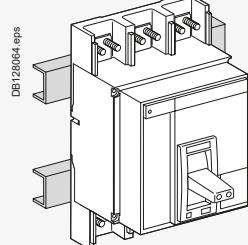


Mounting on rails.

#### Withdrawable configuration


Compact NS630b to 1600 circuit breakers should be installed vertically only.

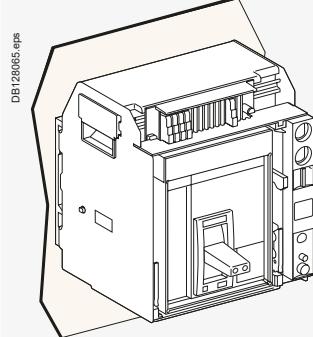


Mounting on a backplate.

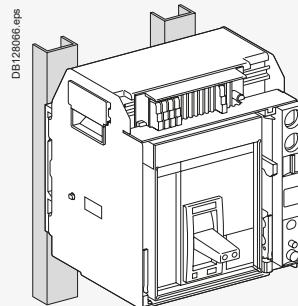

Rear mounting on rails.

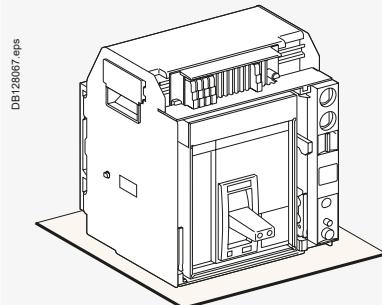

Device on mounting plate.

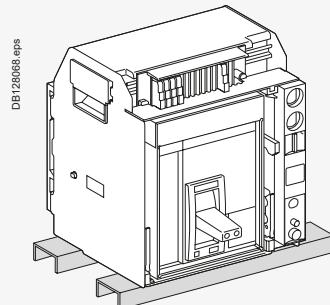

Device on rails.


# Electrical and mechanical accessories

## Compact NS630b to 1600

A

The device may be in one of four positions on the chassis:

- connected position. The power circuits and auxiliary contacts are all connected
- test position. The power circuits are disconnected. The auxiliary contacts are still connected and the device can be operated electrically
- disconnected position. The power circuits and auxiliary contacts are all disconnected, however the device is still mounted on the chassis. It can be operated manually (ON, OFF, "push to trip").
- removed position. All circuits are disconnected. The device simply rests on the chassis rails and can be removed.

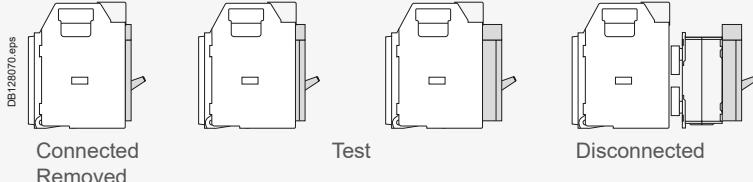

The multifunctional chassis for Compact NS630b to 1600 devices is particularly suited for incoming circuit breakers. Features include:

- device connection and disconnection through a door, using a crank that can be stored in the chassis
- three positions (connected, test and disconnected) that are indicated:
  - locally by a position indicator
  - remotely by carriage switches (3 for the connected position, 2 for the disconnected position and 1 for the test position)
- circuit breaker ON/OFF commands through a switchboard front panel.


### Locking

There are extensive locking possibilities:

- chassis locking in connected, disconnected and test positions using three padlocks and two keylocks, on the switchboard front panel
- door interlock (inhibits door opening with breaker in connected position)
- racking interlock (inhibits racking with door open)
- locking in each of the connected, disconnected and test positions during device connection or disconnection. Continuation to the next position requires pressing a release button to free the crank.

### Other safety function

Mismatch protection ensures that a circuit breaker is installed only in a chassis with compatible characteristics.

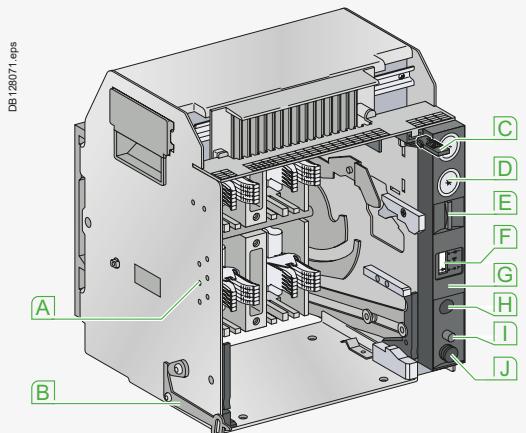

- [A] Mismatch protection
- [B] Door interlock
- [C] Racking interlock
- [D] Keylock locking
- [E] Padlock locking
- [F] Position indicator
- [G] Chassis front plate (accessible with cubicle door closed)
- [H] Crank entry
- [I] Reset button
- [J] Crank storage

# Electrical and mechanical accessories


Compact NS630b to 1600

A

## Types of connection


### Fixed device

#### Front connections (N, L)

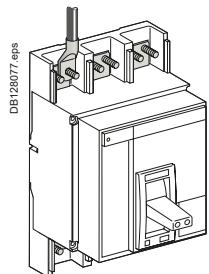

#### Connection by:

bars

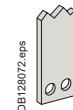

bare cables (except L)




cables with lugs




#### Rear connections (N, L, LB)

Horizontal:

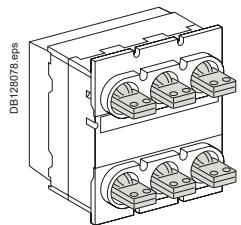


Vertical:

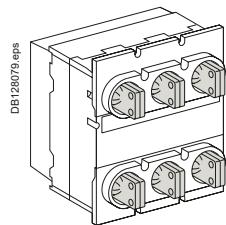


#### Connection by:

bars

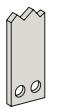

cables with lugs

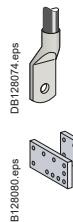


Simply turn a horizontal rear connector 90° to make it a vertical connector.

### Combination of front and rear connections (N, L)

#### Connection by:

bars

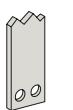

bare cables (except L)




cables with lugs




### Withdrawable device

#### Front connections

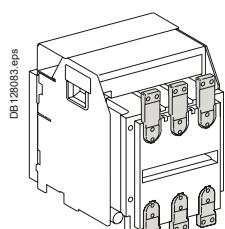

#### Connection by:

bars

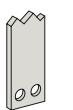


cables with lugs



#### Rear connections

#### Connection by:

bars

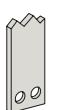









cables with lugs



To ensure performance and isolation, depending on the type of circuit breaker (N, H, L, LB) and type of connection, certain isolation accessories are mandatory.

A

### Connections accessories

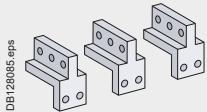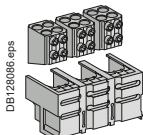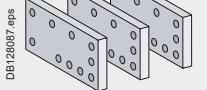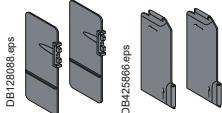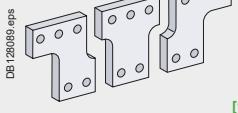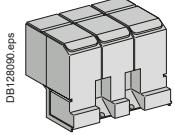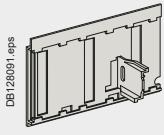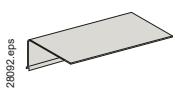Type of accessories	For Compact NS630b to NS1600			
	Fixed:		Withdrawable:	
	Front connection	Rear connection	Front connection	Rear connection
Vertical-connection adapters	N, H, L	-	N, L, LB	-
	[1]			
Set of bare-cable connectors and terminal shields for ratings ≤ 1250 A	N, H	-	-	-
				
Cable lug adapters	N, H, L	N, H, L, LB	N, H, L, LB	N, H, L, LB
	[1]			
Interphase barriers	N, H, L, LB	N, H, L, LB	-	N, H, L, LB
	[2]	[3]		
Spreaders	N, H, L	N, H, L, LB	N, H, L, LB	N, H, L, LB
	[1]			
Connection shield	N, H, L	-	-	-
				
Safety shutters with locking by padlocks (IP20)	-	-	N, H, L, LB (standard)	N, H, L, LB (standard)
				
Arc chute screen	N, H, L	-	-	-
	[4]			

[1] Spreaders, vertical connection adapters and cable lugs adapters are not compatible with voltages u 500 V.

[2] Mandatory for voltages u 500 V unless using the bare-cable connector + terminal shield kit.


[3] Mandatory for fixed devices with L and LB performance levels, whatever the voltage.

[4] Mandatory for fixed front-connection versions with vertical connection adapters oriented towards the front.

# Electrical and mechanical accessories

## Compact NS630b to 1600


A

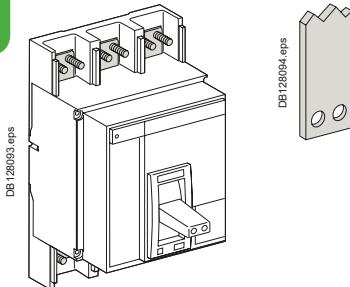

### Front connection of fixed devices


#### Bars

Fixed, front-connection Compact NS630b to 1600 devices are equipped with terminals comprising captive screws for direct connection of bars. Other connection possibilities for bars include vertical-connection adapters for edgewise bars and spreaders to increase the pole pitch to 95 mm. If the vertical connection adapters are front oriented, then it is mandatory to install the arc chute screen in order to comply with the safety clearances.

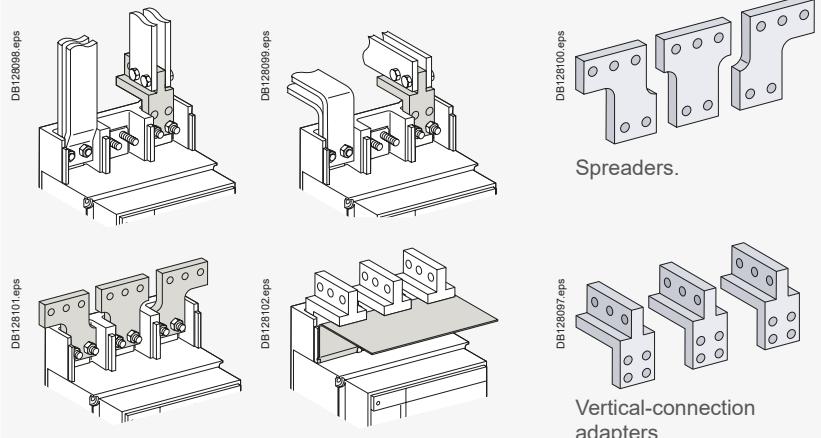


#### Bare cables

Special sets of connectors and terminal shields may be used to connect up to four 240 mm<sup>2</sup> copper or aluminium cables for each phase. Bare cable connection is possible for ratings up to and including 1250 A.

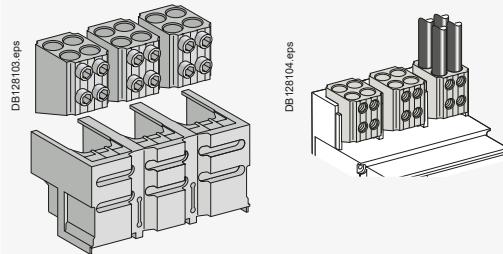

#### Cables with lugs

Cable lug adapters are combined with the vertical-connection adapters. One to four cables with crimped lugs ( $\leq 300$  mm<sup>2</sup>) may be connected. To ensure stability, spacers must be positioned between the terminal extensions. If the cable lug adapters are installed over the top of the arc chute chambers, then it is mandatory to install the arc chute screen in order to comply with the safety clearances.

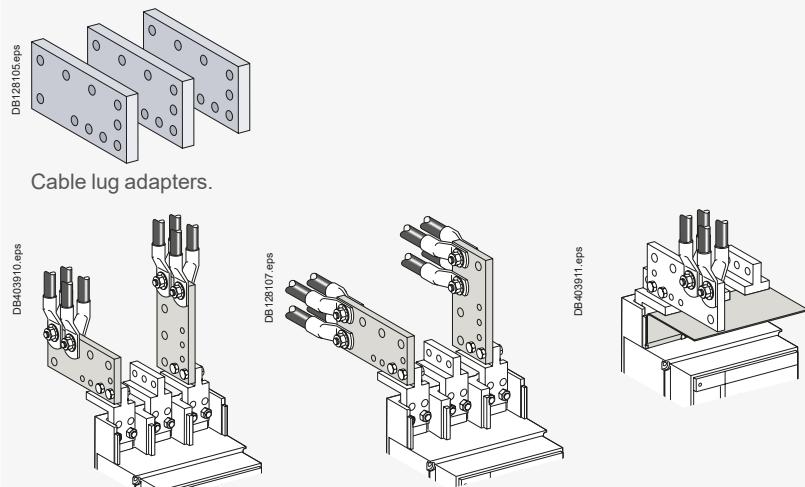

# Electrical and mechanical accessories

## Compact NS630b to 1600


A

### Rear connection of fixed devices



#### Bars

Fixed, rear-connection Compact NS630b to 1600 devices equipped with horizontal or vertical connectors may be directly connected to flat or edgewise bars, depending on the position of the connectors.

Spreaders are available to increase the pole pitch to 95 mm.

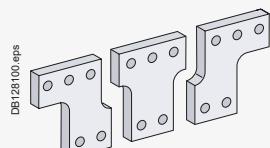


Spreaders.

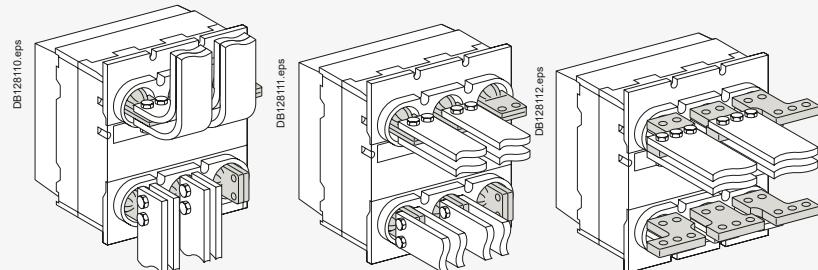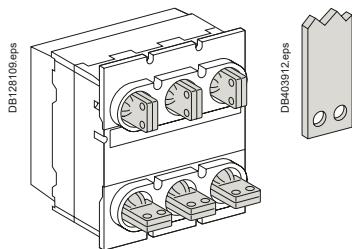


#### Cables with lugs

Cable lug adapters enable connection of one to four cables with crimped lugs ( $\leq 300 \text{ mm}^2$ ).

To ensure stability, spacers must be positioned between the terminal extensions.

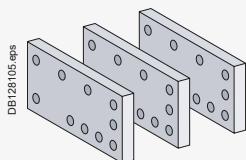


Cable lug adapters.

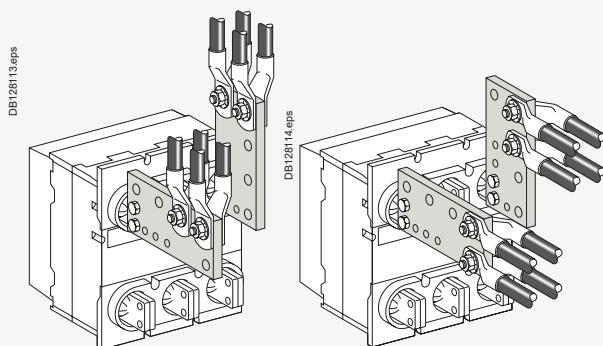

# Electrical and mechanical accessories

## Compact NS630b to 1600


A

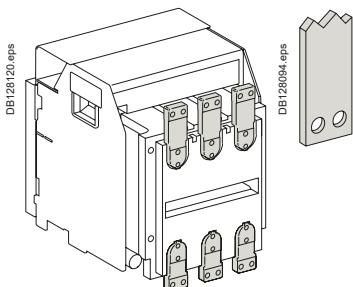


### Front connection of withdrawable devices

#### Bars



Withdrawable, front-connection Compact NS630b to 1600 devices are suitable for direct connection of bars. Other connection possibilities for bars include vertical-connection adapters for edgewise bars and spreaders to increase the pole pitch to 95 mm.

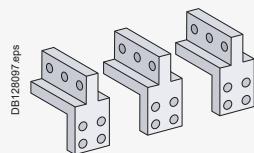

Vertical-connection adapters.

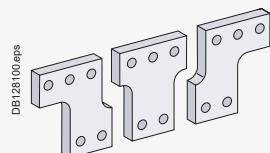


Spreaders.

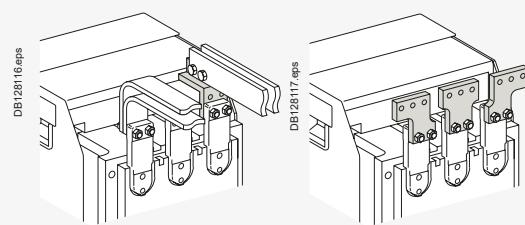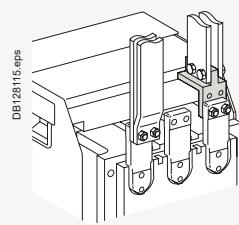


#### Cables with lugs

Cable lug adapters enable connection of one to four cables with crimped lugs ( $\leq 300 \text{ mm}^2$ ). To ensure stability, spacers must be positioned between the terminal extensions.

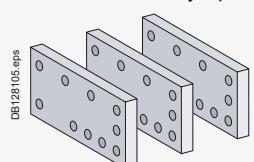

Cable lug adapters.

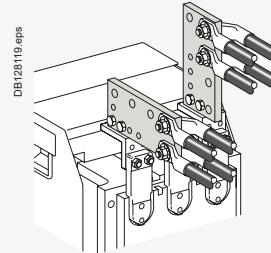

# Electrical and mechanical accessories

## Compact NS630b to 1600


A

### Rear connection of withdrawable devices



#### Bars

Withdrawable, rear-connection Compact NS630b to 1600 devices equipped with horizontal or vertical connectors may be directly connected to flat or edge-wise bars, depending on the position of the connectors.

Spreaders are available to increase the pole pitch to 95 mm.

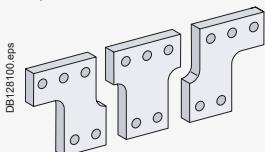


Spreaders.

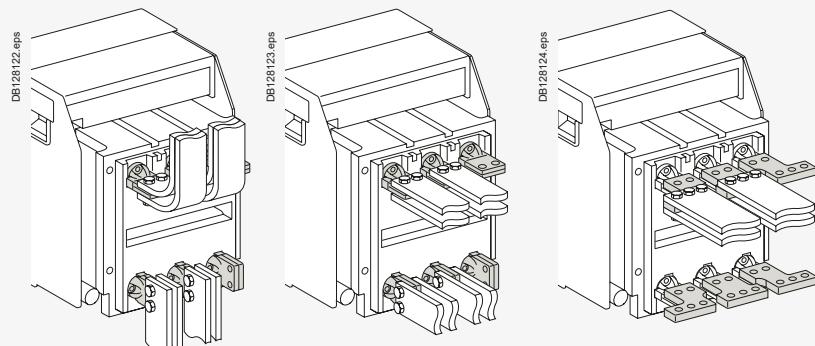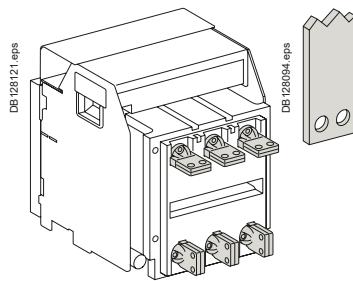


#### Cables with lugs

Cable lug adapters enable connection of one to four cables with crimped lugs ( $\leq 300 \text{ mm}^2$ ).

To ensure stability, spacers must be positioned between the terminal extensions.

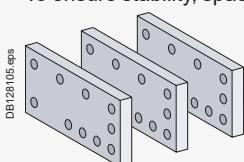

Cable lug adapters.

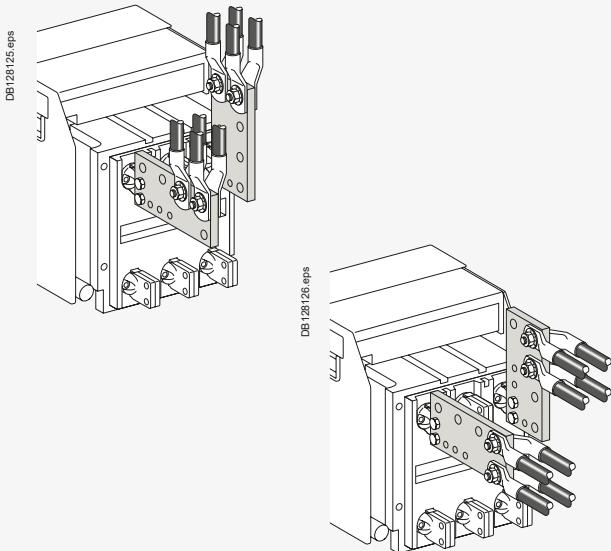

# Electrical and mechanical accessories

## Compact NS630b to 1600

A




Compact NS equipped with connection shield.

### Insulation of live parts

#### Connection shield


Mounted on fixed, front-connection devices, this shield insulates power-connection points, particularly when cables with lugs are used

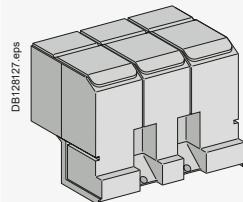


Connection shield.

#### Interphase barriers


These barriers are flexible insulated partitions used to reinforce isolation of connection points in installations with busbars, whether insulated or not. Barriers are installed vertically between front or rear connection terminals. They are mandatory for voltages  $\geq 500$  V for both fixed and withdrawable products and for L and LB types, whatever the voltage.

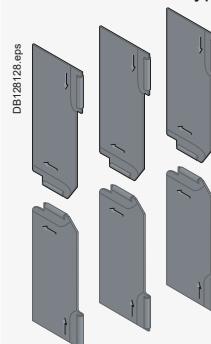

Interphase barriers for fixed device, front connection.

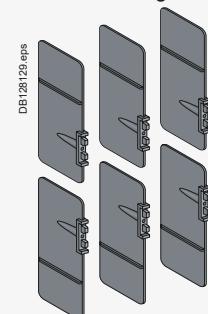

Interphase barriers for fixed device, rear connection.

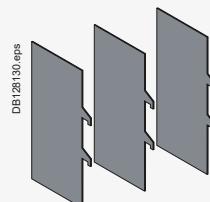


Interphase barriers for withdrawable device, rear connection.

#### Safety shutters (standard)

Mounted on the chassis, the safety shutters automatically block access to the disconnecting contact cluster when the device is in the disconnected or test positions (degree of protection IP20). When the device is removed from its chassis, no live parts are accessible.

The shutters can be padlocked (padlock not supplied) to:

- prevent connection of the device
- lock the shutters in the closed position.

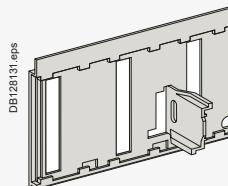

Safety shutters.


# Electrical and mechanical accessories

## Compact NS630b to 1600

### Connection of electrical auxiliaries

#### Fixed devices



Connections are made directly to the auxiliaries once the front has been removed. Wires exit the circuit breaker through a knock-out in the top.

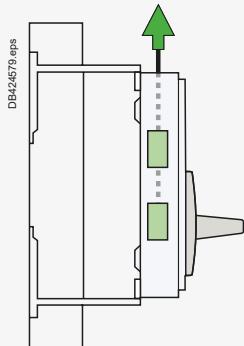



#### Withdrawable devices

Auxiliary circuits are connected to terminal blocks located in the top part of the chassis.

The auxiliary terminal block is made up of a fixed and moving part. The two parts are in contact when the device is in the test and connected positions.

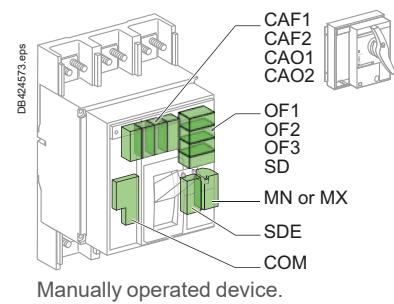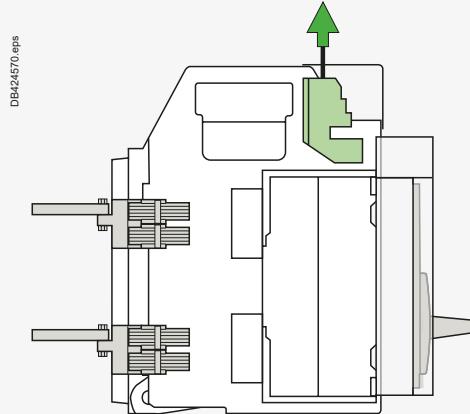

A

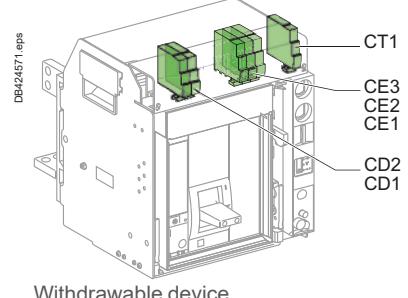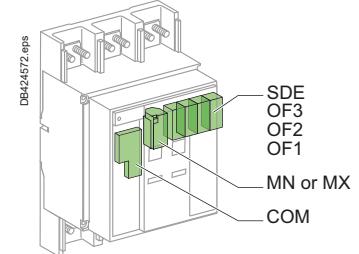

# Electrical and mechanical accessories

## Compact NS630b to 1600

A

All the auxiliary contacts opposite are also available in "low-level" versions capable of switching very low loads (e.g. for the control of PLCs or electronic circuits).



OF, SD and SDE changeover contacts.

### Indication contacts

#### Contacts installed in the device

Changeover contacts are used to remote circuit breaker status information and can thus be used for indications, electrical locking, relaying, etc. They comply with the IEC 60947-5 international recommendation.

#### Functions

- OF (ON/OFF) - indicates the position of the main circuit breaker contacts
- SD (trip indication) - indicates that the circuit breaker has tripped due to:
  - an overload
  - a short-circuit
  - an earth-leakage fault.
  - operation of a voltage release
  - operation of the "push to trip" button
  - disconnection when the device is ON.
- >Returns to de-energised state when the circuit breaker is reset.
- SDE (fault indication) - indicates that the circuit breaker has tripped due to:
  - an overload
  - a short-circuit
  - an earth-leakage fault.
- >Returns to de-energised state when the circuit breaker is reset.
- CAF / CAO (early-make or early-break function) - indicates the position of the rotary handle. Used in particular for advanced opening of safety trip devices (early break) or to energise a control device prior to circuit breaker closing (early make).

#### Installation

- OF, SD and SDE functions - a single type of contact provides all these different indication functions, depending on where it is inserted in the device. The contacts clip into slots behind the front cover of the circuit breaker
- CAF / CAO function - the contact fits into the rotary-handle unit (direct or extended).

### Electrical characteristics of the OF/SD/SDE/CAF/CAO auxiliary contacts

Contacts	Standard				Low level			
Rated thermal current (A)	6				5			
Minimum load	100 mA at 24 V				1 mA at 4 V			
Utilisation cat. (IEC 60947-5-1)	AC12	AC15	DC12	DC14	AC12	AC15	DC12	DC14
Operational current (A)	24 V	6	6	6	1	5	3	5
	48 V	6	6	2.5	0.2	5	3	2.5
	110 V	6	5	0.6	0.05	5	2.5	0.6
	220/240 V	6	4	-	-	5	2	-
	250 V	-	-	0.3	0.03	5	-	0.3
	380/440 V	6	2	-	-	5	1.5	-
	480 V	6	1.5	-	-	5	1	-
	660/690 V	6	0.1	-	-	-	-	-

### Connected, disconnected, test position carriage switches

A single type of changeover contact can be mounted optionally on the chassis to indicate, depending on the slot where it is installed:

- the connected (CE) position
- the disconnected (CD) position. This position is indicated when the required clearance for isolation of the power and auxiliary circuits is reached
- the test (CT) position. In this position, the power circuits are disconnected and the auxiliary circuits are connected.

#### Installation

- contacts for the connected (CE), disconnected (CD) and test (CT) positions clip into the upper front section of the chassis.

### Electrical characteristics of the CE/CD/CT auxiliary contacts

Contacts	Standard				Low level			
Rated thermal current (A)	8				5			
Minimum load	100 mA at 24 V				2 mA at 15 V			
Utilisation cat. (IEC 60947-5-1)	AC12	AC15	DC12	DC14	AC12	AC15	DC12	DC14
Operational current (A)	24 V	8	6	2.5	1	5	3	5
	48 V	8	6	2.5	0.2	5	3	2.5
	110 V	8	5	0.8	0.05	5	2.5	0.8
	220/240 V	8	4	-	-	5	2	-
	250 V	-	-	0.3	0.03	5	-	0.3
	380/440 V	8	3	-	-	5	1.5	-
	660/690 V	6	0.1	-	-	-	-	-



Carriage switches for connected (CE), disconnected (CD) and test (CT) positions.

# Electrical and mechanical accessories

## Compact NS630b to 1600

A

### M6C programmable contacts

These contacts, used with the Micrologic P control units, may be programmed via the control unit keypad or via a supervisory station with the COM communication option. They require an external power supply module.

They indicate:



- the type of fault
- instantaneous or delayed threshold overruns.

They may be programmed:

- with instantaneous return to the initial state
- without return to the initial state
- with return to the initial state following a delay.

Characteristics	M6C	
Minimum load	100 mA/24 V	
Breaking capacity (A)	V AC	240 380
p.f.: 0.7	V DC	24 48 125 250
		5 3 1.8 1.5 0.4 0.15

M6C : alimentation extérieure 24 V CC (consommation 100 mA).

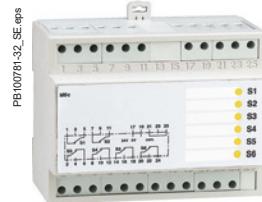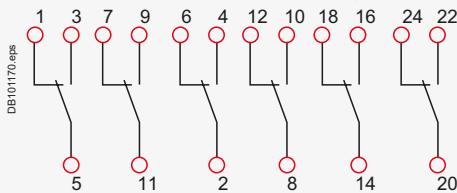

M6C programmable contacts: circuit breaker external relay with six independent changeover contacts controlled from the circuit breaker via a three-wire connection (maximum length is 10 meters).

### Rotary handles

There are two types of rotary handle:

- direct rotary handle
- extended rotary handle.

There are two models:

- standard with a black handle
- VDE with a red handle and yellow front for machine-tool control.

#### Direct rotary handle

Degree of protection IP40, IK07.

The direct rotary handle maintains:

- visibility of and access to trip unit settings
- suitability for isolation
- indication of the three positions O (OFF), I (ON) and tripped
- access to the "push to trip" button
- circuit breaker locking capability in the OFF position by one to three padlocks, shackle diameter 5 to 8 mm (not supplied).

It replaces the circuit breaker front cover.

Accessories transform the standard direct rotary handle for the following situations:

- a higher degree of protection (IP43, IK07)
- machine-tool control, complying with CNOMO E03.81.501, IP54, IK07.



Compact NS with a direct rotary handle.

#### Extended rotary handle

Degree of protection IP55, IK07.

This handle makes it possible to operate circuit breakers installed at the back of switchboards, from the switchboard front.

It maintains:

- suitability for isolation
- indication of the three positions O (OFF), I (ON) and tripped
- access to trip unit settings, when the switchboard door is open
- circuit breaker locking capability in the OFF position by one to three padlocks, shackle diameter 5 to 8 mm (not supplied).

The door cannot be opened if the circuit breaker is ON or locked.

The extended rotary handle is made up of:

- a unit that replaces the front cover of the circuit breaker (secured by screws)
- an assembly (handle and front plate) on the door that is always secured in the same position, whether the circuit breaker is installed vertically or horizontally
- an extension shaft that must be adjusted to the distance. The min/max distance between the back of circuit breaker and door is 218/605 mm.



Compact NS with an extended rotary handle.

# Electrical and mechanical accessories

## Compact NS630b to 1600

A

Manually operated circuit breakers may be equipped with an MX shunt release, an MN undervoltage release or a delayed undervoltage release (MN + delay unit).

Electrically operated circuit breakers are equipped as standard with a remote-operating mechanism to remotely open or close the circuit breaker. An MX shunt release or an MN undervoltage release (instantaneous or delayed) may be added.

### Remote tripping


This function opens the circuit breaker via an electrical order. It is made up of:

- a shunt release (2<sup>nd</sup> MX)
- or an undervoltage release MN
- or a delayed undervoltage release MN + delay unit.

These releases (2<sup>nd</sup> MX or MN) cannot be operated by the communication bus.

The delay unit, installed outside the circuit breaker, may be disabled by an emergency OFF button to obtain instantaneous opening of the circuit breaker.

#### Wiring diagram for the remote-tripping function

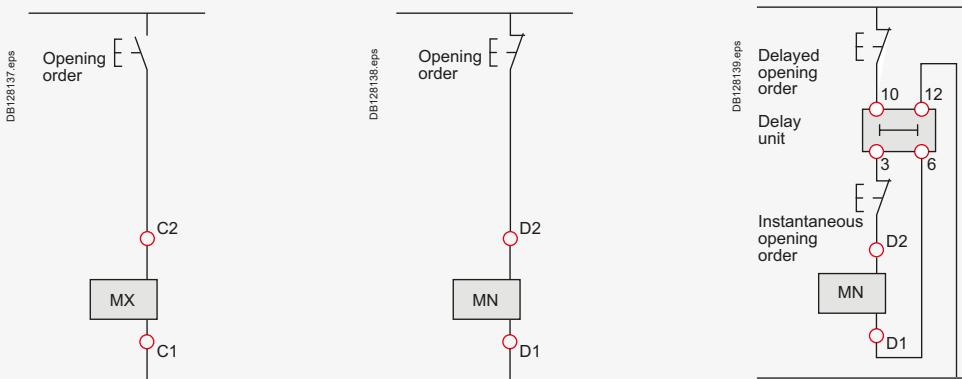

Fixed Compact NS800.



Fixed Compact NS1600.

### Voltage releases 2<sup>nd</sup> MX

When energised, the 2<sup>nd</sup> MX voltage release instantaneously opens the circuit breaker. A continuous supply of power to the 2<sup>nd</sup> MX locks the circuit breaker in the OFF position. The MX release instantaneously opens the circuit breaker when energised, the minimum duration of the pulse operating order must be 200 ms.

The MX release locks the circuit breaker in OFF position if the order is maintained (except for MX "communicating" releases).

#### Characteristics

Power supply VAC 50/60 Hz	24 - 48 - 100/130 - 200/250 - 277 - 380/480 V DC
Operating threshold	0.7 to 1.1 Un
Permanent locking function	0.85 to 1.1 Un
Consumption (VA or W)	pick-up: 200 (200 ms) hold: 4.5
Circuit breaker response time at Un	50 ms ±10

### Instantaneous voltage releases MN

The MN release instantaneously opens the circuit breaker when its supply voltage drops to a value between 35 % and 70 % of its rated voltage. If there is no supply on the release, it is impossible to close the circuit breaker, either manually or electrically. Any attempt to close the circuit breaker has no effect on the main contacts. Circuit breaker closing is enabled again when the supply voltage of the release returns to 85 % of its rated value.

#### Characteristics

Power supply VAC 50/60 Hz	24 - 48 - 100/130 - 200/250 - 380/480 V DC
Operating threshold	0.35 to 0.7 Un
opening	0.85 Un
closing	pick-up: 200 (200 ms) hold: 4.5
Consumption (VA or W)	pick-up: 400 (200 ms) hold: 4.5
MN consumption with delay unit (VA or W)	
Circuit breaker response time at Un	90 ms ±5

### MN delay units

To eliminate circuit breaker nuisance tripping during short voltage dips, operation of the MN release can be delayed. This function is achieved by adding an external delay unit in the MN voltage-release circuit. Two versions are available, adjustable and non-adjustable.

#### Characteristics

Power supply V AC 50-60 Hz /DC	non-adjustable	100/130 - 200/250
Operating threshold	adjustable	48/60 - 100/130 - 200/250 - 380/480
opening	0.35 to 0.7 Un	
closing	0.85 Un	
Consumption of delay unit alone (VA or W)	pick-up: 200 (200 ms)	hold: 4.5
Circuit breaker response time at Un	non-adjustable	0.25 s
	adjustable	0.5 s - 1 s - 1.5 s - 3 s



MX voltage release.

# Electrical and mechanical accessories

## Compact NS630b to 1600

Electrically operated circuit breakers are equipped as standard with a motor mechanism module. Two solutions are available for electrical operation:

- a point-to-point solution
- a bus solution with the COM communication option.

A

### Electrically operated circuit breaker

The motor mechanism module is used to remotely open and close the circuit breaker. It is made up of a spring-charging motor equipped with an opening release and a closing release.

An electrical operation function is generally combined with:

- device ON/OFF indication OF
- "fault-trip" indication SDE.

#### Motor mechanism module

Power supply	V AC 50/60 Hz	48/60 - 100/130 - 200/240 - 277 - 380/415
	V DC	24/30 - 48/60 - 100/125 - 200/250
Operating threshold		0.85 to 1.1 Un
Consumption (VA or W)		180
Motor overcurrent		2 to 3 In for 0.1 second
Charging time		maximum 4 seconds
Operating frequency		maximum 3 cycles per minute

#### Electrical closing order

The release remotely closes the circuit breaker if the spring mechanism is charged. Release electrical characteristics are identical to those of an MX release (see above), the operating threshold is from 0.85 to 1.1 Un and the circuit breaker response time at Un is 60 ms ±10.

The Compact NS electrical operation function can be used to implement a synchro-coupling system.

#### Electrical opening order

The release instantaneously opens the circuit breaker when energised. The supply can be impulse-type or maintained.



Release electrical characteristics are identical to those of an MX release (see above).

**Note:** whether the operating order is maintained or automatically disconnected (pulse-type), "communicating" releases ("bus" solution with "COM" communication option) always have an impulse-type action (see diagram).




Electrically operated Compact NS circuit breaker.

#### Wiring diagram of a point-to-point electrical operation solution

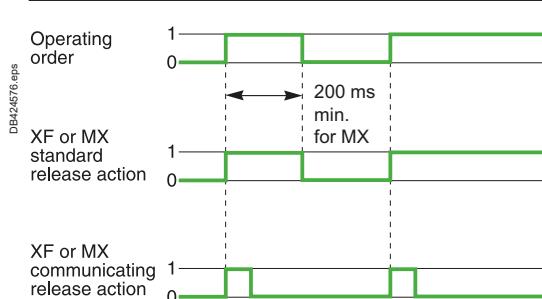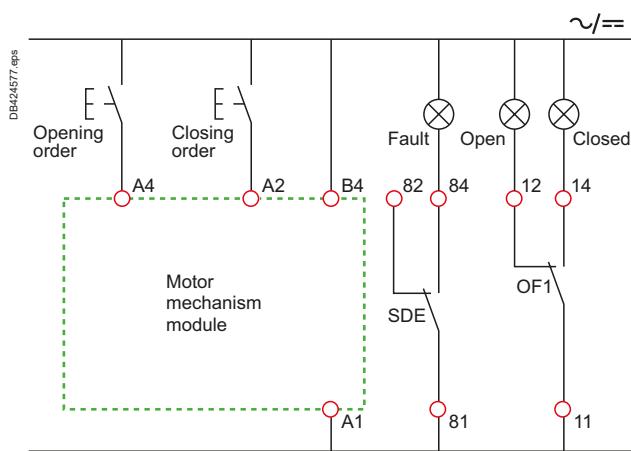

#### Wiring diagram of a bus-type electrical operation solution

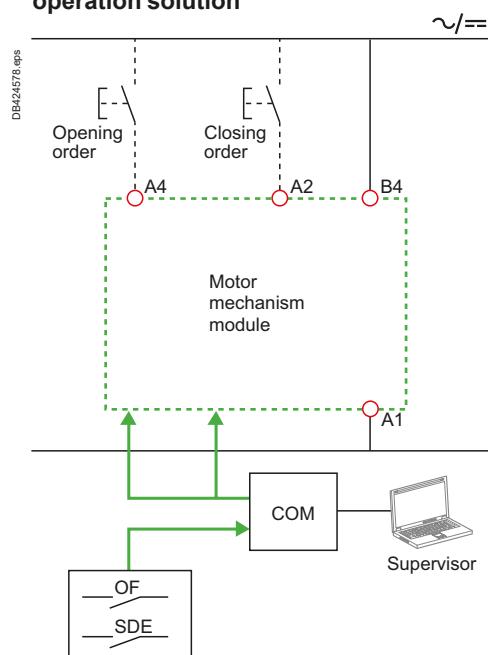

In the event of simultaneous opening and closing orders, the mechanism discharges without any movement of the main contacts.

In the event of maintained opening and closing orders, the standard electrical operation solution provides an anti-pumping function by blocking the main contacts in open position.

# Electrical and mechanical accessories

## Compact NS630b to 1600

A



Toggle locked by removable padlocking device.



Rotary handle locked by a keylock.



Access to pushbuttons protected by transparent cover.



Pushbutton locking using a padlock.



OFF position locking using padlocks.



OFF position locking using a keylock and padlocks.


### Locking on manually operated devices

Locking in the OFF position guarantees isolation as per IEC 60947-2.  
Padlocking systems can receive up to three padlocks with shackle diameters ranging from 5 to 8 mm (padlocks not supplied).

Control device	Function	Means	Required accessories
Toggle	lock in		
	<ul style="list-style-type: none"> <li>■ OFF position</li> <li>■ OFF or ON position</li> </ul>	<ul style="list-style-type: none"> <li>padlock</li> <li>padlock</li> </ul>	<ul style="list-style-type: none"> <li>removable device</li> <li>fixed device</li> </ul>
Direct rotary handle	lock in		
	<ul style="list-style-type: none"> <li>■ OFF position</li> <li>■ OFF or ON position</li> </ul>	<ul style="list-style-type: none"> <li>padlock</li> <li>keylock</li> </ul>	<ul style="list-style-type: none"> <li>locking device + keylock</li> </ul>
CNOMO direct rotary lock in handle	■ OFF position	padlock	
Extended rotary handle	lock in OFF position, door opening prevented	padlock keylock	keylock

Locking in ON position does not prevent the device from tripping in the event of a fault or remote tripping order.

### Locking on electrically operated devices

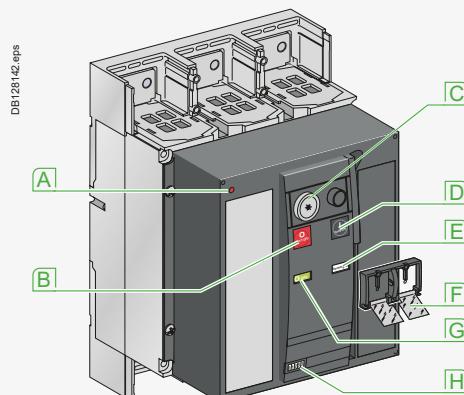

#### Pushbutton locking VBP

The transparent cover blocks access to the pushbuttons used to open and close the device.

It is possible to independently lock the opening OFF button and the closing ON button.

The pushbuttons may be locked using either:

- padlocks (not supplied), 5 to 8 mm
- lead seal
- two screws.

#### Device locking in the OFF position

#### VCPO by padlocks, VSPO by keylocks

The circuit breaker is locked in the OFF position by physically maintaining the opening pushbutton pressed down:

- using padlocks in standard (one to three padlocks, not supplied)
- using a keylock (supplied).

Keys may be removed only when locking is effective (Profalux or Ronis type locks).

The keylocks are available in any of the following configurations:

- one keylock
- one keylock mounted on the device + one identical keylock supplied separately for interlocking with another device.

A locking kit (without lock) is available for installation of a keylock (Ronis, Profalux, Kirk or Castell).


# Electrical and mechanical accessories

## Compact NS630b to 1600

A

### Chassis locking

DB128071.eps

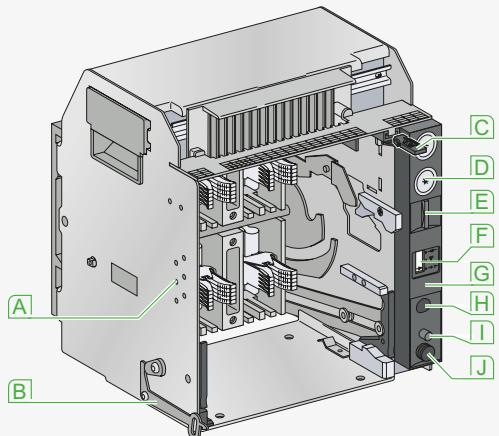

- [A] mismatch protection
- [B] door interlock
- [C] racking interlock
- [D] keylock locking
- [E] padlock locking
- [F] position indicator
- [G] chassis front plate (accessible with cubicle door closed)
- [H] crank entry
- [I] reset button
- [J] crank storage

### "Disconnected" position locking by padlocks (standard) or keylocks (VSPD option)

Mounted on the chassis and accessible with the door closed, these devices lock the circuit breaker in the disconnected position in two manners:

- using padlocks (standard), up to three padlocks (not supplied)
  - using keylocks (optional), one or two different keylocks are available.
- Profalux and Ronis keylocks are available in different options:
- one keylock
  - one keylock mounted on the device + one identical keylock supplied separately, using the same key, for interlocking with another device
  - one (or two) keylocks mounted on the device + one (or two) identical keylocks supplied separately, for interlocking with another device.

A locking kit (without locks) is available for installation of one or two keylocks (Ronis, Profalux, Kirk or Castell).

#### "Connected", "disconnected" and "test" position locking

The connected, disconnected and test positions are shown by an indicator and are mechanically indexed.

The racking crank blocks when the exact position is obtained.

A release button is used to free it.

As standard, the circuit breaker can be locked only in "disconnected position". On request, the locking system may be modified to lock the circuit breaker in any of the three positions: "connected", "disconnected" or "test".

#### Door interlock catch VPEC

Mounted on the right or left-hand side of the chassis, this device inhibits opening of the cubicle door when the circuit breaker is in connected or test position. If the breaker is put in the connected position with the door open, the door may be closed without having to disconnect the circuit breaker.

#### Racking interlock VPOC

This device prevents insertion of the crank when the cubicle door is open (device cannot be connected).

#### Mismatch protection VDC

Mismatch protection ensures that a circuit breaker is installed only in a chassis with compatible characteristics. It is made up of two parts (one on the chassis and one on the circuit breaker) offering twenty different combinations that the user may select.



"Disconnected" position locking by padlocks.



"Disconnected" position locking by keylocks.



Door interlock.



Racking interlock.



Mismatch protection.

# Electrical and mechanical accessories

## Compact NS630b to 1600

A



Auxiliary terminal shield.

PB104740-32.eps



Operation counter.

PB104382A32.eps




Escutcheon.

DB128144.eps



Transparent cover.

DB128145.eps

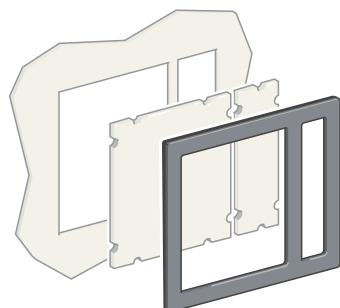

Blanking plate.

DB128146.eps

### Other accessories

#### Auxiliary terminal shield (CB)

Optional equipment mounted on the chassis, the shield prevents access to the terminal block of the electrical auxiliaries.

#### Operation counter (CDM)

The operation counter sums the number of operating cycles and is visible on the front panel. This option is mandatory for Source-changeover systems and only compatible with electrically operated devices.

#### Escutcheon (CDP)

Optional equipment mounted on the door of the cubicle, the escutcheon increases the degree of protection to IP40. It is available in fixed and withdrawable versions.

#### Transparent cover (CCP) for escutcheon


Optional equipment mounted on the escutcheon, the cover is hinged and secured by a screw. It increases the degree of protection to IP54 and the degree of protection against mechanical impacts to IK10. It may be used for withdrawable devices only.

#### Blanking plate (OP) for escutcheon

Used with the escutcheon, this option closes off the door cutout of a cubicle not yet equipped with a device. It may be used with the escutcheon for both fixed and withdrawable devices.

# Electrical and mechanical accessories

## Compact NS1600b to 3200 (fixed version)

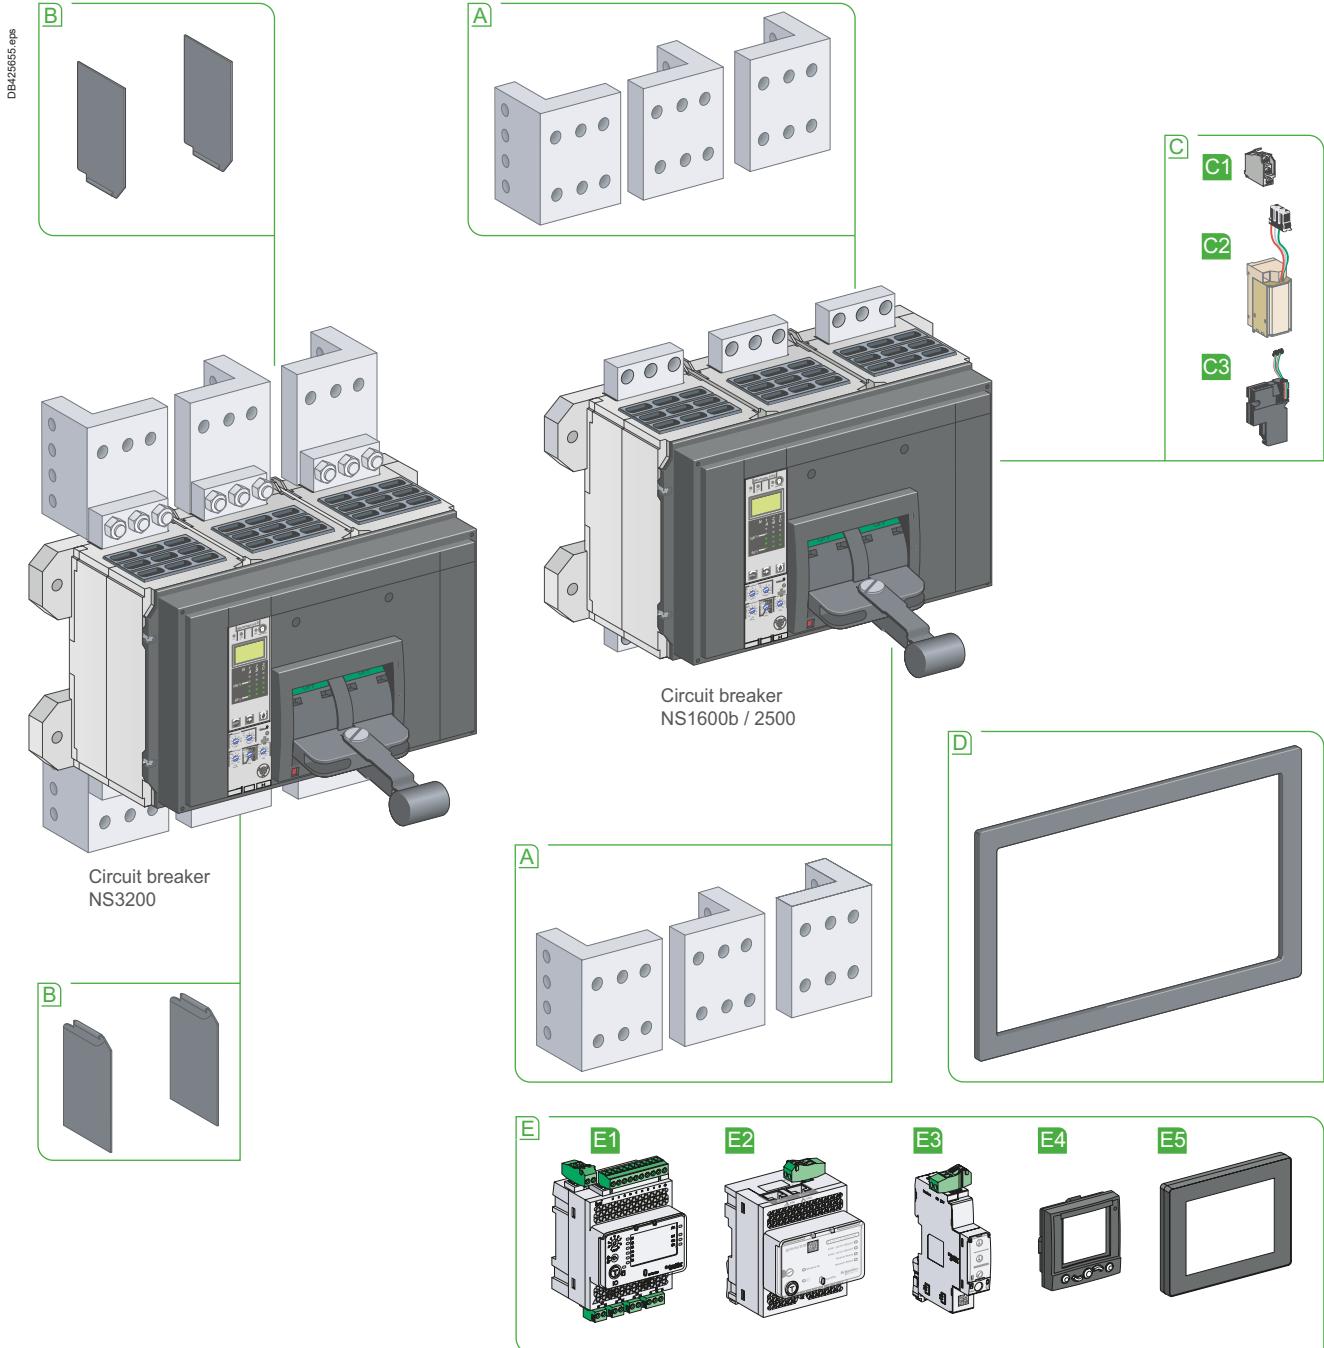

- A** Vertical-connection adapters
- B** Interphase barriers
- C1** Auxiliary contact
- C2** Voltage release
- C3** Communications module
- D** Escutcheon

- E1** IFE
- E2** I/O
- E3** IFM
- E4** FDM121
- E5** FDM128




# Electrical and mechanical accessories

## Compact NS1600b to 3200

A




Fixed Compact NS.

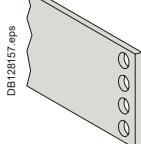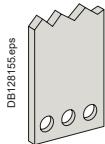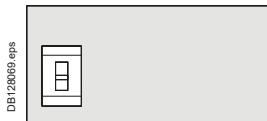

### Installation

#### Fixed circuit breakers

Compact NS1600b to 3200 circuit breakers should be installed vertically only.

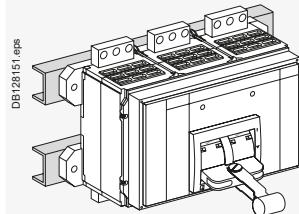


Mounting on rails.


### Connection

#### Front connection

##### NS1600 to 2500

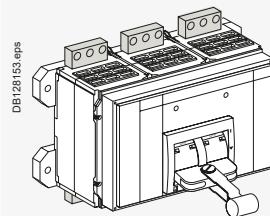


##### NS3200

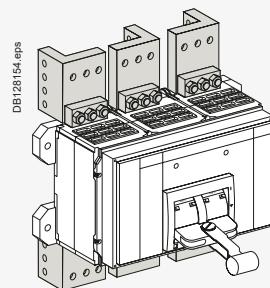



### Bars

Bars may be directly connected to the terminals of Compact NS1600b to 3200 circuit breakers.

#### NS1600b to 2500

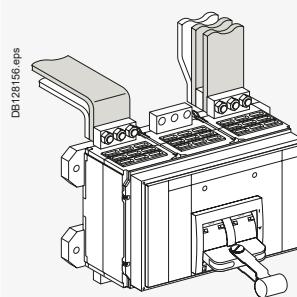

#### NS1600b to 2500 with connection for vertical-connection adapters or NS3200

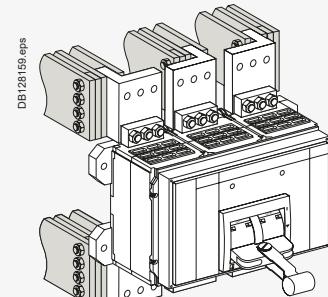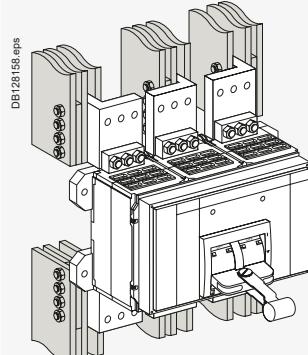

# Electrical and mechanical accessories

## Compact NS1600b to 3200

All the auxiliary contacts opposite are also available in "low-level" versions capable of switching very low loads (e.g. for the control of PLCs or electronic circuits).

A

### Indication contacts

#### Contacts installed in the device

Changeover contacts are used to remote circuit breaker status information and can thus be used for indications, electrical locking, relaying, etc.

They comply with the IEC 60947-5 international recommendation.

#### Functions

- OF (ON/OFF) - indicates the position of the main circuit breaker contacts
- SD (trip indication) - indicates that the circuit breaker has tripped due to:
  - an overload
  - a short-circuit
  - an earth-leakage fault
  - operation of a voltage release
  - operation of the "push to trip" button
- Returns to de-energised state when the circuit breaker is reset.

SDE (fault indication) - indicates that the circuit breaker has tripped due to:

- an overload
- a short-circuit
- an earth-leakage fault.

Returns to de-energised state when the circuit breaker is reset.

#### Installation

■ OF, SD and SDE functions - a single type of contact provides all these different indication functions, depending on the position where it is inserted in the device.

The contacts clip into slots behind the front cover of the circuit breaker.

#### Electrical characteristics of the OF/SD/SDE auxiliary contacts

Contacts	Standard				Low level			
Rated thermal current (A)	6				5			
Minimum load	100 mA at 24 V				1 mA at 4 V			
Utilisation cat. (IEC 60947-5-1)	AC12	AC15	DC12	DC14	AC12	AC15	DC12	DC14
Operational current (A)	24 V	6	6	6	1	5	3	5
	48 V	6	6	2.5	0.2	5	3	2.5
	110 V	6	5	0.6	0.05	5	2.5	0.6
	220/240 V	6	4	-	-	5	2	-
	250 V	-	-	0.3	0.03	5	-	0.03
	380/440 V	6	2	-	-	5	1.5	-
	480 V	6	1.5	-	-	5	1	-
	660/690 V	6	0.1	-	-	-	-	-



OF, SD and SDE changeover contacts.

# Electrical and mechanical accessories

## Compact NS1600b to 3200

A

Compact NS1600b to 3200 circuit breakers may be equipped with an MX shunt release, an MN undervoltage release or a delayed undervoltage release (MNR = MN + delay unit).



MX voltage release

### Remote tripping


This function opens the circuit breaker via an electrical order. It is made up of:

- a shunt release 2<sup>nd</sup> MX
- or an undervoltage release MN
- or a delayed undervoltage release MNR = MN + delay unit.

These releases (2<sup>nd</sup> MX or MN) cannot be operated by the communication bus.

The delay unit, installed outside the circuit breaker, may be disabled by an emergency OFF button to obtain instantaneous opening of the circuit breaker.

#### Wiring diagram for the remote-tripping function

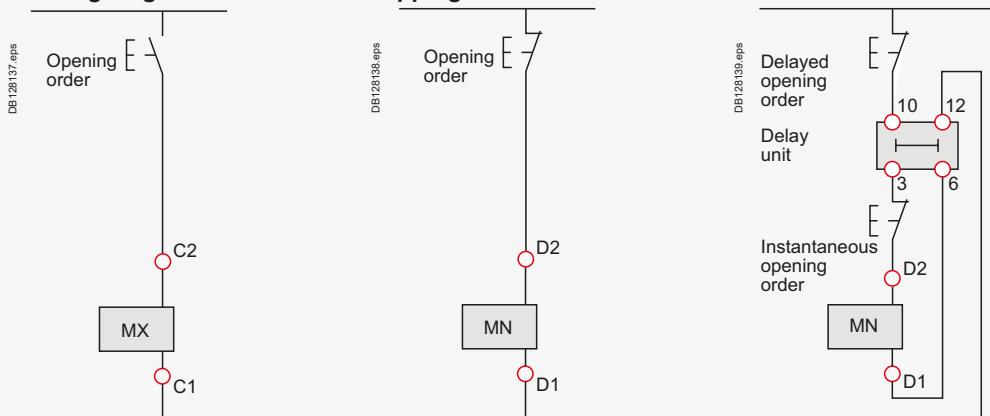

### Voltage releases 2<sup>nd</sup> MX

When energised, the 2<sup>nd</sup> MX voltage release instantaneously opens the circuit breaker. A continuous supply of power to the 2<sup>nd</sup> MX locks the circuit breaker in the OFF position.

#### Characteristics

Power supply V AC 50/60 Hz	24 - 48 - 100/130 - 200/250 - 277 - 380/480
V DC	12 - 24/30 - 48/60 - 100/130 - 200/250
Operating threshold	0.7 to 1.1 Un
Permanent locking function	0.85 to 1.1 Un
Consumption (VA or W)	pick-up: 200 (80 ms) hold: 4.5
Circuit breaker response time at Un	50 ms±10

### Instantaneous voltage releases MN

The MN release instantaneously opens the circuit breaker when its supply voltage drops to a value between 35 % and 70 % of its rated voltage. If there is no supply on the release, it is impossible to close the circuit breaker, either manually or electrically. Any attempt to close the circuit breaker has no effect on the main contacts. Circuit breaker closing is enabled again when the supply voltage of the release returns to 85 % of its rated value.

#### Characteristics

Power supply V AC 50/60 Hz	24 - 48 - 100/130 - 200/250 - 380/480
V DC	24/30 - 48/60 - 100/130 - 200/250
Operating threshold closing	0.35 to 0.7 Un
threshold opening	0.85 Un
Consumption (VA or W)	pick-up: 200 (200 ms) hold: 4.5
MN consumption with delay unit (VA or W)	pick-up: 400 (200 ms) hold: 4.5
Circuit breaker response time at Un	90 ms±5

### MN delay units

To eliminate circuit breaker nuisance tripping during short voltage dips, operation of the MN release can be delayed. This function is achieved by adding an external delay unit in the MN voltage-release circuit. Two versions are available, adjustable and non-adjustable.

#### Characteristics

Power supply V AC 50-60 Hz /DC	non-adjustable	100/130 - 200/250
Operating threshold	adjustable	48/60 - 100/130 - 200/250 - 380/480
	opening	0.35 to 0.7 Un
	closing	0.85 Un
Consumption of delay unit alone (VA or W)	pick-up: 200 (200 ms)	hold: 4.5
Circuit breaker response time at Un	non-adjustable	0.25 s
	adjustable	0.5 s - 0.9 s - 1.5 s - 3 s

# Electrical and mechanical accessories

## Compact NS1600b to 3200

A

### Device locking

Locking in the OFF position guarantees isolation as per IEC 60947-2. Padlocking systems can receive up to three padlocks with shackle diameters ranging from 5 to 8 mm (padlocks not supplied).

Control device	Function	Means	Required accessories
Toggle	lock in OFF position	padlock	removable device
	lock in OFF or ON position	padlock	fixed device

### Interphase barriers

These barriers are flexible insulated partitions used to reinforce isolation of connection points in installations with busbars, whether insulated or not. Barriers are installed vertically between front connection terminals.

### Escutcheon CDP


Optional equipment mounted on the door of the cubicle, the escutcheon increases the degree of protection to IP40.




Compact NS with toggle locked using a fixed device and padlocks.



Compact NS with toggle locked using a removable device and padlocks.

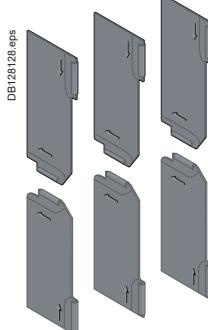

Interphase barriers.

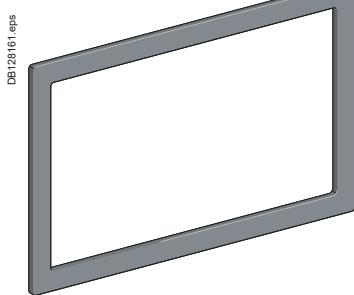

Escutcheon.



Micrologic 6.0 E  
413  
N 1 2 3  
A B C  
100%  
40%

Schneider

Compact  
NS1600 H -X-I-  
Ui 600 V Ulmpg. 8 kV  
Ue (V) Icu(A) Ics(A)  
220/240 ~ 85 35  
380/415 ~ 70 35  
440 ~ 65 32  
500/525 ~ 50 25  
660/690 ~ 42 21  
In 19.2kA / 1s cat B  
50/60Hz IEC 60947-2


## Installation recommendations

Operating conditions .....	B-2
<b>Installation in switchboards</b>	
Power supply and weights .....	B-3
Safety clearances and minimum distances .....	B-4
Installation example .....	B-5
Door interlock for Compact NS630b to 1600 .....	B-6
Control wiring.....	B-7
<b>Temperature derating</b>	
Compact NS devices equipped with electronic trip units .....	B-8
<b>Power dissipation / Resistance</b>	
Compact NS devices equipped with electronic trip units .....	B-9

B

Compact circuit breakers have been tested for operation in industrial atmospheres.  
It is recommended that the equipment be cooled or heated to the proper operating temperature and kept free of excessive vibration and dust.

B

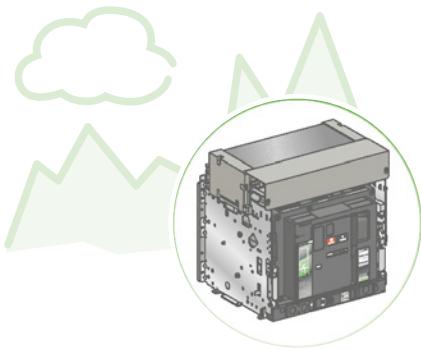

DB419120.eps

### Altitude derating


Altitude does not significantly affect circuit-breaker characteristics up to 2000 m. Above this altitude, it is necessary to take into account the decrease in the dielectric strength and cooling capacity of air.

The following table gives the corrections to be applied for altitudes above 2000 metres. The breaking capacities remain unchanged.

#### Compact NS630b to 3200

Altitude (m)	2000	3000	4000	5000
Impulse withstand voltage $U_{imp}$ (kV)	8	7.1	6.4	5.6
Rated insulation voltage ( $U_i$ )	800	710	635	560
Maximum rated operational voltage 50/60 Hz	690	690	635	560
$U_e$ (V)				
Rated current 40 °C		1 x $\ln$	0.99 x $\ln$	0.96 x $\ln$
		0.94 x $\ln$		

Intermediate values may be obtained by interpolation.

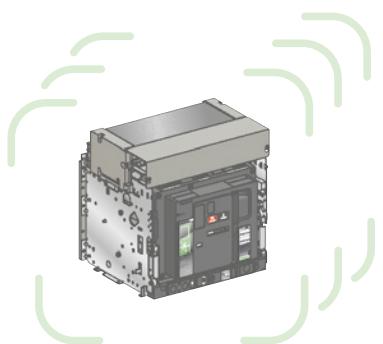


DB419119.eps

### Vibrations

Compact NS devices resist electromagnetic or mechanical vibrations. Tests are carried out in compliance with standard IEC 60068-2-6 for the levels required by merchant-marine inspection organisations (Veritas, Lloyd's, etc.):

- 2 → 13.2 Hz: amplitude  $\pm 1$  mm
- 13.2 → 100 Hz: constant acceleration 0.7 g.

Excessive vibration may cause tripping, breaks in connections or damage to mechanical parts.

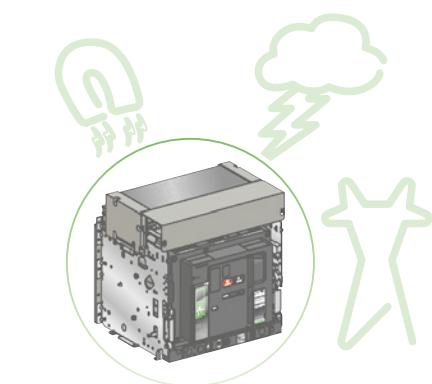

DB419121.eps

### Electromagnetic disturbances

Compact NS devices are protected against:

- overvoltages caused by devices that generate electromagnetic disturbances
- overvoltages caused by an atmospheric disturbances or by a distribution-system outage (e.g. failure of a lighting system)
- devices emitting radio waves (radios, walkie-talkies, radar, etc.)
- electrostatic discharges produced by users.

Compact NS devices have successfully passed the electromagnetic-compatibility tests (EMC) defined by the following international standards:

- IEC 60947-2, appendix F
- IEC 60947-2, appendix B (trip units with Vigi earth-leakage function).

The above tests guarantee that:

- no nuisance tripping occurs
- tripping times are respected.

# Installation in switchboards

## Power supply and weights

### Power supply

Compact NS circuit breakers can be supplied from either the top or the bottom without any reduction in performance. This capability facilitates connection when installed in a switchboard.


### Weights

		Circuit breaker	Chassis
NS630b to 1600 manual operation	3P	14	14
	4P	18	18
NS630b to 1600 electrical operation	3P	14	16
	4P	18	21
NS1600b to 3200	3P	24	-
	4P	36	-

The table above presents the weights (in kg) of the circuit breakers and the main accessories, which must be summed to obtain the total weight of complete configurations.

B

DB424588 eps

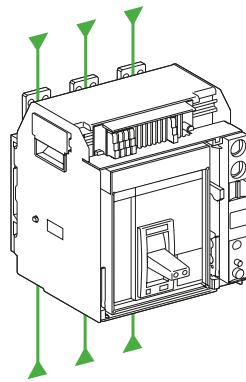

# Installation in switchboards

## Safety clearances and minimum distances

B


### General rules

When installing a circuit breaker, minimum distances (safety clearances) must be maintained between the device and panels, bars and other protection devices installed nearby. These distances, which depend on the ultimate breaking capacity, are defined by tests carried out in accordance with standard IEC 60947-2.

If installation conformity is not checked by type tests, it is also necessary to:

- use insulated bars for circuit-breaker connections
- block off the busbars using insulating screens.


### Compact NS630b to 3200 (fixed devices)

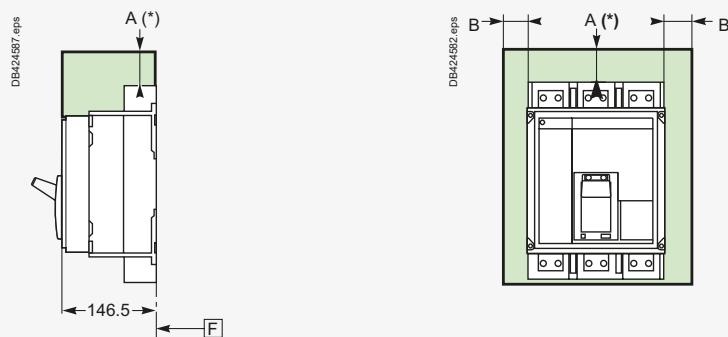

[1] An overhead clearance of 50 mm is required to remove the arc chutes.

Insulated parts	Metal parts	Live parts
<b>NS630b to 1600</b>		
A 0	120	180
B 0	10	60
<b>NS1600b to 3200</b>		
A 50	170	230
B 0	10	60

### Compact NS630b to 1600 (withdrawable devices)

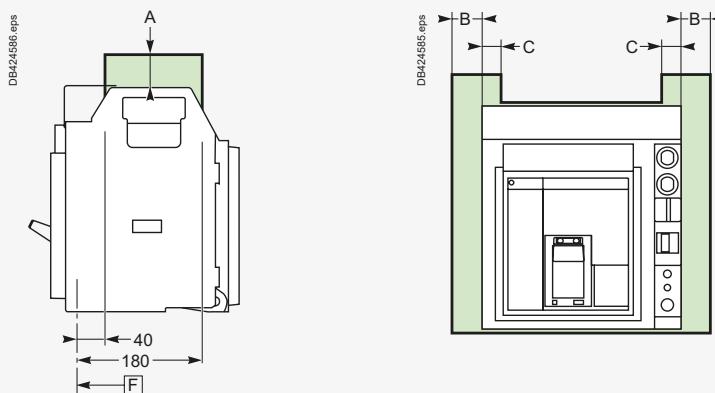


Insulated parts	Metal parts	Live parts
A 0	0	30
B 10	10	60
C 0	0	30


[F] Datum

Installation recommendations  
**Installation in switchboards**  
 Installation example


DB424583.eps

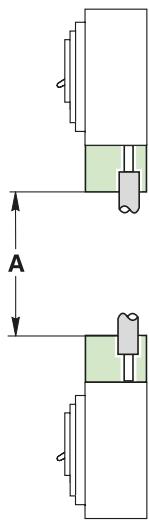


Direct connection by  
bare cables, devices  
with terminal shields.

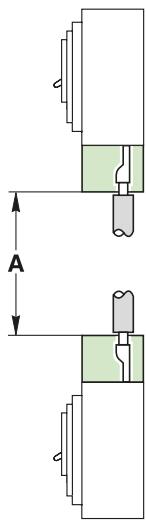

Connection by cables  
with lugs, devices with  
terminal shields.

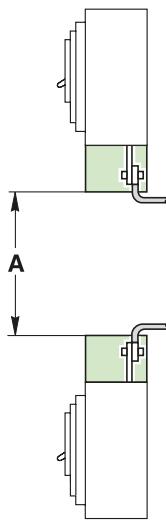

Connection by insulated  
bars, devices with  
terminal shields.

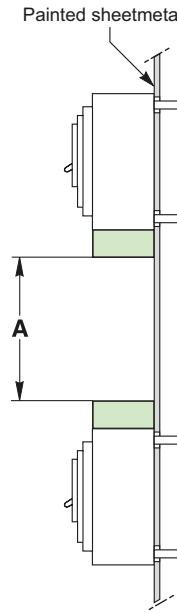

Rear connection or plug-in  
base, devices with terminal  
shields.

B


**Minimum dimensions (mm)**  
**Compact circuit breaker**

	<b>A</b>
NS630b-1600	250
NS1600b-3200	300

# Door interlock for Compact NS630b to 1600

Mounted on the left or right-hand side of the chassis, this locking device prevents opening of the door if the circuit breaker is in the connected or test positions. If the circuit breaker was connected with the door open, the door may be closed without having to disconnect the circuit breaker.

B

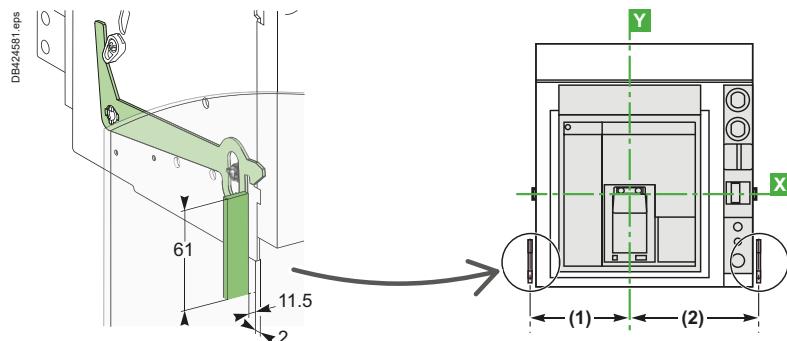


## Dimensions (mm)

Type	(1)	(2)
NS630b to 1600 (3P)	135	168
NS630b to 1600 (4P)	205	168


## Device in the connected or test positions

### Door locked

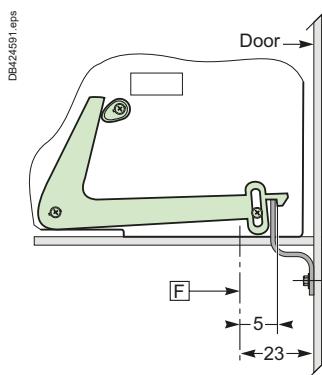

## Device in the disconnected position

### Door not locked

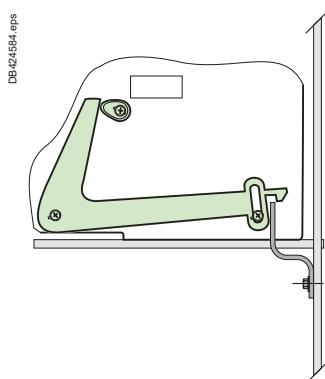

**Note:** The door interlock may be mounted on either the left or right-hand side of the chassis.

[F] Datum

### Wiring of voltage releases

During pick-up, the power consumed is approximately 150 to 200 VA. For low control voltages (12, 24, 48 V), maximum cable lengths are imposed by the voltage and the cross-sectional area of cables.

### Recommended maximum cable lengths (meter).

	MN	12 V		24 V		48 V	
		2.5 mm <sup>2</sup>	1.5 mm <sup>2</sup>	2.5 mm <sup>2</sup>	1.5 mm <sup>2</sup>	2.5 mm <sup>2</sup>	1.5 mm <sup>2</sup>
	U source 100 %	—	—	58	35	280	165
	U source 85 %	—	—	16	10	75	45
MX-XF	U source 100 %	21	12	115	70	550	330
	U source 85 %	10	6	75	44	350	210

**Note:** the indicated length is that of each of the two wires.

### 24 V DC power-supply module

#### External 24 V DC power-supply module for Micrologic (F1-, F2+)

- It is recommended to use the AD power supply due to its low stray primary-secondary capacitance. Good operation of the Micrologic Trip Unit in noisy environment is not guaranteed with other power supplies.
- The dedicated AD power supplies shall be used only for the Micrologic trip units. If the COM option is used, a second dedicated power supply shall be used.
- M2C and M6C modules can be supplied by Micrologic external AD power supply.
- The consumption of a Micrologic Trip Unit is approximately 100mA.
- The consumption of M2C and M6C modules is approximately 100mA.
- A number of 5 devices (Micrologic control units with M2C or M6C) can be connected to the same AD power supply. Add other AD power supply for more than 5 devices.
- For Micrologics control units alone, a number of 10 devices can be connected to the same AD power supply. Add other AD power supply for more than 10 Micrologics.
- If the installation is shared between several panels, one AD power supply shall be added for each panel.
- AD power supply dedicated to Micrologics trip units shall not be connected to earth. (F1-, F2+).

#### External 24 V DC power supply for Communication bus

- A dedicated 24 V DC power supply shall be used for the communication devices.
- Do not connect the positive terminal (E1) to earth.
- The negative terminal (E2) can be connected to earth.
- A number of communication modules (BCM, IFE, IFM, I/O, FDM...) can be connected to the same 24 V DC power supply. Refer below the devices consumption table to avoid exceeding the maximum current delivered by the 24 V DC power supply.

#### ULP module consumption

The table below lists the ULP module consumption.

Module	Typical Consumption (24 V DC at 20 °C / 68 °F)	Maximum Consumption (19.2 V DC at 60 °C / 140 °F)
BCM ULP for Masterpact and Compact NS	40 mA	65 mA
Micrologic 5 or 6 trip unit for Compact NSX circuit breakers	30 mA	55 mA
BSCM for Compact NSX circuit breakers	9 mA	15 mA
2-wire RS 485 isolated repeater	15 mA	19 mA
FDM121 display for LV circuit breaker	21 mA	30 mA
IFM Modbus-SL interface for LV circuit breaker	21 mA	30 mA
IFE Ethernet interface for LV circuit breaker	120 mA	3 A (with gateway)
I/O input/output interface module for LV circuit breaker	165 mA	420 mA
Maintenance module	0 mA (the maintenance module has its own power supply)	0 mA (the maintenance module has its own power supply)

#### Installation recommendation

- The 24 V DC wires (output of the 24 V DC power supply) shall be twist together.
- The 24 V DC wires (output of the 24 V DC power supply) must cross all power cables perpendicularly.
- The technical characteristics of the external 24 V DC power-supply module for Micrologic control units are indicated on page A-28.

**Note:** wiring of ZSI: it is recommended to use twisted shielded cable. The shield must be connected to earth at both ends.

# Temperature derating

## Compact NS devices equipped with electronic trip units

Compact circuit breakers have been tested for operation in industrial atmospheres.

It is recommended that the equipment be cooled or heated to the proper operating temperature and kept free of excessive vibration and dust.

### Compact NS630b to NS1600 [1]

The table below indicates the maximum rated-current value for each type of connection, depending on the ambient temperature. For mixed connections, use the same derating values as for horizontal connections.

Version Connection	Fixed device							Vertical rear						
	Front or horizontal rear							Vertical rear						
temp. Ti [2]	40	45	50	55	60	65	70	40	45	50	55	60	65	70
NS630b N/L	630	630	630	630	630	630	630	630	630	630	630	630	630	630
NS800 N/L	800	800	800	800	800	800	800	800	800	800	800	800	800	800
NS1000 N/L	1000	1000	1000	1000	1000	1000	1000	1000	1000	1000	1000	1000	1000	1000
NS1250 N	1250	1250	1250	1250	1250	1240	1090	1250	1250	1250	1250	1250	1250	1180
NS1600 N	1600	1600	1560	1510	1470	1420	1360	1600	1600	1600	1600	1600	1510	1460

Version Connection	Withdrawable device													
	Front or horizontal rear							Vertical rear						
temp. Ti [2]	40	45	50	55	60	65	70	40	45	50	55	60	65	70
NS630b N/L	630	630	630	630	630	630	630	630	630	630	630	630	630	630
NS800 N/L	800	800	800	800	800	800	800	800	800	800	800	800	800	800
NS1000 N/L	1000	1000	1000	1000	1000	1000	920	1000	1000	1000	1000	1000	1000	990
NS1250 N	1250	1250	1250	1250	1250	1170	1000	1250	1250	1250	1250	1250	1250	1090
NS1600 N	1600	1600	1520	1480	1430	1330	1160	1600	1600	1600	1560	1510	1420	1250

### Compact NS1600b to 3200

Version Connection	Fixed device													
	Front or horizontal rear							Vertical rear						
temp. Ti [2]	40	45	50	55	60	65	70	40	45	50	55	60	65	70
NS1600b N	1600	1600	1600	1600	1500	1450	1400	1600	1600	1600	1600	1600	1550	1500
NS2000 N	2000	2000	2000	2000	1900	1800	1700	2000	2000	2000	2000	2000	1900	1800
NS2500 N	2500	2500	2500	2500	2500	2500	2500	2500	2500	2500	2500	2500	2500	2500
NS3200 N	-	-	-	-	-	-	-	3200	3200	3200	3180	3080	2970	2860

[1] For a circuit breaker mounted in horizontal position, the derating to be applied is equivalent to that of a front or horizontal rear connected circuit breaker.

[2] Ti: temperature around the circuit breaker and its connections.

# Power dissipation / Resistance

## Compact NS devices equipped with electronic trip units

B

The values indicated in the tables opposite are typical values.

### **Power dissipated per pole (P/pole) in Watts (W)**

The value indicated in the table is the power dissipated at  $I_N$ , 50/60 Hz, for a three-pole or four-pole circuit breaker (these values can be higher than the power calculated on the basis of the pole resistance). Measurement and calculation of the dissipated power are carried out in compliance with the recommendations of Annex G of standard IEC 60947-2.

### **Resistance per pole (R/pole) in milliohms ( $m\Omega$ )**

The value of the resistance per pole is provided as a general indication for a new device.

The value of the contact resistance must be determined on the basis of the measured voltage drop, in accordance with the manufacturer's test procedure (expert card ABT no. FE 05e).

**Note:** this measurement is not sufficient to determine the quality of the contacts, i.e. the capacity of the circuit breaker to carry its rated current.

#### Compact NS630b to 1600

<b>Version</b>	<b>Fixed device</b>					
	<b>N</b>		<b>L</b>		<b>LB</b>	
	R/pole	P/pole	R/pole	P/pole	R/pole	P/pole
NS630b	0.026	10	0.039	15	0.056	15
NS800	0.026	15	0.039	20	0.056	20
NS1000	0.026	22	0.039	34		
NS1250	0.026	44				
NS1600	0.026	74				

<b>Version</b>	<b>Withdrawable device</b>					
	<b>N</b>		<b>L</b>		<b>LB</b>	
	R/pole	P/pole	R/pole	P/pole	R/pole	P/pole
NS630b	0.038	19	0.072	34	0.086	34
NS800	0.038	30	0.072	40	0.086	40
NS1000	0.038	50	0.072	77		
NS1250	0.036	84				
NS1600	0.036	154				

#### Compact NS1600b to 3200

<b>Version</b>	<b>Fixed device</b>					
	<b>N</b>					
	R/pole	P/pole				
NS1600b	0.019	84				
NS2000	0.013	84				
NS2500	0.008	100				
NS3200	0.008	227				



## Dimensions and connection

Compact NS630b to 1600 (fixed version)	
Dimensions .....	C-2
Mounting .....	C-3
Front-panel cutouts .....	C-4
Rotary handle.....	C-5
Compact NS630b to 1600 (withdrawable version)	
Dimensions, mounting and cutouts.....	C-6
Rotary handle.....	C-7
Compact NS1600b to 3200 (fixed version)	
Dimensions .....	C-8
Compact NS630b to 3200	
External modules .....	C-9
FDM121 switchboard display .....	C-13
FDM128 switchboard display .....	C-14
Accessories NS630b to 3200 .....	C-15
Compact NS630b to 1600 (fixed version)	
Bars .....	C-16
Cables with lugs and bare cables.....	C-19
Compact NS630b to 1600 (plug-in and withdrawable versions)	
Bars .....	C-20
Compact NS1600b to 3200 (fixed version).....	C-23
Power connections for Compact NS630b to 1600	
Recommended drilling dimensions.....	C-24
Power connections for Compact NS1600b to 3200	
Recommended drilling dimensions.....	C-25
Power connections for Compact NS630b to 3200	
Sizing of bars .....	C-28

C


# Compact NS630b to 1600 (fixed version)

## Dimensions


### Manual control

#### Front connection (N, L)

DB424676.eps

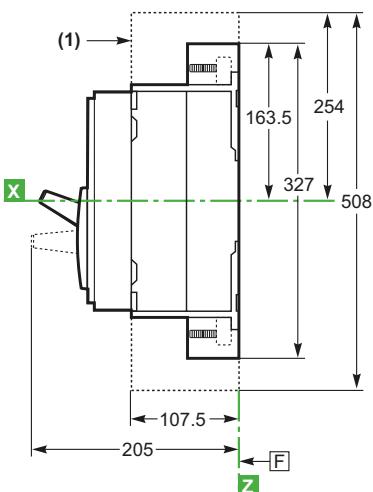


DB424677.eps

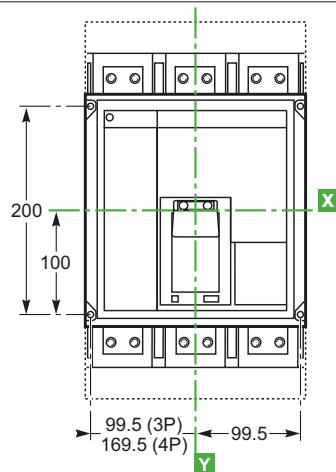


[1] Terminal shields are optional.

#### Rear connection (N, L, LB)

DB424676.eps

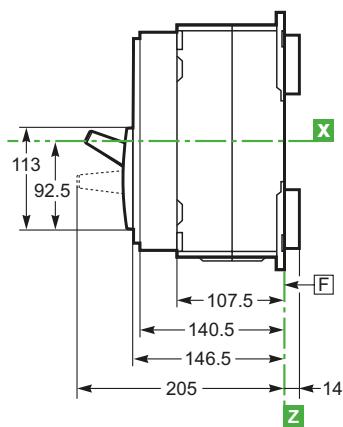


DB424675.eps

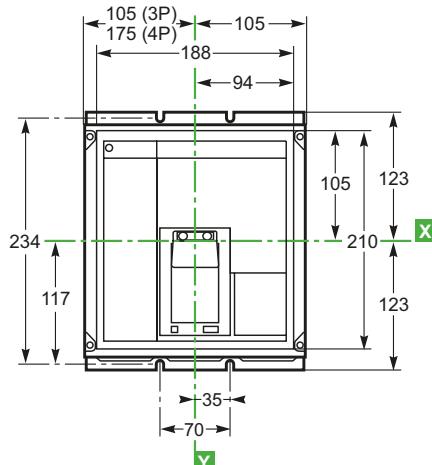


### Electrical control

#### Front and rear connection (N, L, LB)

DB424684.eps

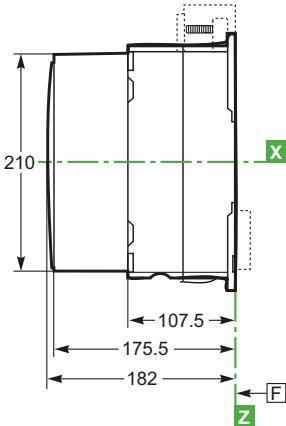

DB424674.eps

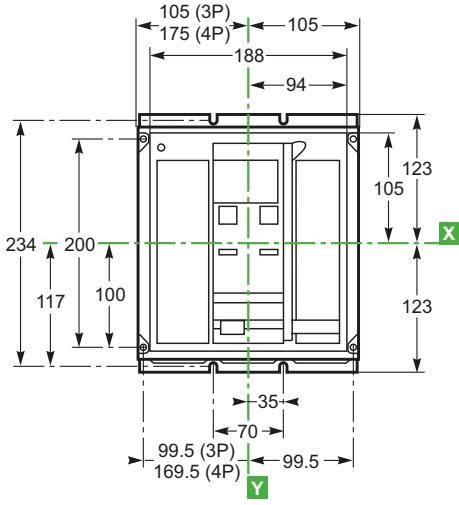

[F] : Datum.


**Note:** Dimensions for front and rear connection on electrically operated devices are identical to those for manually operated devices.

# Compact NS630b to 1600 (fixed version)


## Mounting

### Front connection

#### On backplate

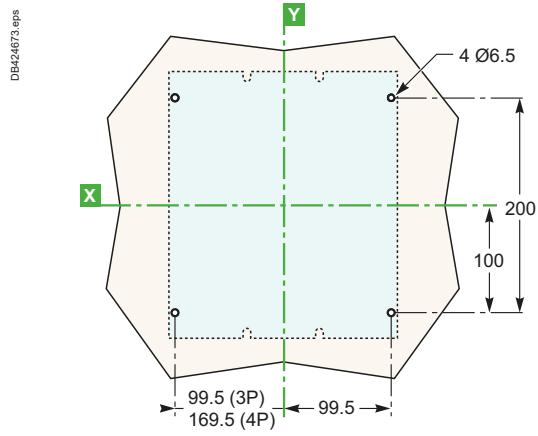


#### On rails

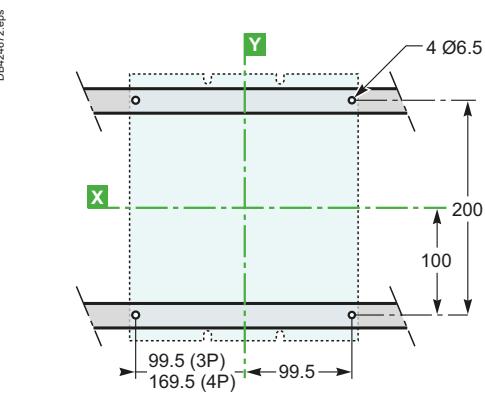


C

### Rear connection

#### On backplate

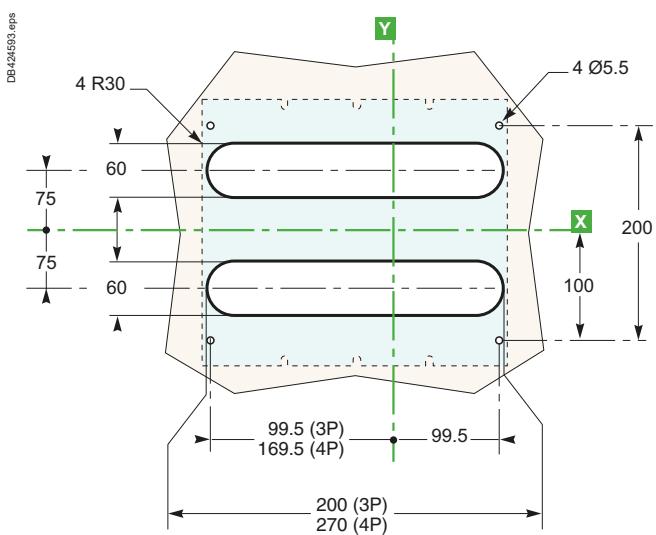

#### On rails

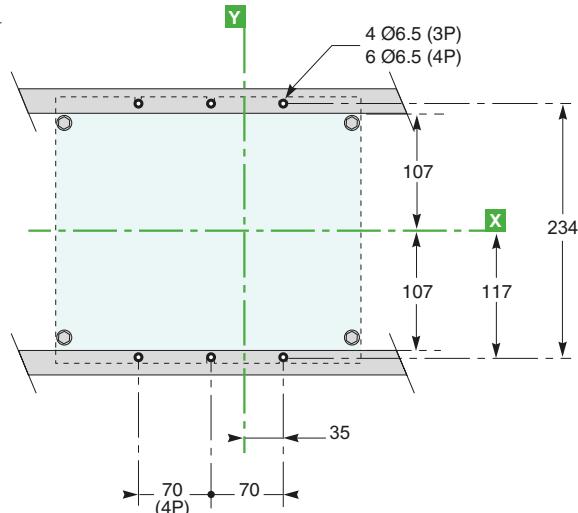

**Note:** Mounting parameters for electrically operated devices are identical to those for manually operated devices.


**X** and **Y** are the symmetry planes for a 3-pole device

**Z** is the back plane of the device.

## Compact NS630b to 1600 (fixed version)

## Front-panel cutouts


## Toggle control

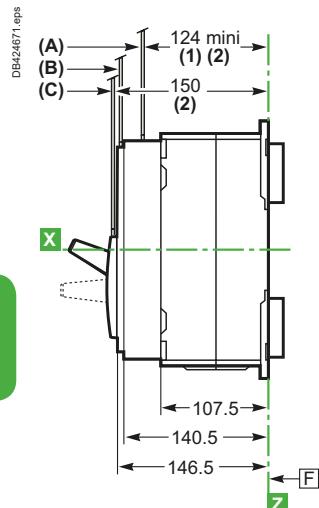


[F] : Datum.

[1] Without escutcheon.

[2] With escutcheon.

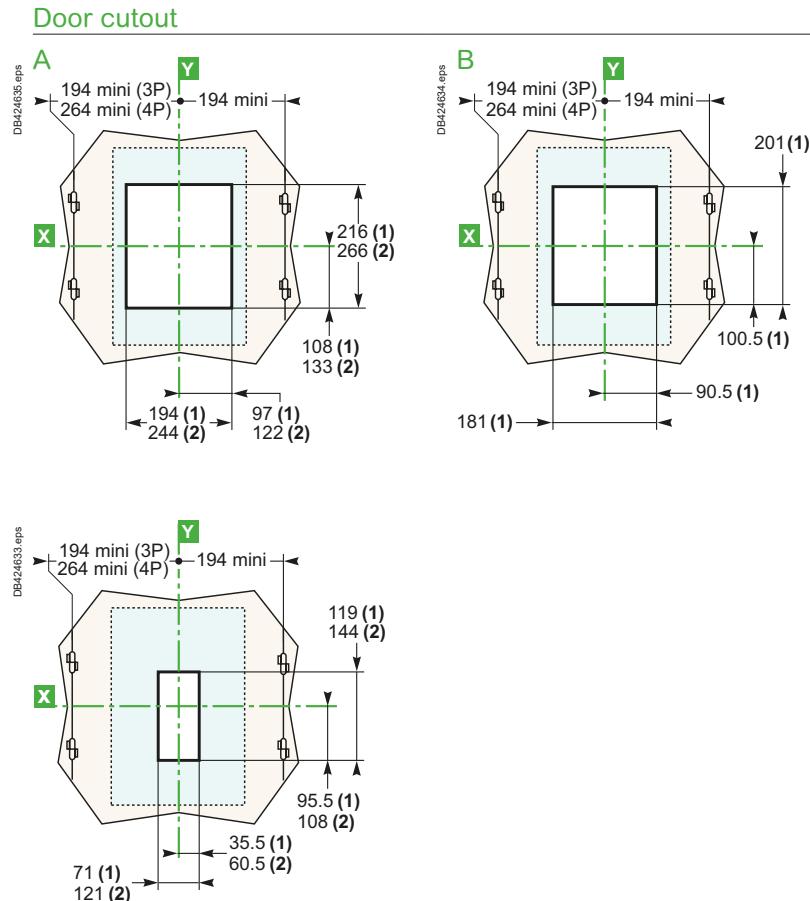


## Electrical control

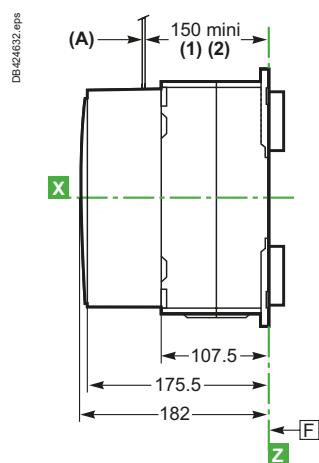

[F] : Datum.

[1] Without escutcheon.

[2] With escutcheon.

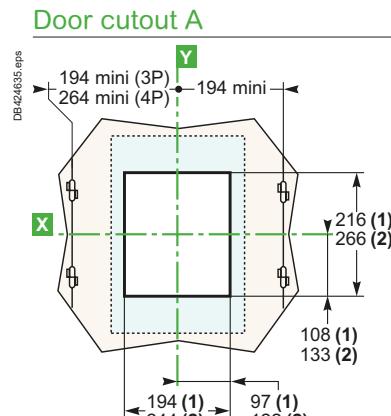


# Compact NS630b to 1600 (fixed version)


## Rotary handle

### Direct rotary handle

#### Dimensions

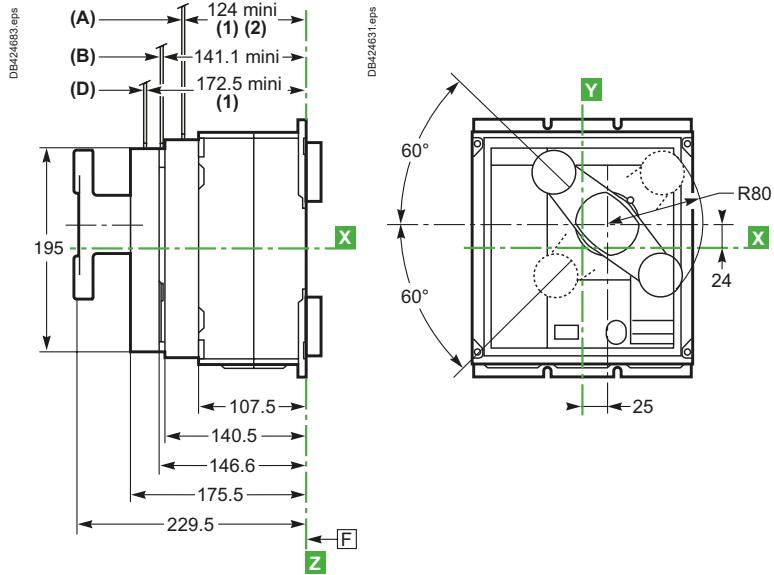

#### Door cutout

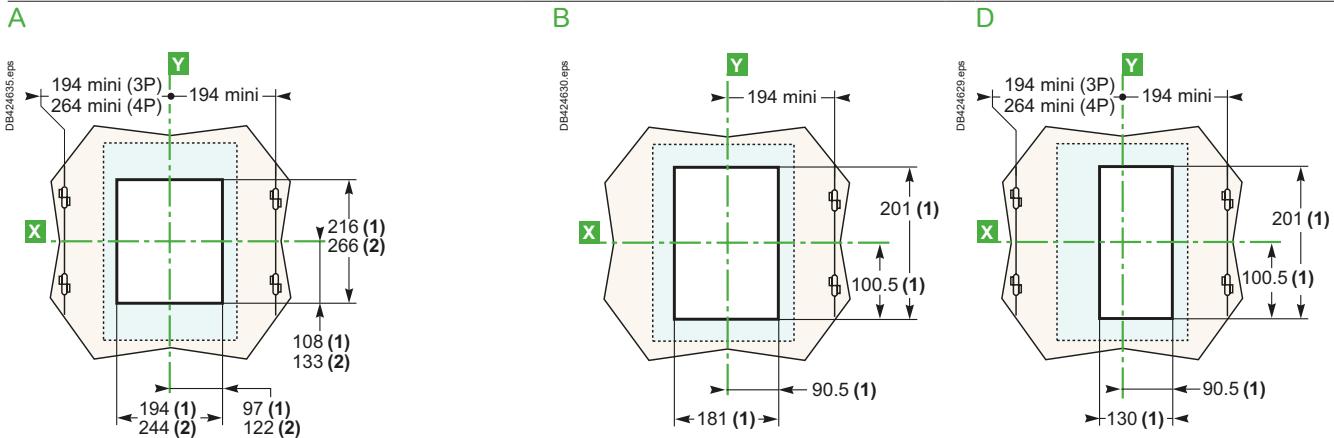


[1] Without escutcheon.


[2] With escutcheon.

### Extended rotary handle

#### Dimensions

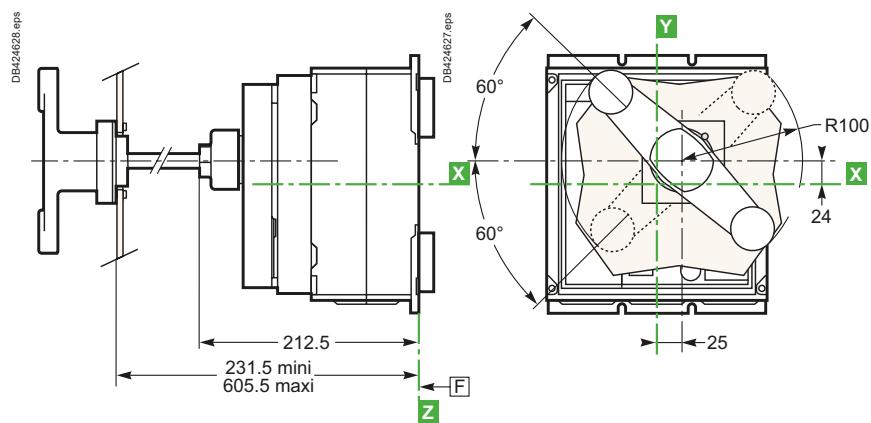

#### Door cutout

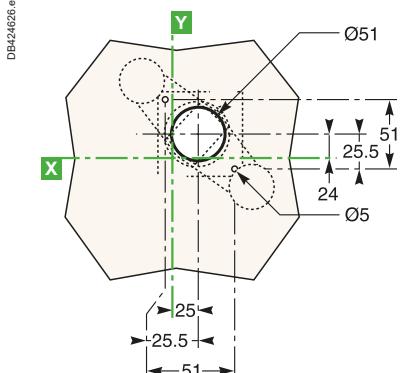

[F] : Datum.


Note: **X** and **Y** are the symmetry planes for a 3-pole device. **Z** is the back plane of the device.

# Compact NS630b to 1600 (withdrawable version)



## Dimensions, mounting and cutouts

### Dimensions

#### Manual control

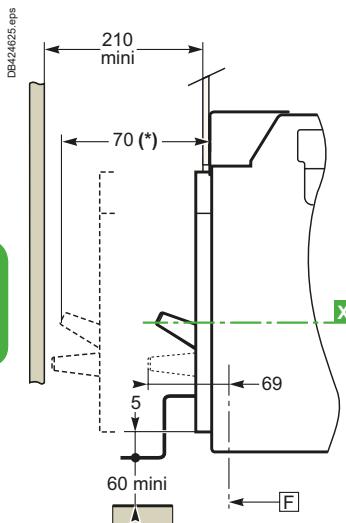



#### Electrical control

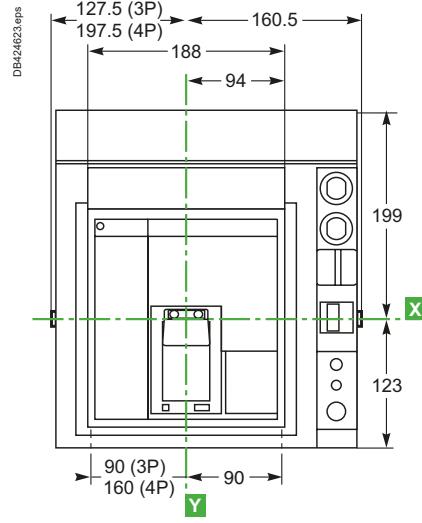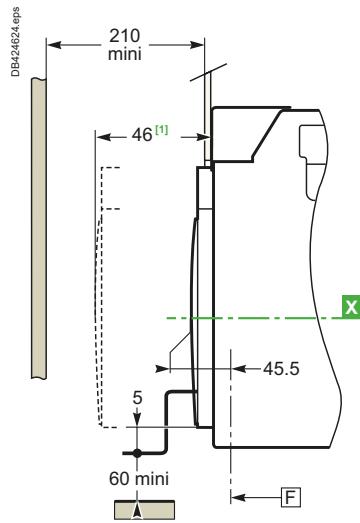


[1] Withdrawable position

### Mounting

#### Bottom mounting on base plate or rails

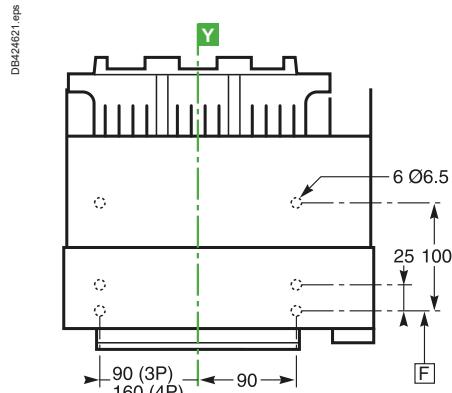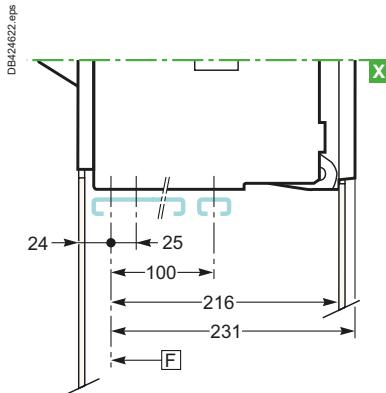


#### Vertical on uprights or backplate

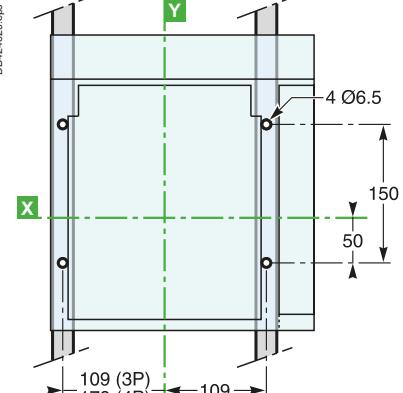


### Cutouts

#### Door cutout

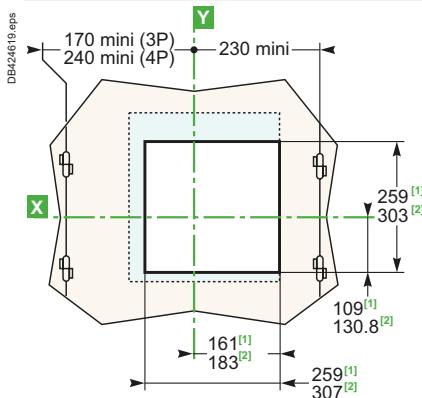

#### Rear panel cutout

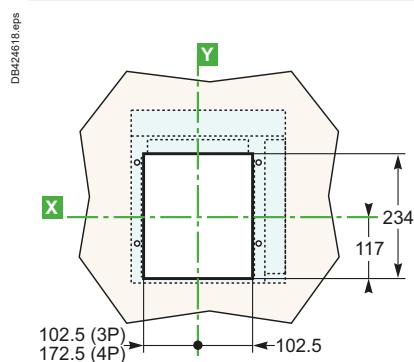

[1] Without escutcheon.

[2] With escutcheon.

F : Datum.


Note: X and Y are the symmetry planes for a 3-pole device.

# Compact NS630b to 1600 (withdrawable version)

## Rotary handle


### Direct rotary handle

#### Dimensions

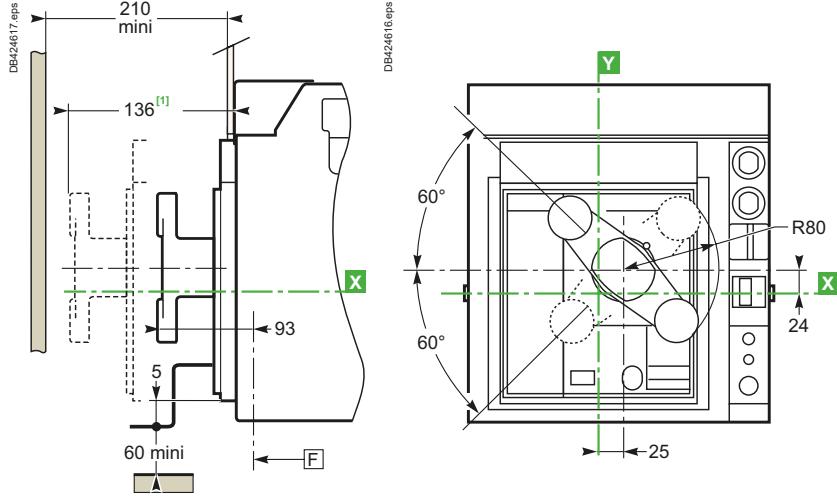

[1] Withdrawable position.


#### Door cutout

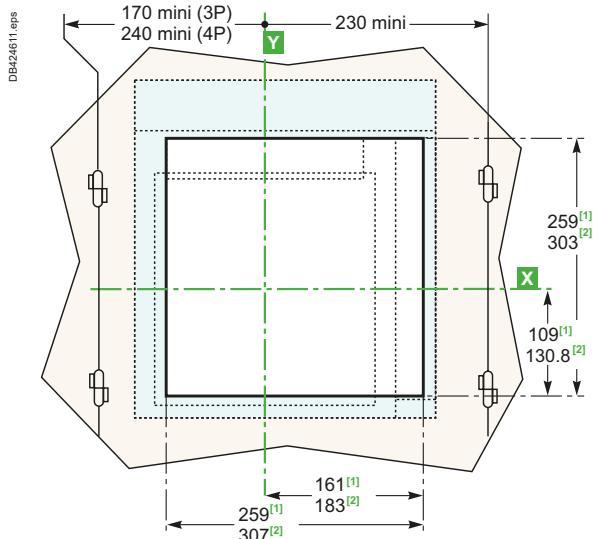


[1] Without escutcheon.  
[2] With escutcheon.

### Extended rotary handle

#### Dimensions

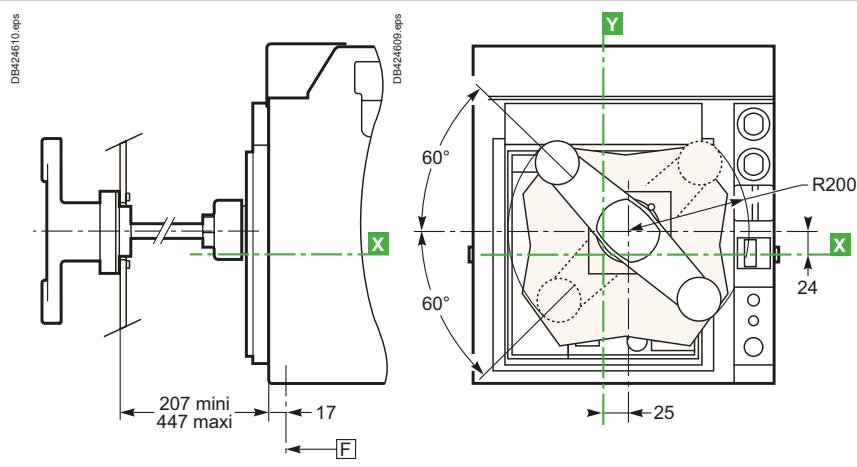

#### Door cutout

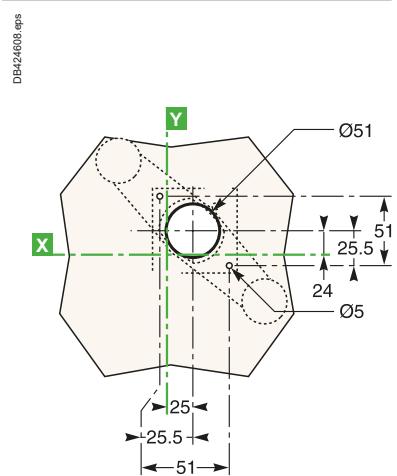


Note: X and Y are the symmetry planes for a 3-pole device.

# Compact NS1600b to 3200 (fixed version)


## Dimensions

### Dimensions

DBA424607.eps

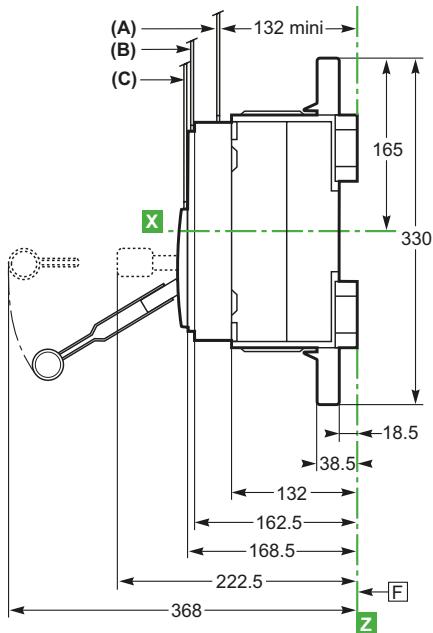


DBA424606.eps

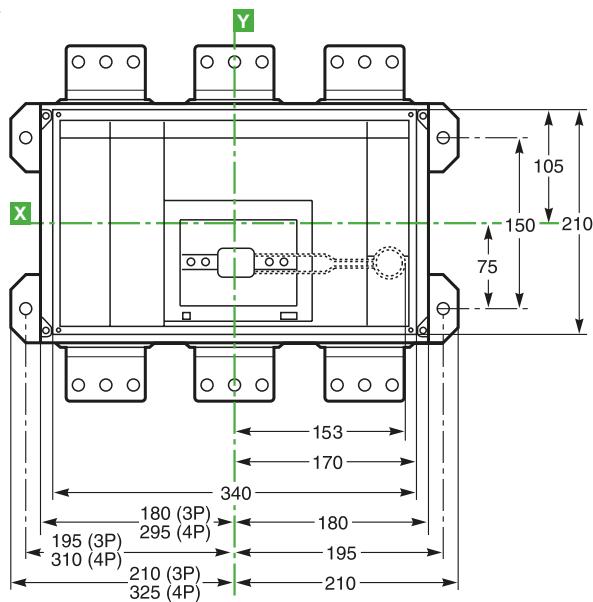

### Door cutout (A, B, C)


A

DBA424605.eps

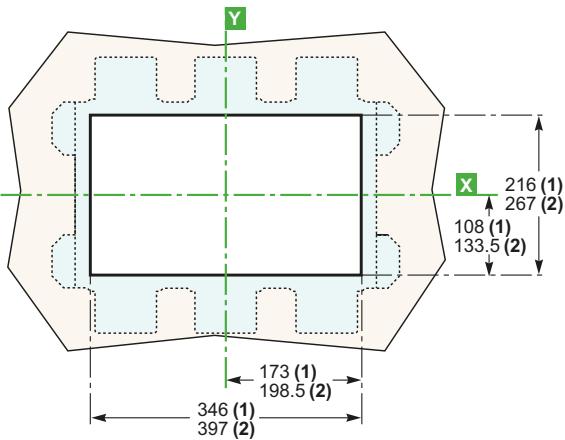


B

DBA424604.eps

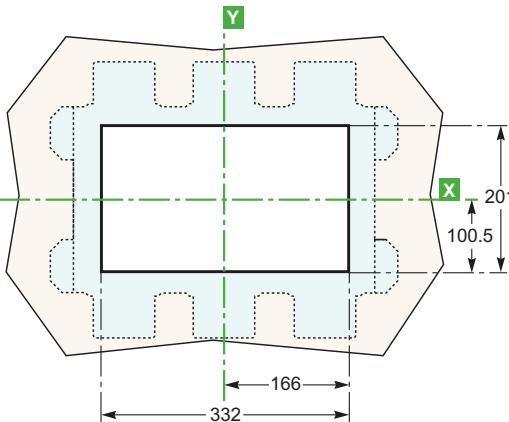


C

DBA424603.eps

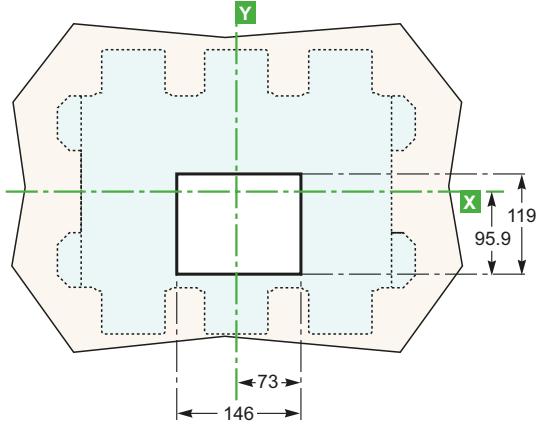

### Mounting on rails

DBA424602.eps

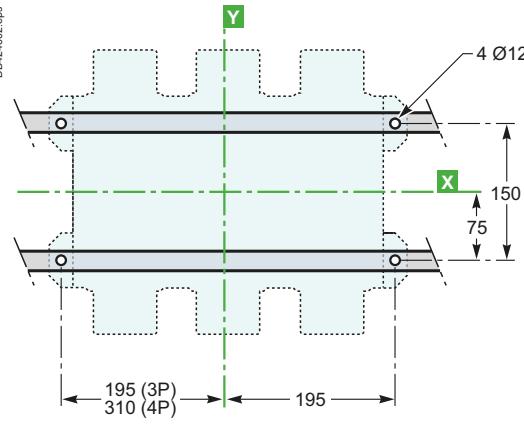

[F] : Datum.


[1] Without escutcheon.

[2] With escutcheon.


Note: X and Y are the symmetry planes for a 3-pole device.

Dimensions and connection  
**Compact NS630b to 3200**  
External modules


### Control-wire connections to terminal block

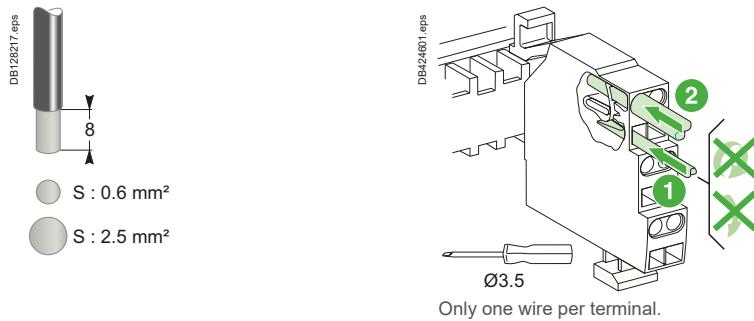

### External power-supply module (AD)

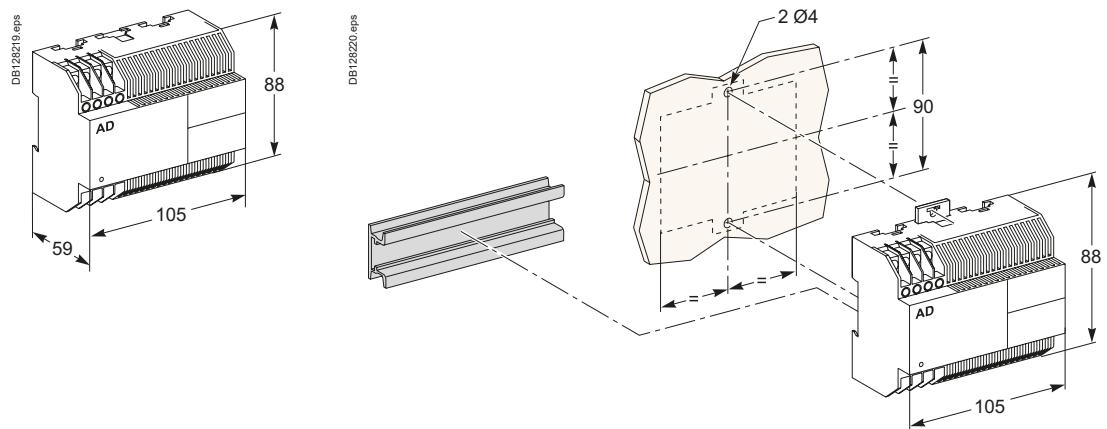


### Battery module (BAT)

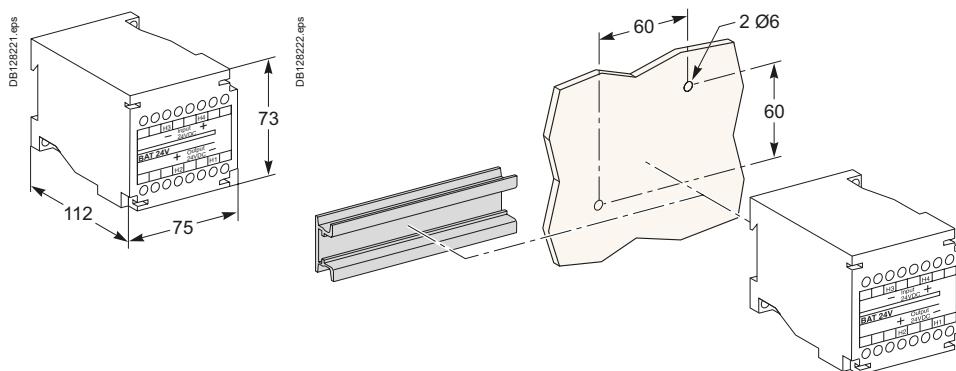

### Chassis communication module



#### Modbus

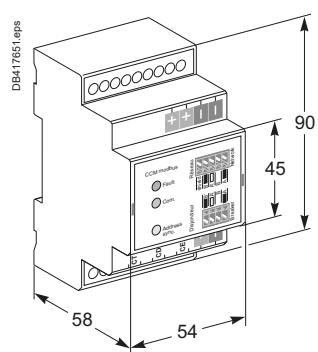



# Compact NS630b to 3200

## External modules



### I/O (Input/Output) application module

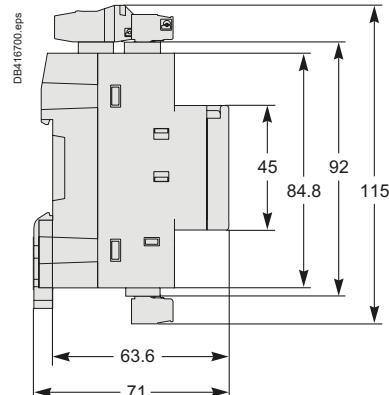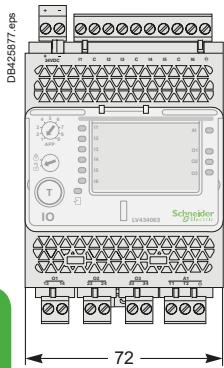



### IFM - Modbus-SL interface

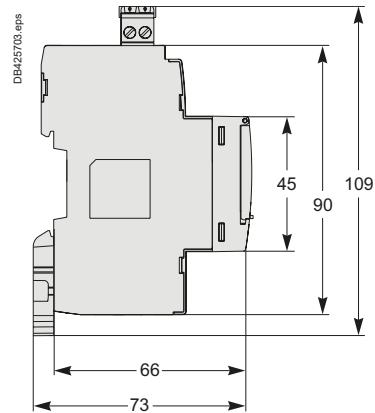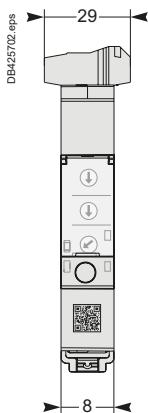

### IFE - Ethernet interface

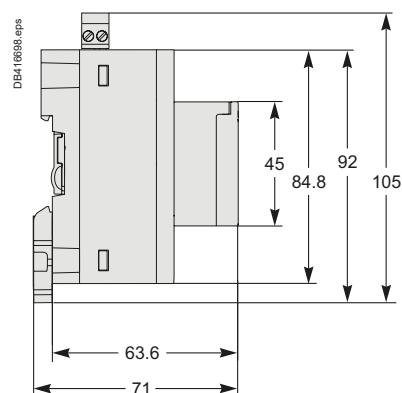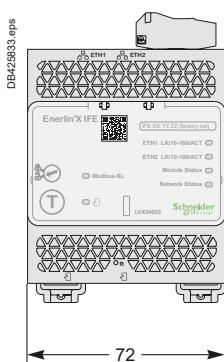


### Com'X 200

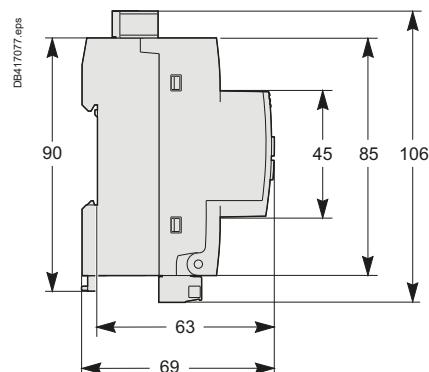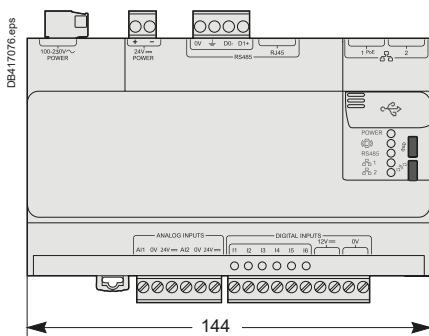


### External sensor for neutral

400/1600 A (NS630b to 1600)

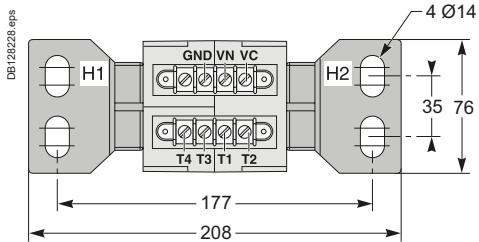


1000/4000 A (NS1600b to 3200)

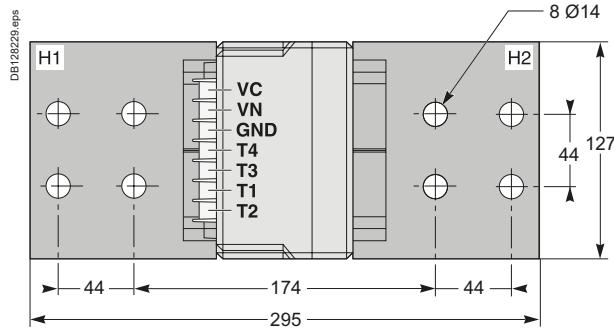


C

### Installation

400/1600 (NS630b to NS1600)

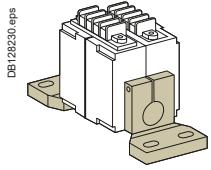

1000/4000 A (NS1600b to NS3200)

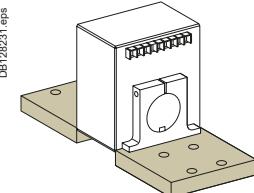


# Compact NS630b to 3200



## External modules

### Rectangular sensor for earth leakage protection (Vigi)


280 x 115 mm window

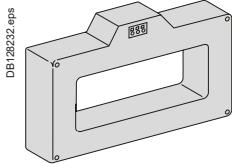



DB128232.eps

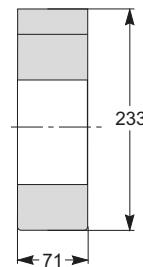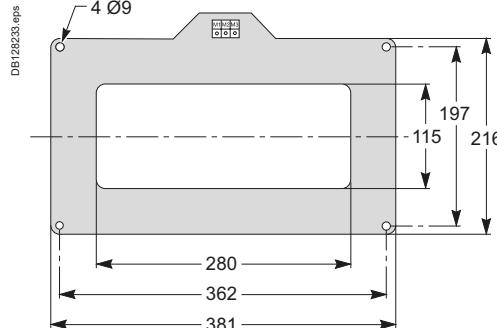

470 x 160 mm window

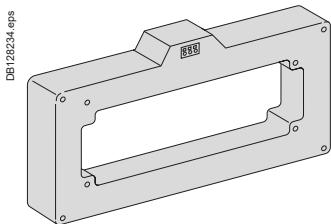

DB128234.eps

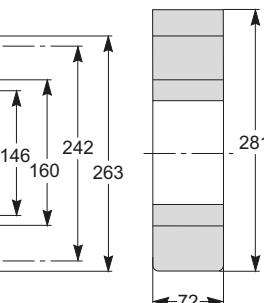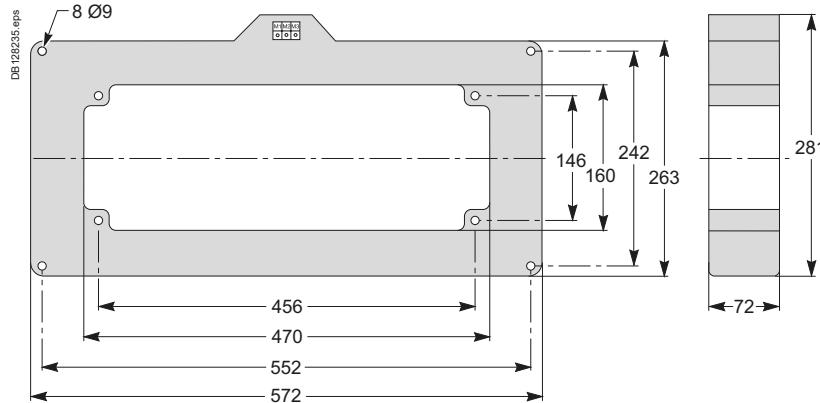


Busbars	$I \leq 1600 \text{ A}$	$I \leq 3200 \text{ A}$
Window (mm)	280 x 115	470 x 160
Weight (kg)	14	18

### Busbars path

280 x 115 mm window


Busbars spaced 70 mm centre-to-centre

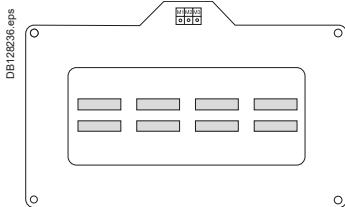


2 bars 50 x 10

470 x 160 mm window


Busbars spaced 115 mm centre-to-centre

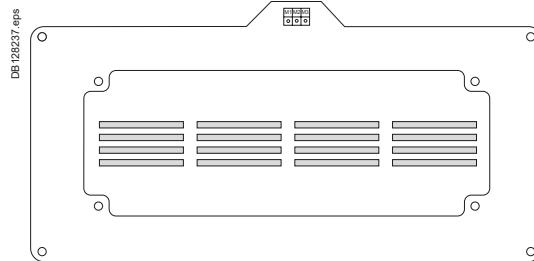

4 bars 100 x 5

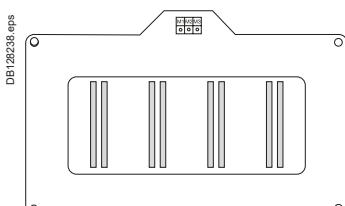



2 bars 100 x 5

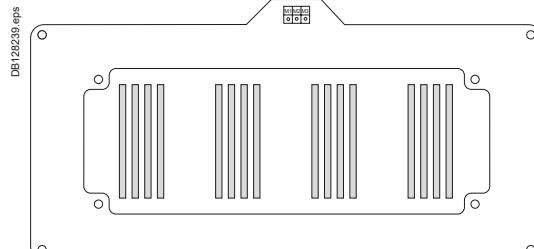

4 bars 125 x 5




# FDM121 switchboard display

## Dimensions


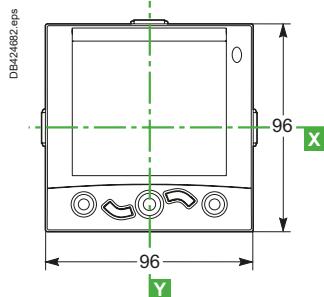
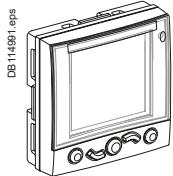


## Mounting


### Through panel

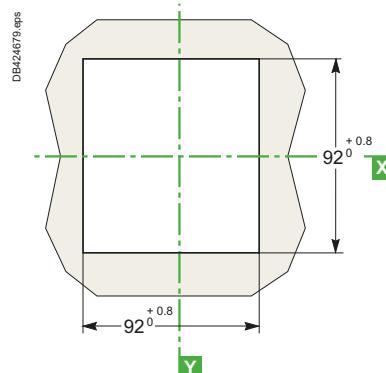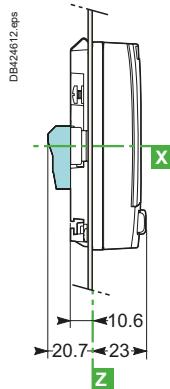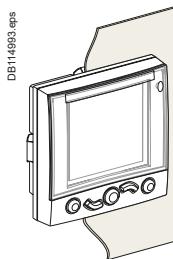

### On panel

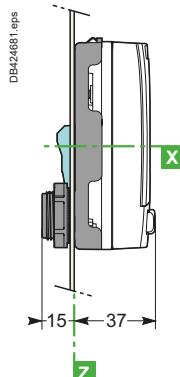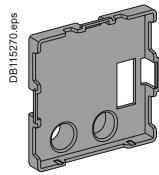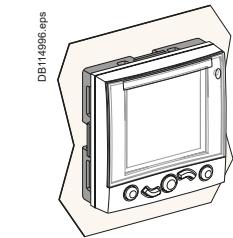


Connector (optional).

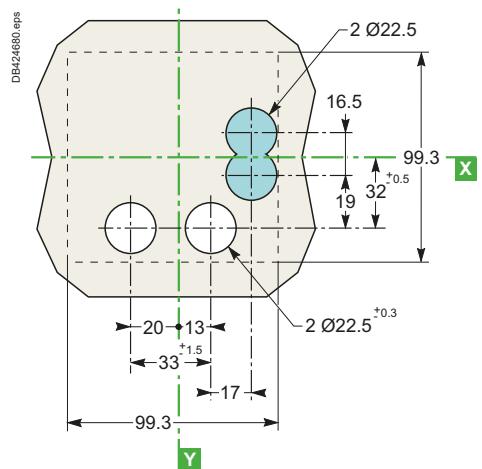


# FDM128 switchboard display

## Dimensions



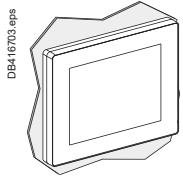


C

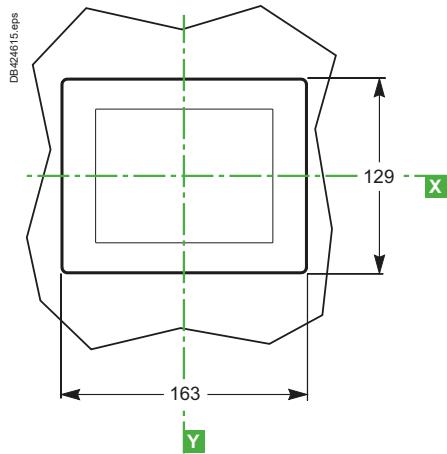


## Mounting

### On panel

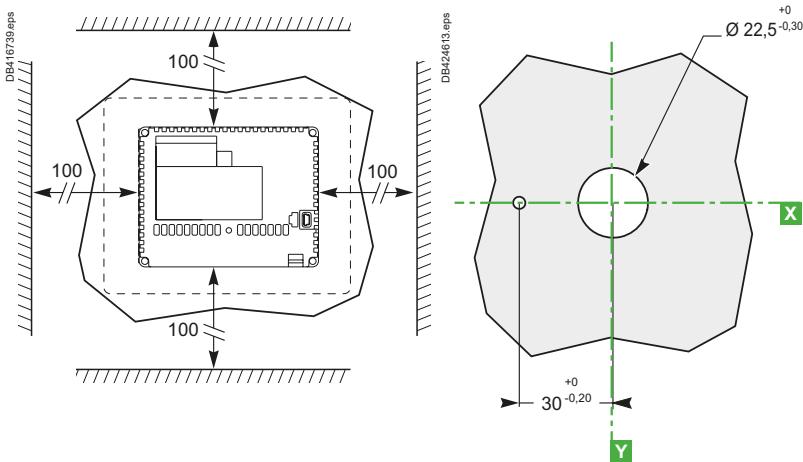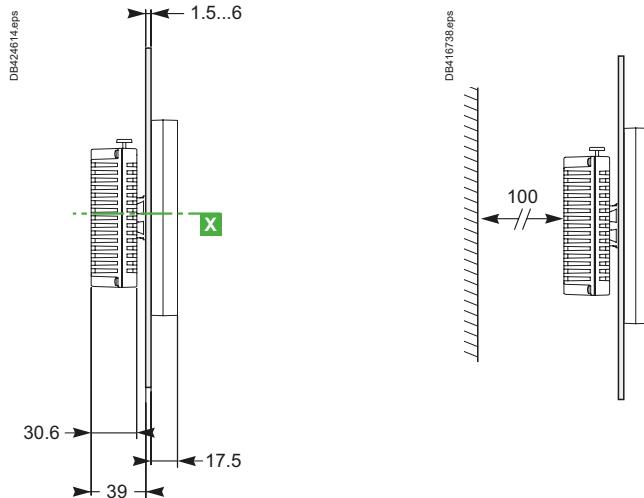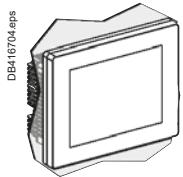


## Escutcheon

### NS630b to NS1600 (fixed control)

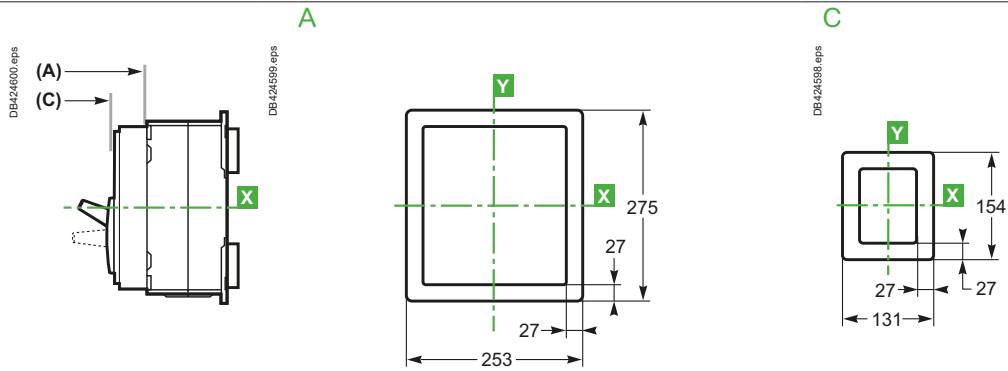


C

### NS630b to NS1600 (withdrawable control)

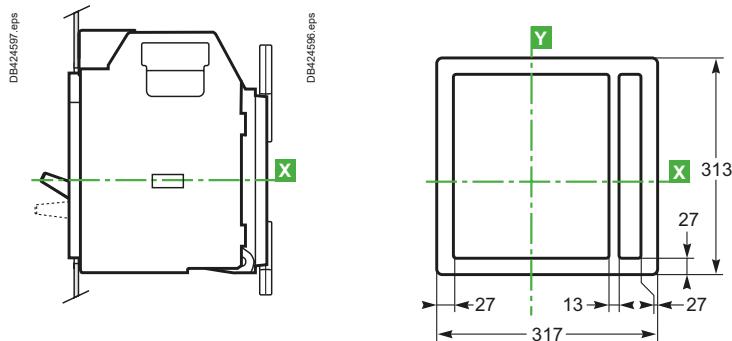





### NS1600b to NS3200 (fixed control)

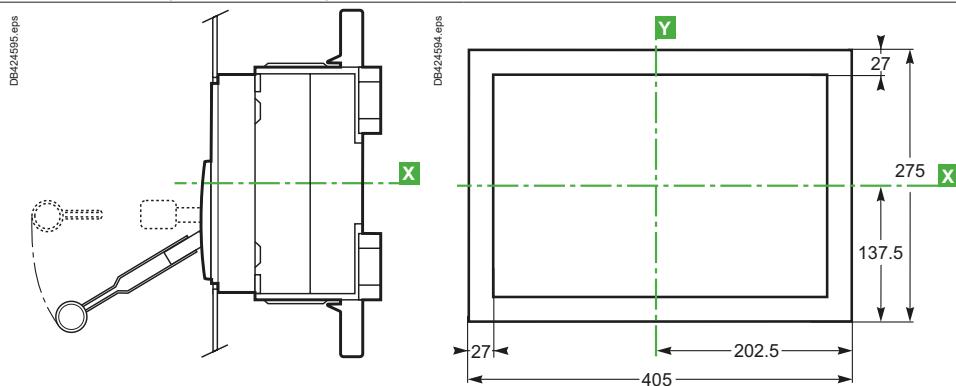

## Compact NS630b to 1600 (fixed version)





## Bars

## Horizontal rear connection

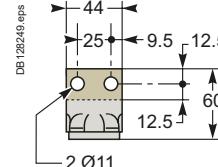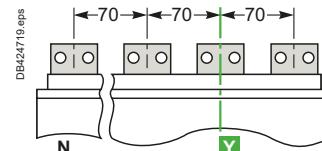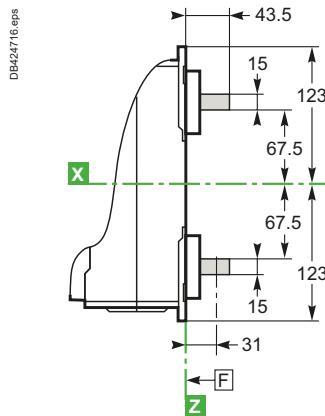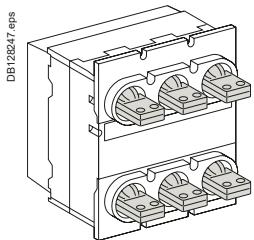




C

## Vertical rear connection

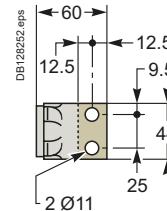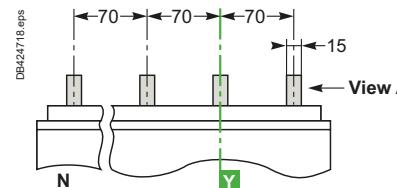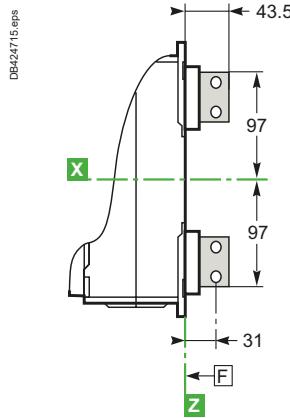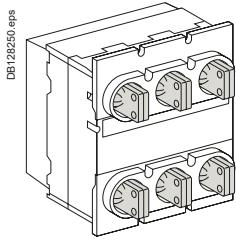


View A detail.

## Front connection

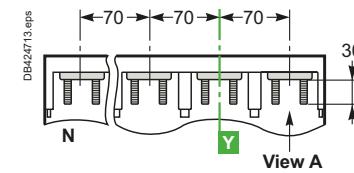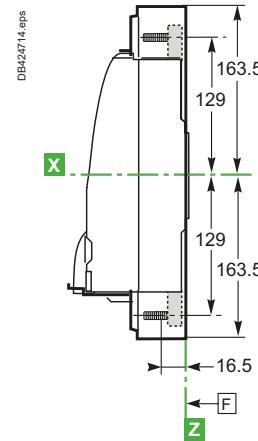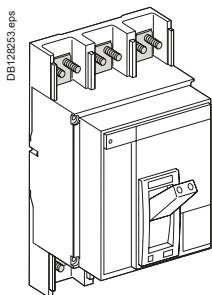

Top terminal

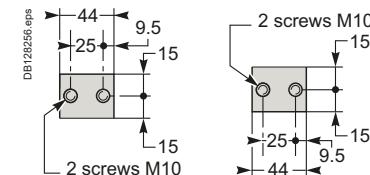

Bottom terminal

View A detail.


[F] : Datum.

**Note:** Recommended connection screws: M10 class 8.8. Tightening torque: 50 Nm with contact washer.


# Compact NS630b to 1600 (fixed version)

## Bars

### Front connection with spreaders

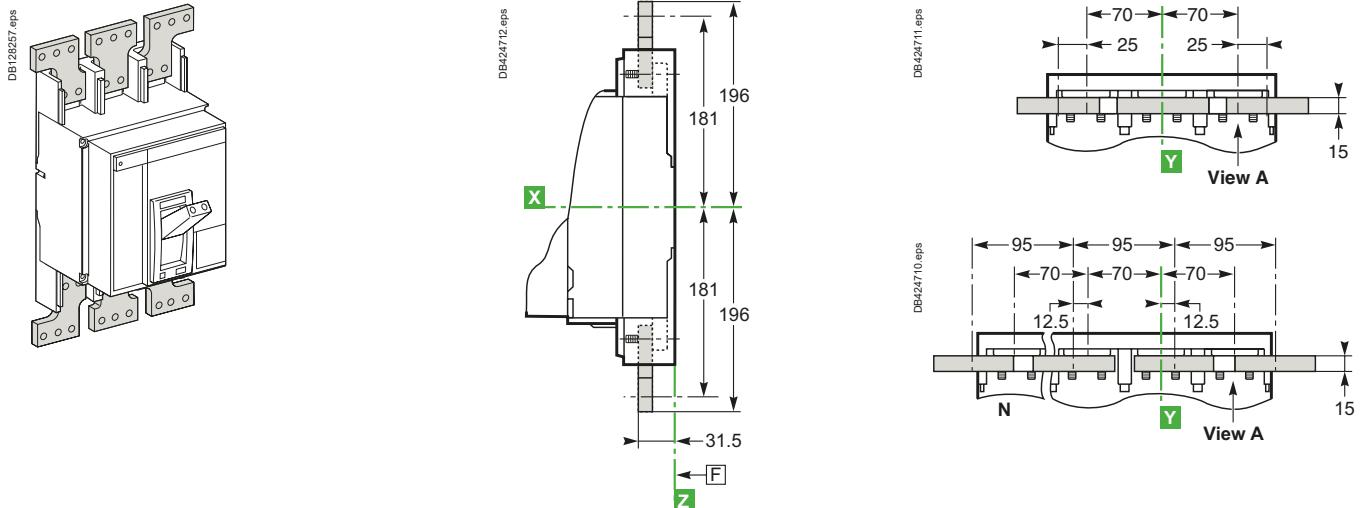


### Rear connection with spreaders

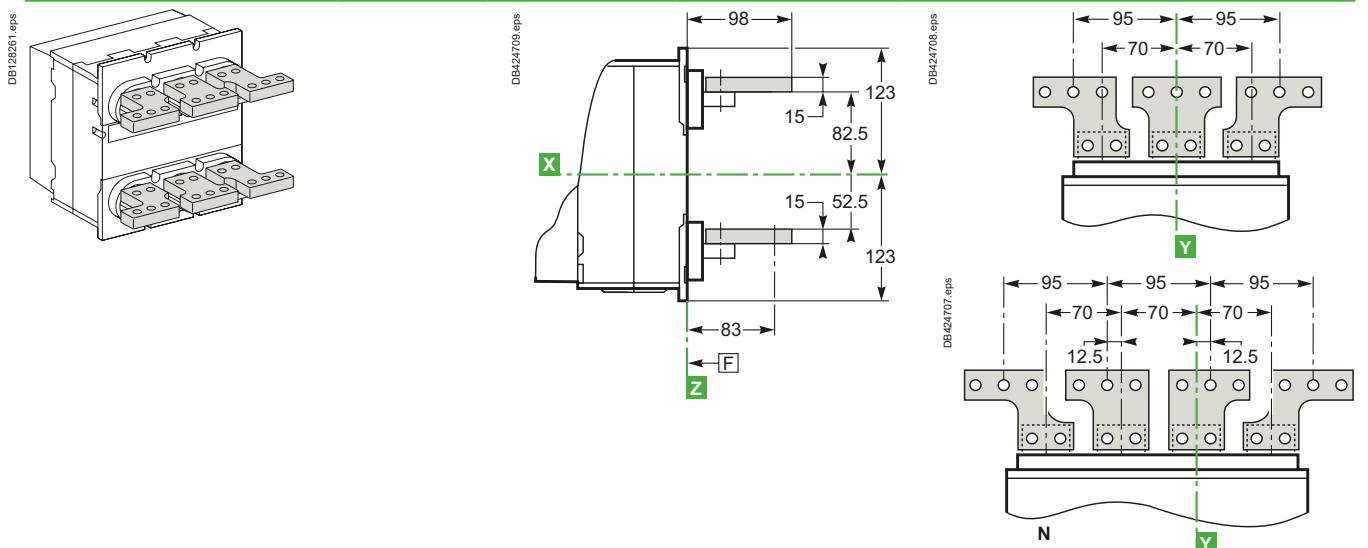


### Spreader detail


#### Middle left or middle right spreader for 4P

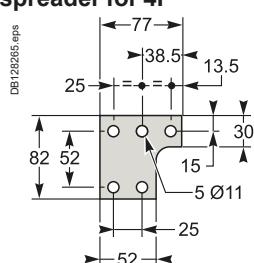


#### Middle spreader for 3P

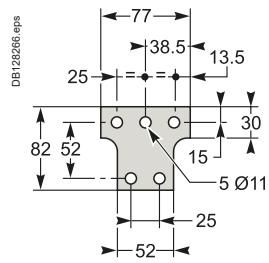

#### Left or right spreader for 4P

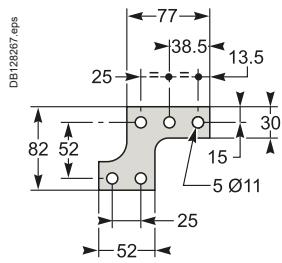

#### Left or right spreader for 3P

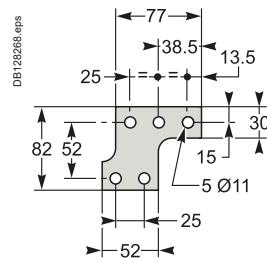

View A detail.





[F] : Datum.

Note: [X] and [Y] are the symmetry planes for a 3-pole device.

## Compact NS630b to 1600 (fixed version)

## Bars

## Front connection with vertical-connection adapters

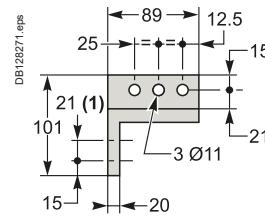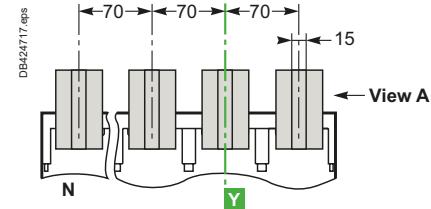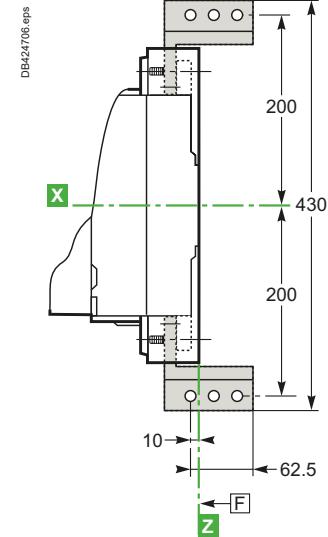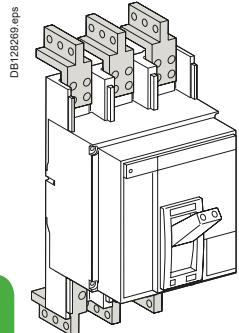

View A detail.

[F] : Datum.




**Note:** [1] two mounting possibilities for vertical-connection adapters (pitch 21 mm).  
Recommended connection screws: M10 class 8.8.

Tightening torque: 50 Nm with contact washer.

# Compact NS630b to 1600 (fixed version)




## Cables with lugs and bare cables

#### Front connection with vertical-connection adapters and cable-lug adapters

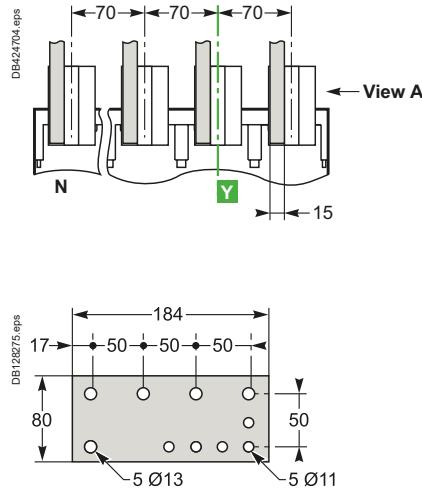
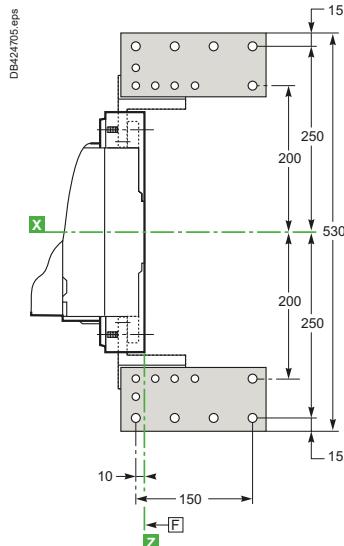
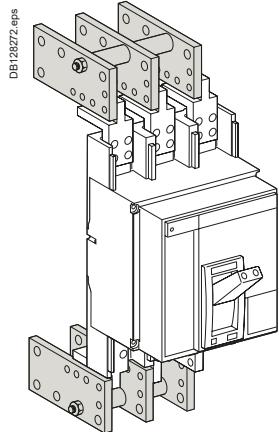


[View A detail.](#)

## Lugs

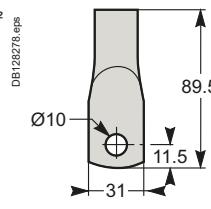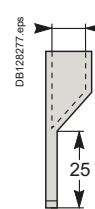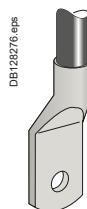




## Fixed circuit breaker with 4-cable bare-cable connectors (240 mm<sup>2</sup>)

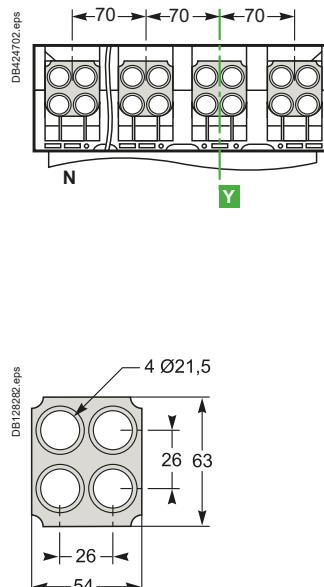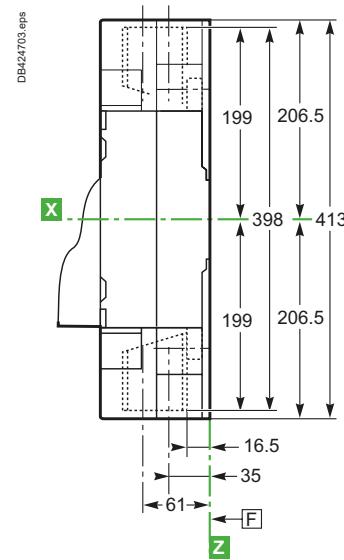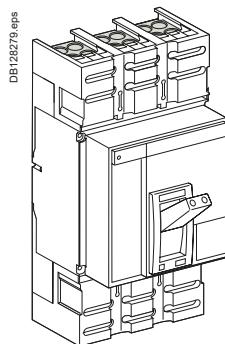

F : Datum.




Compact NS630b to 1600  
(plug-in and withdrawable versions)  
Bars

## Horizontal rear connection

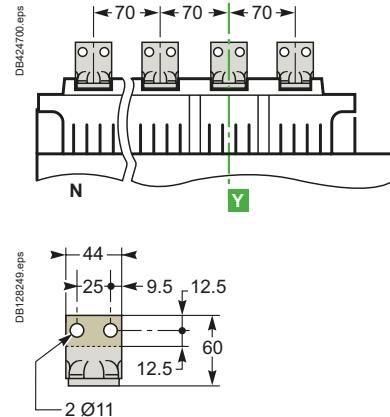
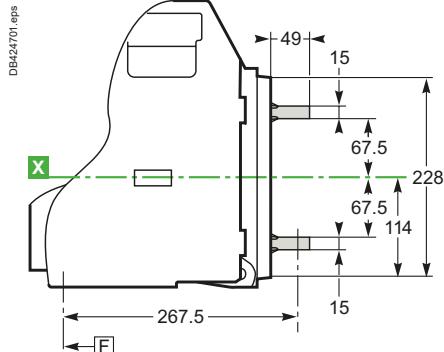
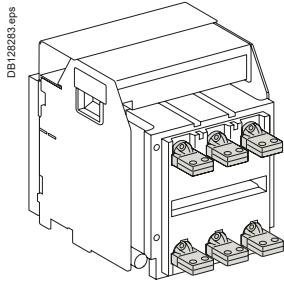


C

## Vertical rear connection

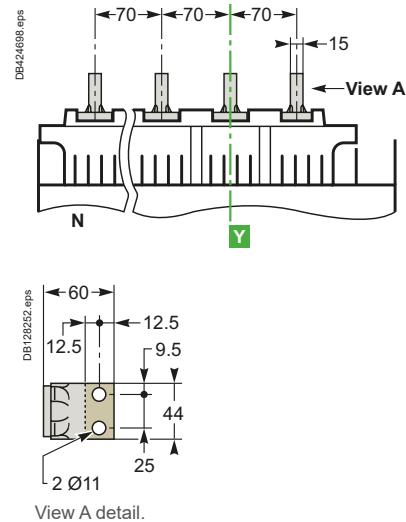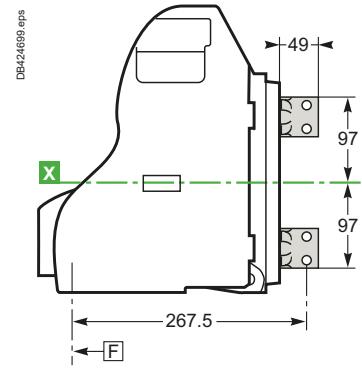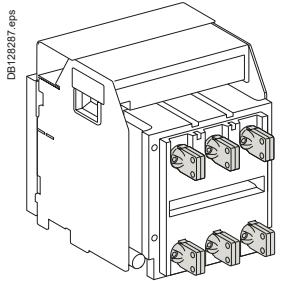

## Front connection

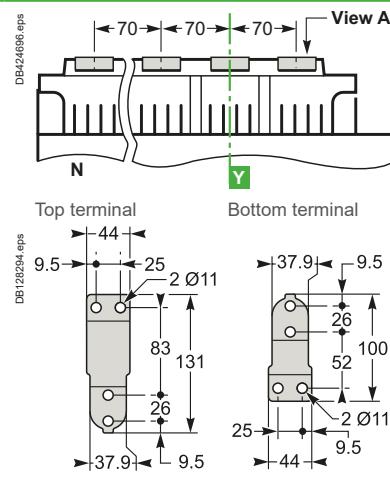
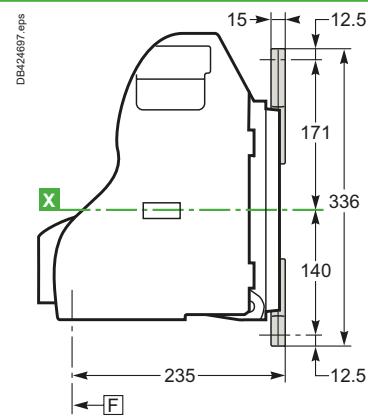
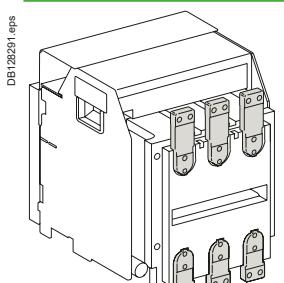


F : Datum.

**Note:** Recommended connection screws: M10 class 8.8. Tightening torque: 50 Nm with contact washer.

# Compact NS630b to 1600 (plug-in and withdrawable versions) Bars


## Front connection with spreaders

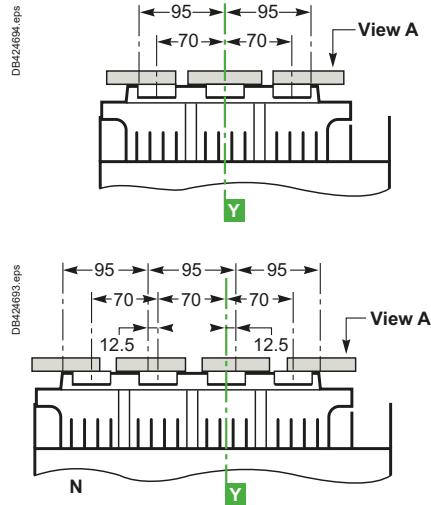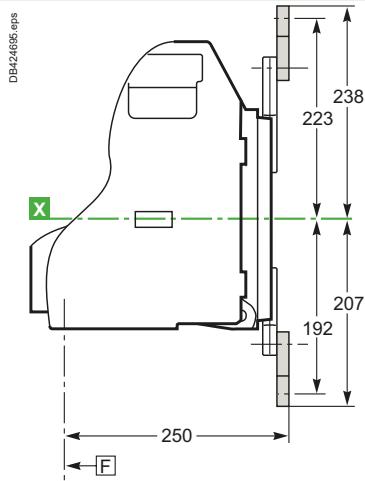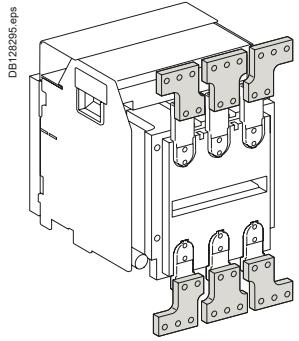


C

## Spreader detail


**Middle left or middle right spreader for 4P**

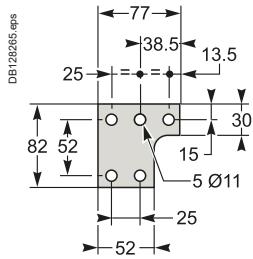


**Middle spreader for 3P**

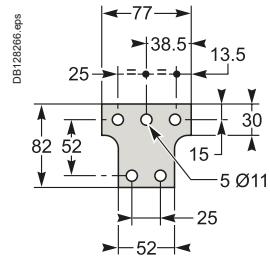

**Left or right spreader for 4P**

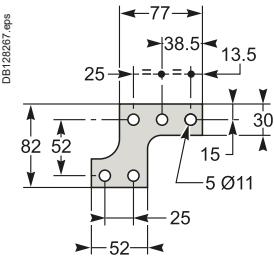

**Left or right spreader for 3P**

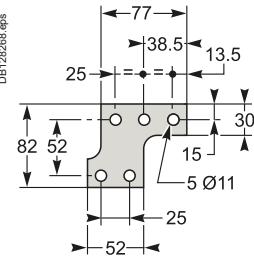




View A detail.

[F] : Datum.

# Compact NS630b to 1600 (plug-in and withdrawable versions)




## Cables with lugs

### Front connection with vertical-connection adapters and cable-lug adapters

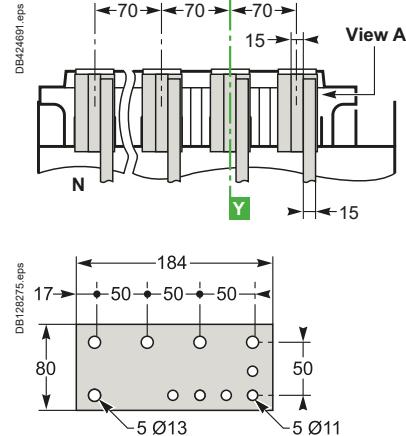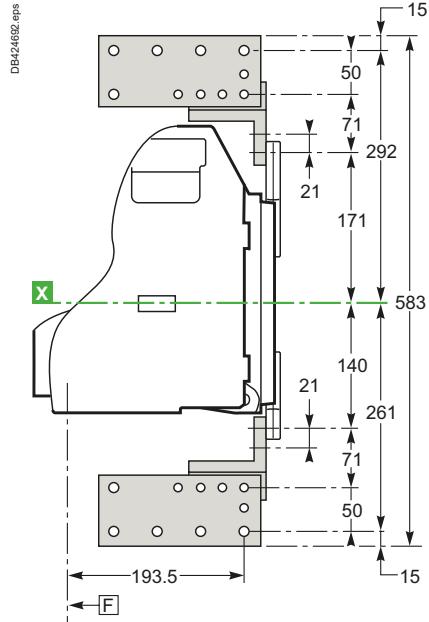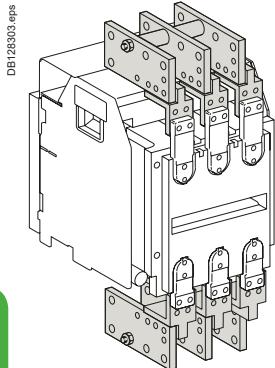

View A detail.

### Lugs

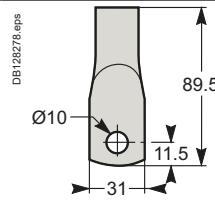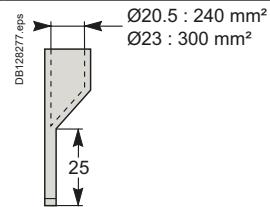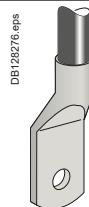

**F** : Datum.




Note: **X** and **Y** are the symmetry planes for a 3-pole device.

Recommended connection screws: M10 class 8.8.

Tightening torque: 50 Nm with contact washer.

# Compact NS1600b to 3200 (fixed version)





## Front connection (NS1600b to 2500)

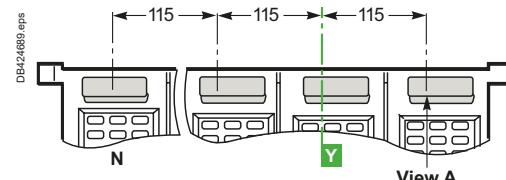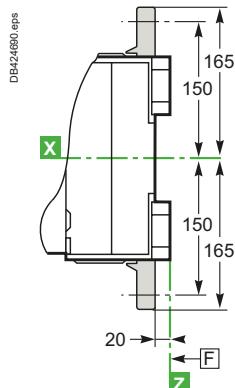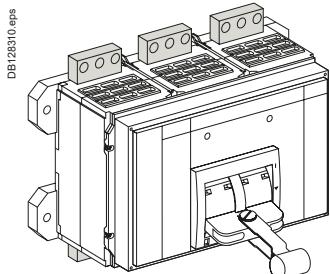





View A detail.

C

## Front connection with vertical-connection adapters (NS1600b to 2500)

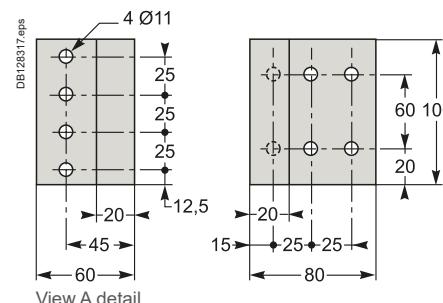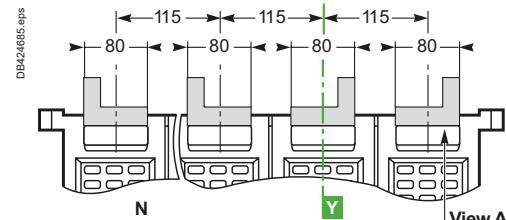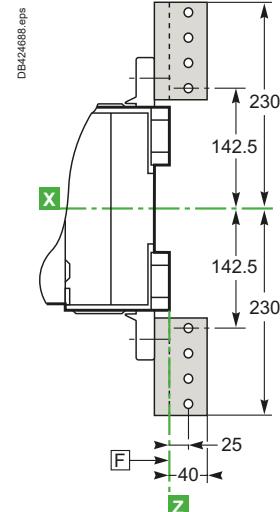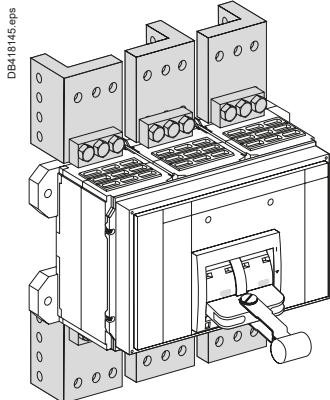

## Front connection (NS3200)

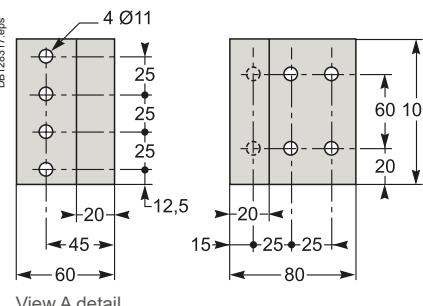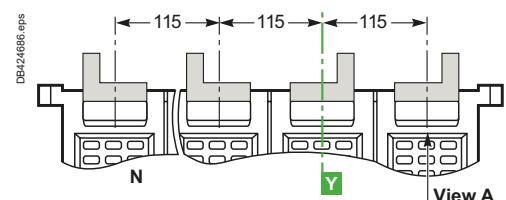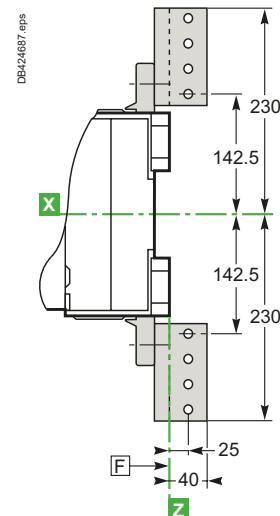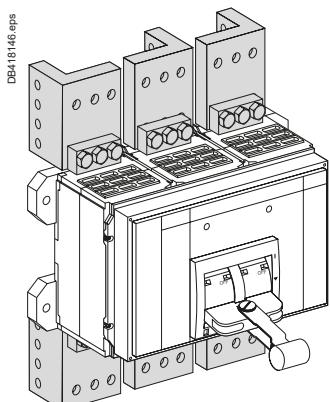


: Datum.

**Note:** Recommended connection screws: M10 class 8.8.  
Tightening torque: 50 Nm with contact washer.




# Power connections for Compact NS630b to 1600

## Recommended drilling dimensions


### Rear connection

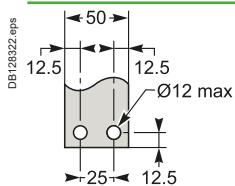


### Rear connection with spreaders

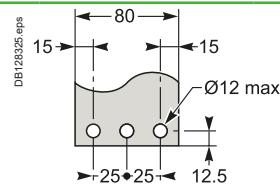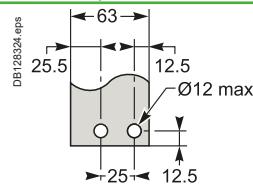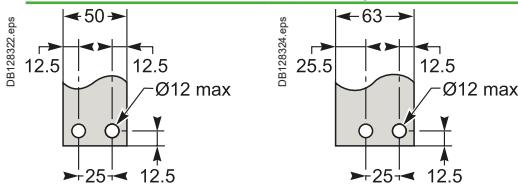


C

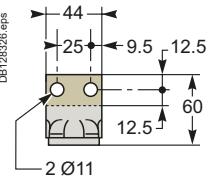


### Middle left or middle right spreader for 4P

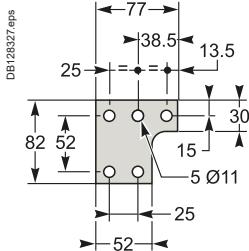


### Middle spreader for 3P

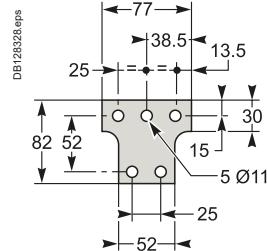






### Left or right spreader for 4P

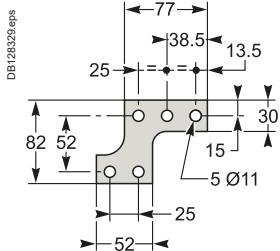


### Left or right spreader for 3P

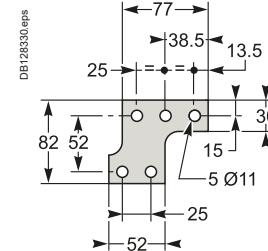




### Vertical rear connection

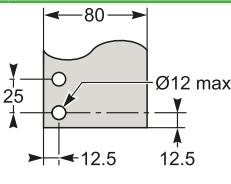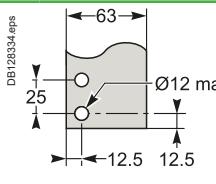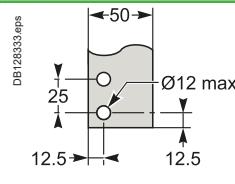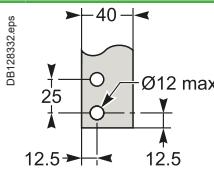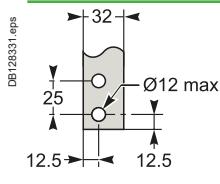


### Front connection

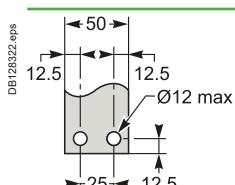


### Front connection with vertical-connection adapter

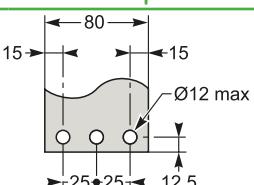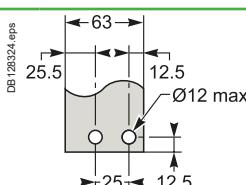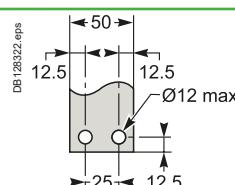

### Top terminal

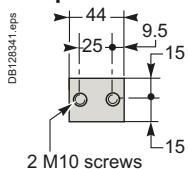


### Bottom terminal

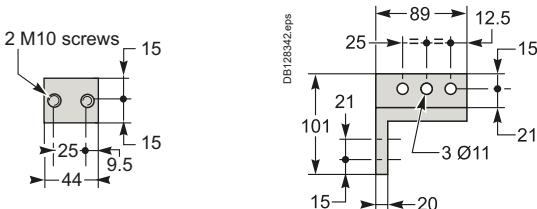


# Power connections for Compact NS1600b to 3200

## Recommended drilling dimensions


### Front connection (NS1600b to 2500)

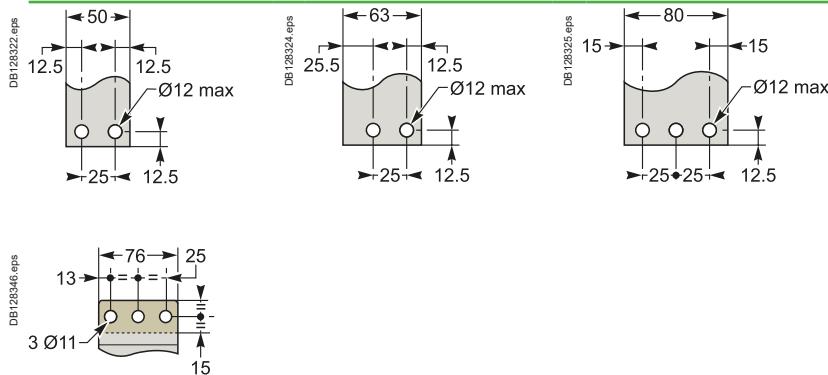

### Front connection with vertical-connection adapter (NS1600b to 2500)

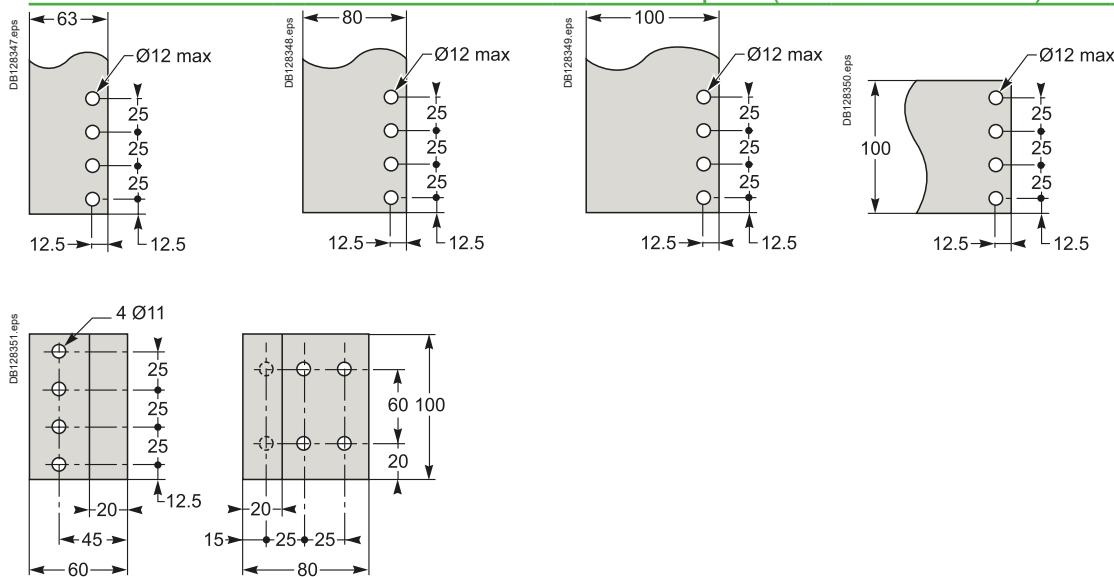


### Front connection (NS3200)

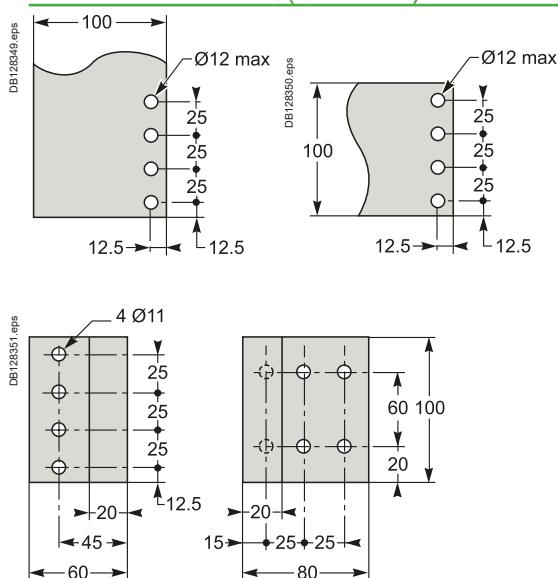


# Power connections for Compact NS630b to 3200

C

DB4247224ps

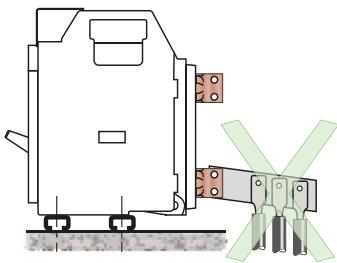

DB424721 eps

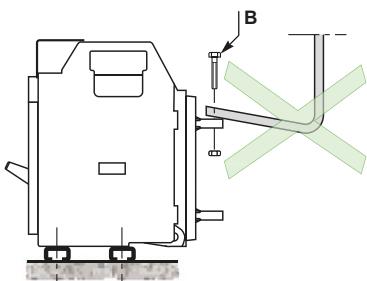

## Conductor materials and electrodynamic stresses

Compact circuit breakers can be connected indifferently with bare-copper, tinned-copper and tinned-aluminium conductors (flexible or rigid bars, cables). In the event of a short-circuit, thermal and electrodynamic stresses will be exerted on the conductors. They must therefore be correctly sized and maintained in place using supports.

Electrical connection points on all types of devices (switch-disconnectors, contactors, circuit breakers, etc.) should not be used for mechanical support. Any partition between upstream and downstream connections of the device must be made of non-magnetic material.



## Ties for flexible bars and cables

The table below indicates the maximum distance between ties depending on the prospective short-circuit current.

The maximum distance between ties attached to the switchboard frame is 400 mm.

Type of tie	'Panduit' ties Width: 4.5 mm Maximum load: 22 kg Colour: white			'Sarel' ties Width: 9 mm Maximum load: 90 kg Colour: black				
Maximum distance between ties (mm)	200	100	50	350	200	100	70	50
Short-circuit current (kA rms)	10	15	20	20	27	35	45	100
(double ties)								

**Note:** For cables  $\geq 50 \text{ mm}^2$ , use 9 mm-wide ties.

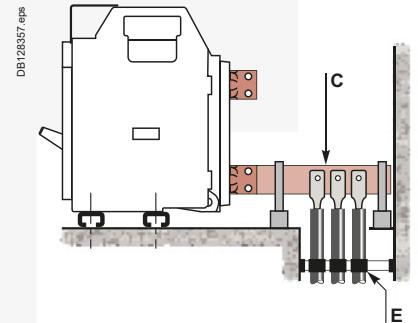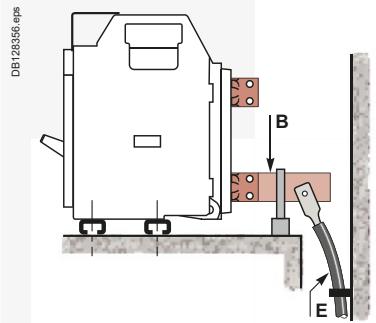

## Connection of bars



Bars must be adjusted to ensure correct positioning on the terminals before bolting (**B**). Bars must rest on a support firmly attached to the switchboard frame, such that the circuit breaker terminals do not bear any weight (**C**).

## Electrodynamic forces

The first spacer between bars must be positioned within a maximum distance (see table below) of the connection point to the circuit breaker. This distance is calculated to resist the electrodynamic stresses exerted between the bars of each phase during a short-circuit.

### Maximum distance A between the circuit breaker connection and the first spacer between bars, depending on the short-circuit current

Isc (kA)	30	50	65	80	100	150
Distance (mm)	350	300	250	150	150	150

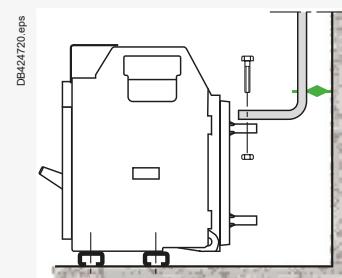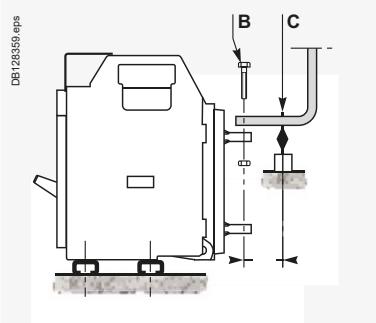

# Power connections for Compact NS630b to 3200

## Connections



The quality of bar connections depends, among other things, on the tightening torques used for the nuts and bolts. Over-tightening may have the same consequences as under-tightening.

The correct tightening torques for the connection of bars to the circuit breaker terminals are indicated in the table below.

The values below are for copper bars (Cu ETP-NFA51-100) and steel nuts and bolts (class 8.8).

The same values apply to AGS-T52 quality aluminium bars (French standard NFA 02-104 and American National Standard H-35-1).

### Examples of bar connections

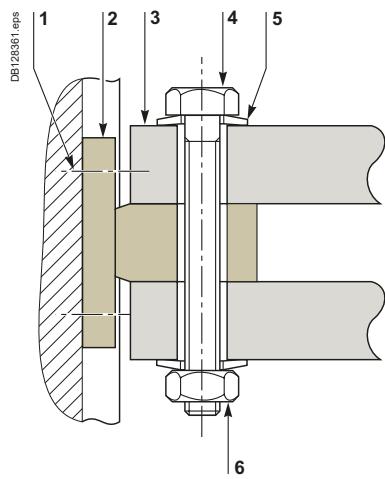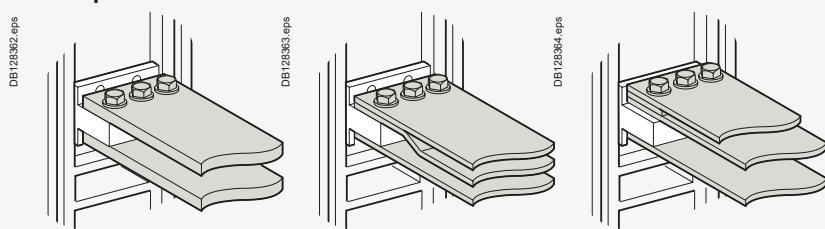


C

### Tightening torque for bars


Rated diameter (mm)	Drilling (mm) diameter	Tightening torque (Nm) with flat or grower washers	Tightening torque (Nm) with contact or split washers
10	11	37.5	50

## Bar drilling

### Examples

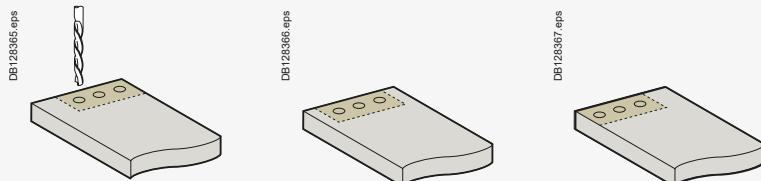

## Insulation distance

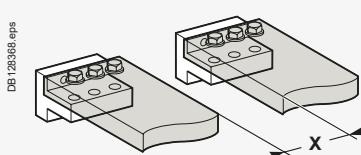


## Dimensions (mm)

### Utilisation voltage X minimum

Ui ≤ 600 V	8 mm
Ui ≤ 1000 V	14 mm

## Bar bending

Bars must be bent according to the table below. A tighter bend may cause cracks.

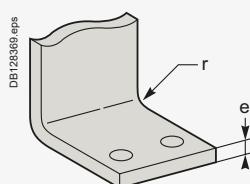

## Dimensions (mm)

e	Radius r Minimum	Recommended
5	5	7.5
10	15	18 to 20

# Power connections for Compact NS630b to 3200

## Sizing of bars


### The following tables are based on the following assumptions:

- maximum permissible temperature of bars is 100 °C
- Ti: temperature around the circuit breaker and its connections
- busbars made of copper and not painted.

**Note:** The values presented in the tables are the result of trials and theoretical calculations on the basis of the assumptions mentioned above. These tables are intended as an aid in designing connections, however, the actual values must be confirmed by tests on the installation.

### Front or horizontal rear connections

DB128370.eps

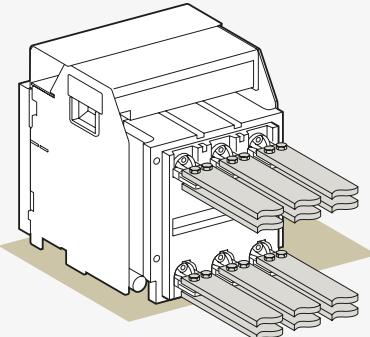


Compact	Maximum service current	Ti: 40 °C		Ti: 50 °C		Ti: 60 °C	
		Number of bars 5 mm thick	10 mm thick	Number of bars 5 mm thick	10 mm thick	Number of bars 5 mm thick	10 mm thick
NS630b	400	2b.30 x 5	1b.30 x 10	2b.30 x 5	1b.30 x 10	2b.30 x 5	1b.30 x 10
NS630b	630	2b.40 x 5	1b.40 x 10	2b.40 x 5	1b.40 x 10	2b.40 x 5	1b.40 x 10
NS800	800	2b.50 x 5	1b.50 x 10	2b.50 x 5	1b.50 x 10	2b.50 x 5	1b.63 x 10
NS1000	1000	3b.50 x 5	1b.63 x 10	3b.50 x 5	2b.50 x 10	3b.63 x 5	2b.50 x 10
NS1250	1250	3b.50 x 5	2b.40 x 10	3b.50 x 5	2b.50 x 10	3b.63 x 5	2b.50 x 10
		2b.80 x 5	2b.40 x 10	2b.80 x 5			
NS1600/ 1600b	1400	2b.80 x 5	2b.40 x 10	2b.80 x 5	2b.50 x 10	3b.80 x 5	2b.63 x 10
NS1600/ 1600b	1600	3b.80 x 5	2b.63 x 10	3b.80 x 5	2b.63 x 10	3b.80 x 5	3b.50 x 10
NS2000	1800	3b.80 x 5	2b.63 x 10	3b.80 x 5	2b.63 x 10	3b.100 x 5	2b.80 x 10
NS2000	2000	3b.100 x 5	2b.80 x 10	3b.100 x 5	2b.80 x 10	3b.100 x 5	3b.63 x 10
NS2500	2200	3b.100 x 5	2b.80 x 10	3b.100 x 5	2b.80 x 10	4b.80 x 5	2b.100 x 10
NS2500	2500	4b.100 x 5	2b.100 x 10	4b.100 x 5	2b.100 x 10	4b.100 x 5	3b.80 x 10
NS3200	2800	4b.100 x 5	3b.80 x 10	4b.100 x 5	3b.80 x 10	5b.100 x 5	3b.100 x 10
NS3200	3000	5b.100 x 5	3b.80 x 10	6b.100 x 5	3b.100 x 10	8b.100 x 5	4b.80 x 10
NS3200	3200	6b.100 x 5	3b.100 x 10	8b.100 x 5	3b.100 x 10		4b.100 x 10

**Note:** With Compact NS630b to NS1600, it is recommended to use 50 mm wideness bars (see "Recommended busbars drilling").

# Power connections for Compact NS630b to 3200

## Sizing of bars

### Vertical rear connections

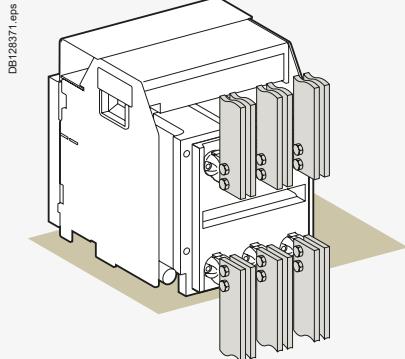

C

Compact	Maximum service current	Ti: 40 °C		Ti: 50 °C		Ti: 60 °C	
		Number of bars 5 mm thick	10 mm thick	Number of bars 5 mm thick	10 mm thick	Number of bars 5 mm thick	10 mm thick
NS630b	400	2b.30 x 5	1b.30 x 10	2b.30 x 5	1b.30 x 10	2b.30 x 5	1b.30 x 10
NS630b	630	2b.40 x 5	1b.40 x 10	2b.40 x 5	1b.40 x 10	2b.40 x 5	1b.40 x 10
NS800	800	2b.50 x 5	1b.50 x 10	2b.50 x 5	1b.50 x 10	2b.50 x 5	1b.50 x 10
NS1000	1000	2b.50 x 5	1b.50 x 10	2b.50 x 5	1b.50 x 10	2b.63 x 5	1b.63 x 10
NS1250	1250	2b.63 x 5	1b.63 x 10	3b.50 x 5	2b.40 x 10	3b.50 x 5	2b.40 x 10
NS1600	1400	2b.80 x 5	1b.80 x 10	2b.80 x 5	2b.50 x 10	3b.63 x 5	2b.50 x 10
NS1600	1600	3b.63 x 5	2b.50 x 10	3b.63 x 5	2b.50 x 10	3b.80 x 5	2b.63 x 10
NS2000	2000	3b.100 x 5	2b.63 x 10	3b.100 x 5	2b.63 x 10	3b.100 x 5	2b.80 x 10
NS2500	2500	4b.100 x 5	2b.80 x 10	4b.100 x 5	2b.80 x 10	4b.100 x 5	3b.80 x 10
NS3200	3200	6b.100 x 5	3b.100 x 10	6b.100 x 5	3b.100 x 10	4b.100 x 10	

**FDM128**  
Switchboard  
Color Touch screen,  
Front Display Module  
for Masterpack,  
Compact and Actis



## Electrical diagrams

### Compact NS630b to 1600

Fixed circuit breakers .....	D-2
Plug-in / withdrawable circuit breakers .....	D-4

### Compact NS1600b to 3200

Fixed circuit breakers .....	D-6
------------------------------	-----

### Compact NS630b to 3200

Earth-fault and earth-leakage protection Neutral protection .....	D-8
Zone selective interlocking .....	D-8
Communication.....	D-10

### Fixed, electrically operated Compact NS630b to 3200

Connection to the communication interface module .....	D-11
Connection to the I/O application module and communication interface module... D-12	

### Compact NS630b to 3200

Connection of the 24 V DC external power supply AD module..... D-13	
---	--


D

# Compact NS630b to 1600

## Fixed circuit breakers


The diagram is shown with circuits de-energised, all devices open, connected and charged and relays in the normal position.

## Power

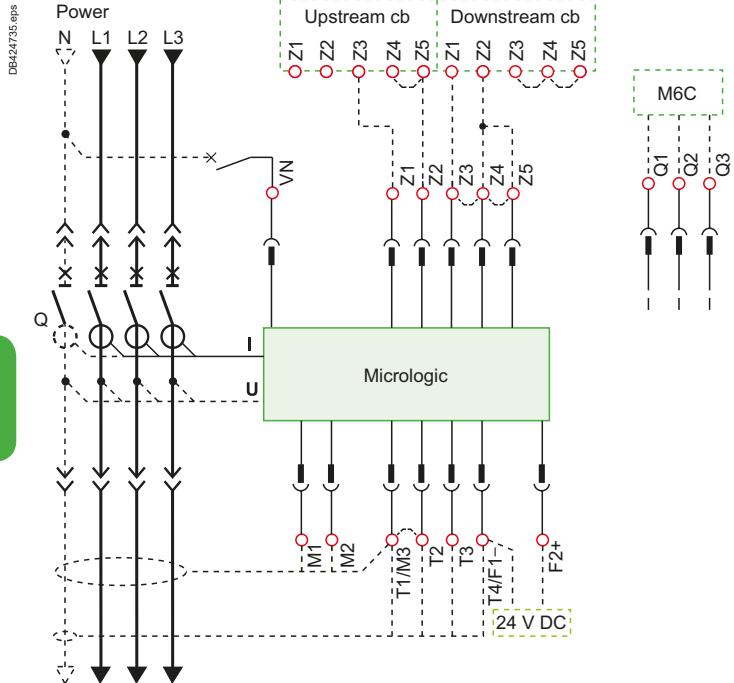

## Control unit

## Remote operation

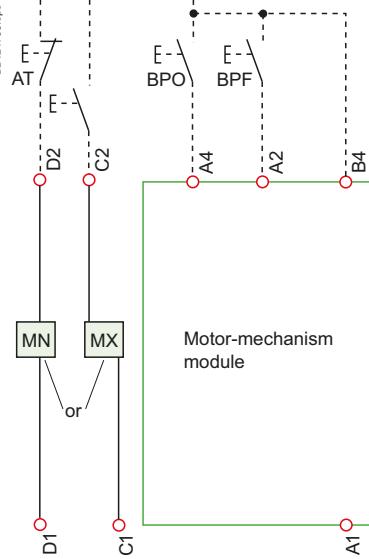

## Basic A E P



## Control unit

E1-E6 communication

Z1-Z5 zone selective interlocking:  
 Z1 = ZSI OUT SOURCE  
 Z2 = ZSI OUT ; Z3 = ZSI IN SOURCE  
 Z4 = ZSI IN ST (short time)  
 Z5 = ZSI IN GF (earth fault)

M1 = Vigi module input  
 (Micrologic 7)

T1, T2, T3, T4 = external neutral;

M2, M3 = Vigi module input  
 (Micrologic 7)

F2+, F1 – external 24 V DC  
 power supply

VN external voltage connector  
 (must be connected to the neutral  
 with a 3P circuit breaker)

M6C : 6 programmable contacts (to be  
 connected to the external module M6C) ext.  
 24 V DC power supply required

## Remote operation

M : undervoltage release

or

MX: shunt release

Motor-mechanism module [1]

A4: electrical opening order

A2: electrical closing order


B4, A1: power supply for control devices and gear motor

[1] Spring-charging motor 440/480 V AC (380 V motor + additional resistor)

E : energy

A : digital ammeter.


P : A + power meter + additional protection.

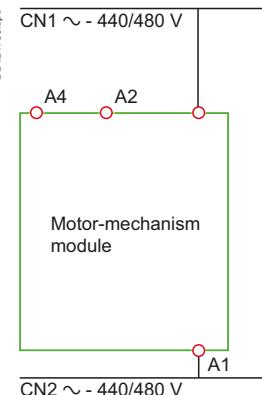


# Compact NS630b to 1600

## Fixed circuit breakers

### Indication contacts

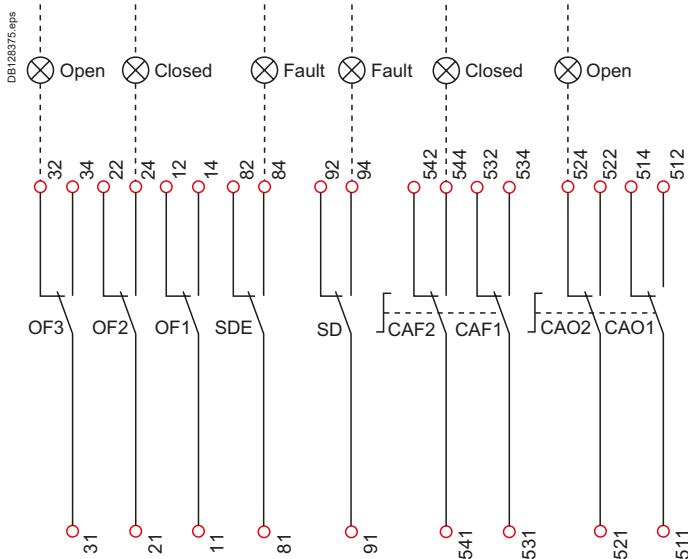

### Terminal-block marking (manual operation)

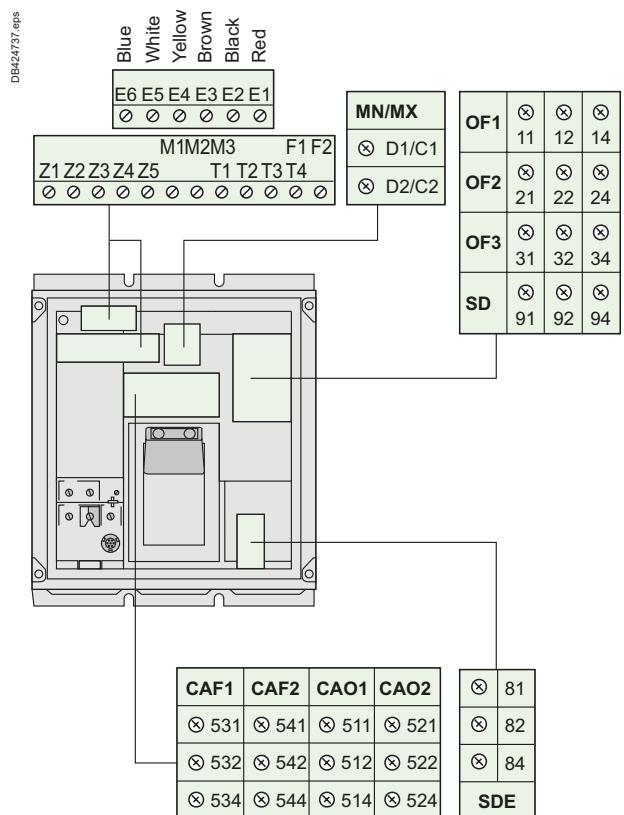

### Indication contacts

OF3 / OF2 / OF1: indication contacts


SDE: fault-trip indication contact (short-circuit, overload, earth fault)

SD: trip indication contact (manual operation)

CAF2/CAF1 [1]: early-make contact (rotary handle)

CAO2 / CAO1: early-break contact (rotary handle)

### Terminal-block marking (electrical operation)

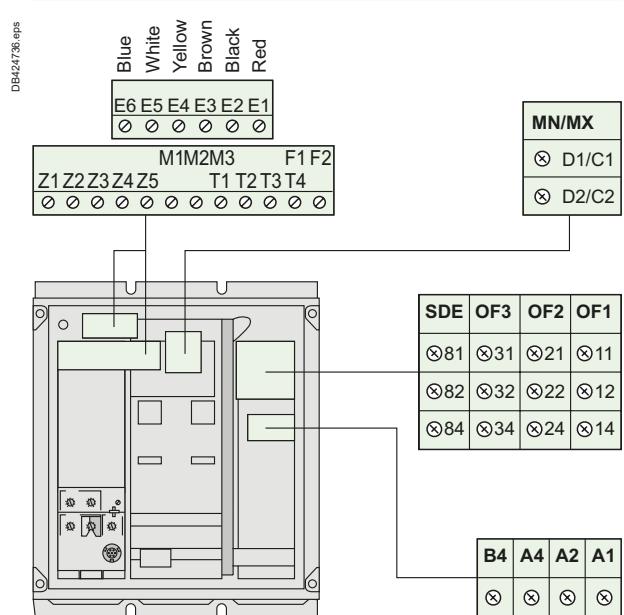


[1] CAF2 option is not compatible with M6C option.

# Compact NS630b to 1600

## Plug-in / withdrawable circuit breakers

The diagram is shown with circuits de-energised, all devices open, connected and charged and relays in the normal position.

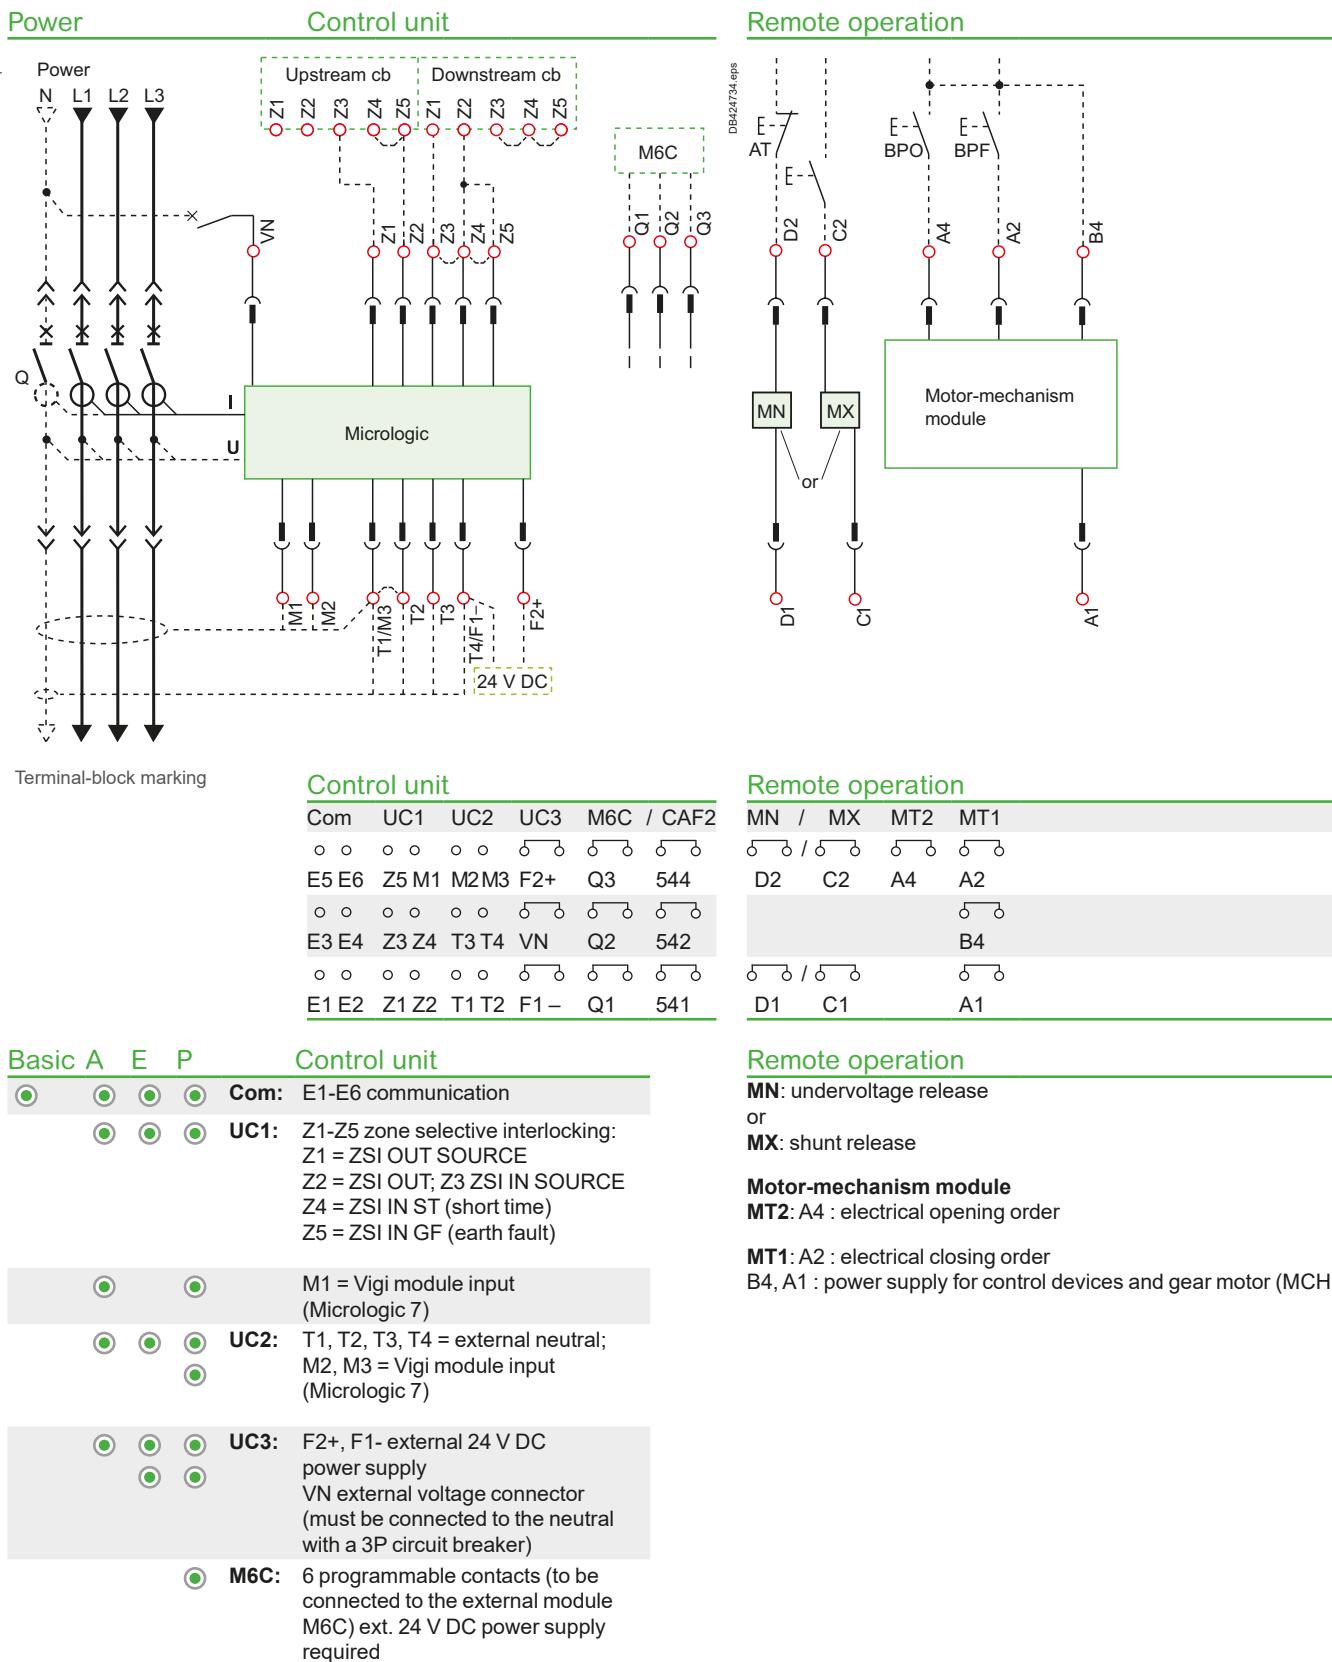


**A :** digital ammeter.

**P :** A + power meter + additional protection.


# Compact NS630b to 1600

## Plug-in / withdrawable circuit breakers

### Indication contacts

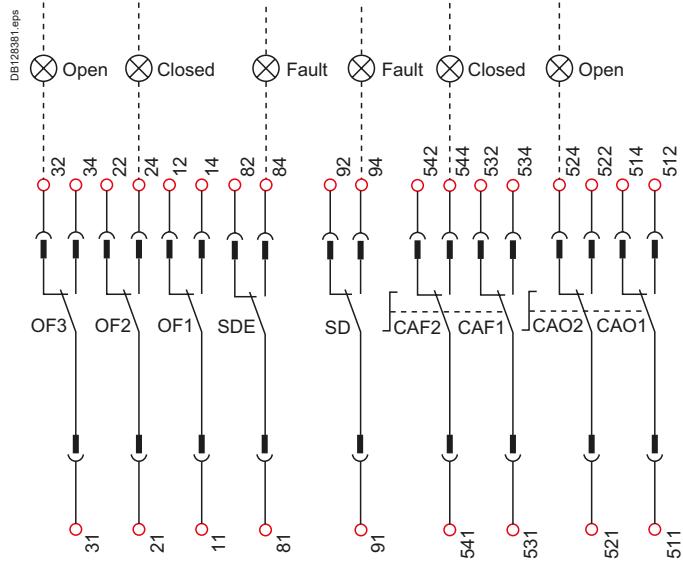

### Carriage switches

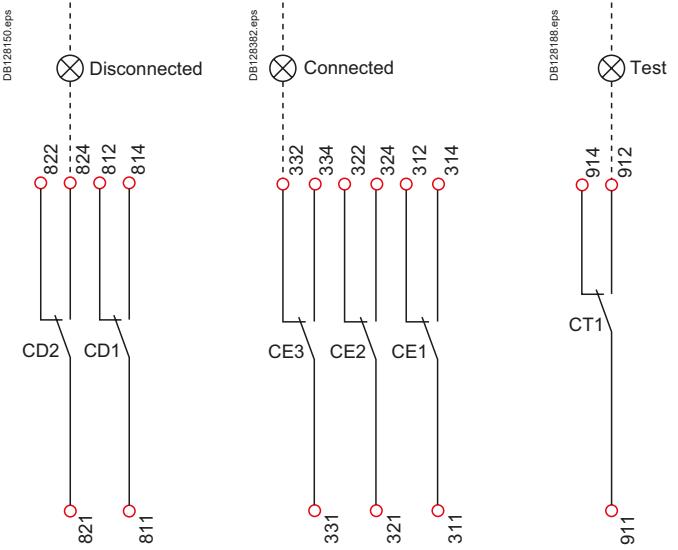

D

### Indication contacts

M6C / CAF2	CAF1	SDE	SD	CAO2	CAO1	OF3	OF2	OF1
Q3 544	534	84	94	524	514	34	24	14
Q2 542	532	82	92	522	512	32	22	12
Q1 541	531	81	91	521	511	31	21	11

### Carriage switches

CD2	CD1	CE3	CE2	CE1	CT1
Open	Open	Open	Open	Open	Open
824	814	334	324	314	914
Open	Open	Open	Open	Open	Open
822	812	332	322	312	912
Open	Open	Open	Open	Open	Open
821	811	331	321	311	911

### Indication contacts

OF3 / OF2 / OF1: indication contacts

SDE: fault-trip indication contact (short-circuit, overload, earth fault)

SD: trip indication contact (manual operation)

CAF2/CAF1<sup>[1]</sup>: early-make contact (rotary handle)

CAO2 / CAO1: early-break contact (rotary handle)

### Carriage switches

CD2: disconnected  
 CD1: position  
 CE3: connected  
 CE2: position  
 CE1  
 CT1: test position

[1] CAF2 option is not compatible with M6C option.

### Legend

Connected (only one wire per connection point).

Life Is On




# Compact NS1600b to 3200

## Fixed circuit breakers

The diagram is shown with circuits de-energised, all devices open, connected and charged and relays in the normal position.

## Power

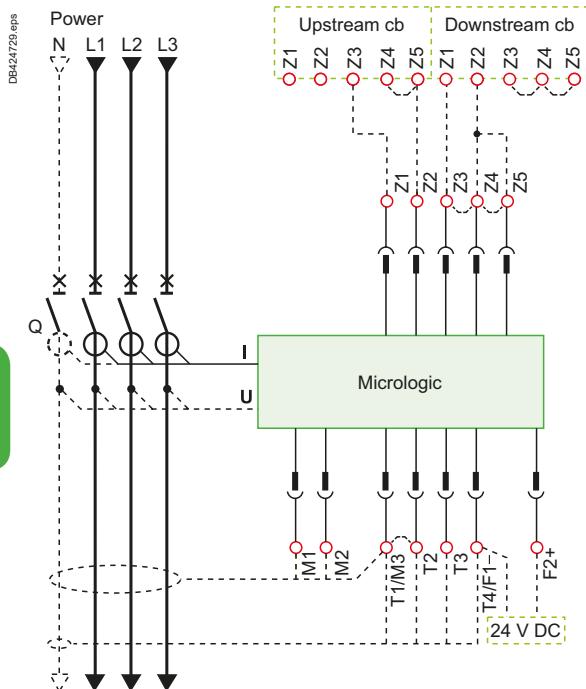

D

## Control unit


## - (basic) A E Control unit

			E1-E6 communication
			Z1-Z5 zone selective interlocking: Z1 = ZSI OUT SOURCE Z2 = ZSI OUT ; Z3 = ZSI IN SOURCE Z4 = ZSI IN ST (short time) Z5 = ZSI IN GF (earth fault)
			T1, T2, T3, T4 = external neutral; M2, M3 = Vigi module input (Micrologic 7)
			F2+, F1- = external 24 V DC power supply

- : basic Micrologic control unit.

A: digital ammeter.

## Remote operation

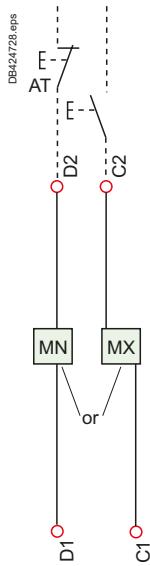


## Remote operation

MN: undervoltage release  
or  
MX: shunt release


# Compact NS1600b to 3200

## Fixed circuit breakers

### Indication contacts

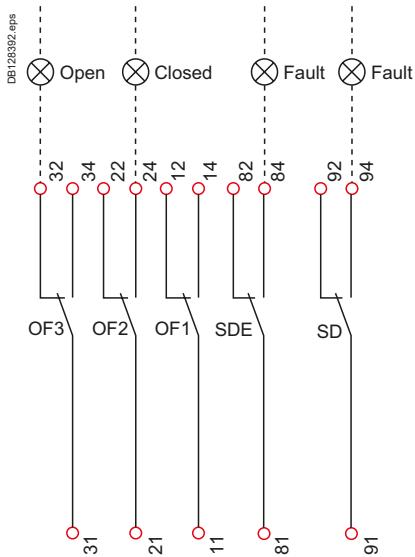

### Terminal-block marking

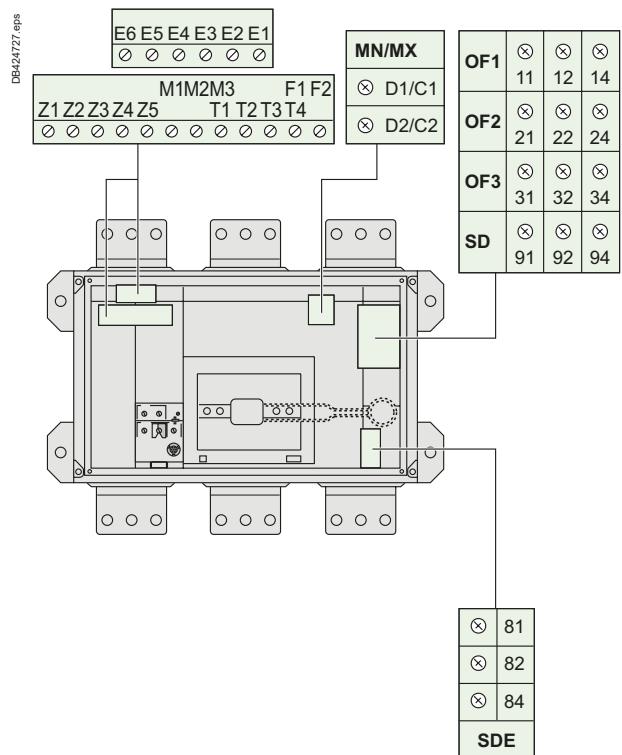

### Indication contacts

OF3 / OF2 / OF1: ON / OFF indication contacts

SDE: fault-trip indication contact (short-circuit, overload, earth fault)

SD: trip indication contact

# Compact NS630b to 3200

## Earth-fault and earth-leakage protection

### Neutral protection Zone selective interlocking

#### External sensor (CT) for residual earth-fault protection

##### Connection of current-transformer secondary circuit for external neutral

Compact equipped with a Micrologic 6 A/E/P [1]:

- shielded cable with 2 twisted pairs
- T1 twisted with T2
- maximum length 4 meters
- cable cross-sectional area 0.4 to 1.5 mm<sup>2</sup>
- recommended cable: Belden 9552 or equivalent.

For proper wiring of neutral CT, refer to instruction Bulletin 48041-082-03 shipped with it.


Do not remove Micrologic factory-installed jumper between T1 and T2 unless neutral CT is connected.

If supply is via the top, follow the schematics.

If supply is via the bottom, control wiring is identical; for the power wiring, H1 is connected to the source side, H2 to the load side.

For four-pole versions, for residual earth-fault protection, the current transformer for the external neutral is not necessary.

Connection for signal VN is required only for power measurements (3 Ø, 4 wires, 4CTs).

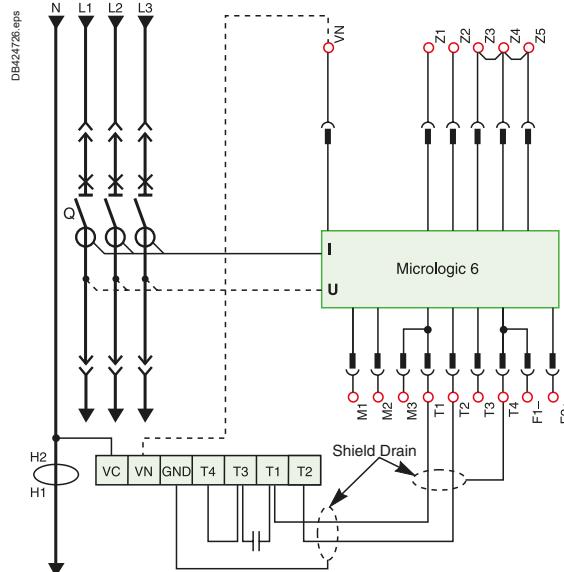

[1] Only for NS630b to 1600.

#### External transformer for source ground return (SGR) earth-fault protection


##### Connection of the secondary circuit

Compact equipped with a Micrologic 6 A/E/P [1]:

unshielded cable with 1 twisted pair

- maximum length 150 metres
- cable cross-sectional area 0.4 to 1.5 mm<sup>2</sup>
- recommended cable: Belden 9409 or equivalent.

[1] Only for NS630b to 1600.

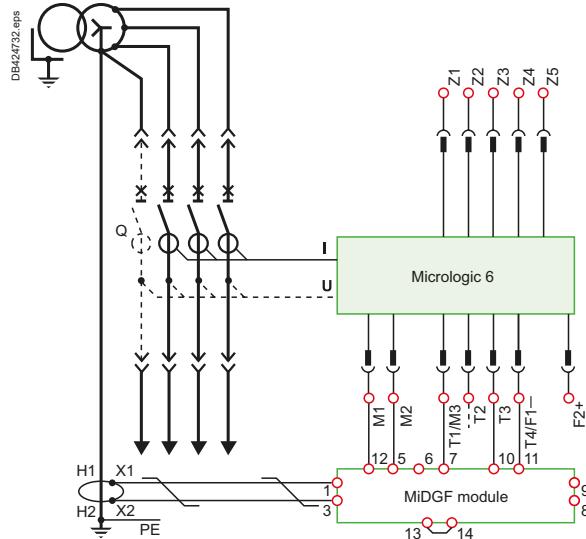

# Compact NS630b to 3200


## Earth-fault and earth-leakage protection

### Neutral protection Zone selective interlocking

#### Earth-leakage protection

##### Connection of the rectangular-sensor secondary circuit

Compact equipped with a Micrologic 7 A/P:  
use the cable shipped with the rectangular sensor.

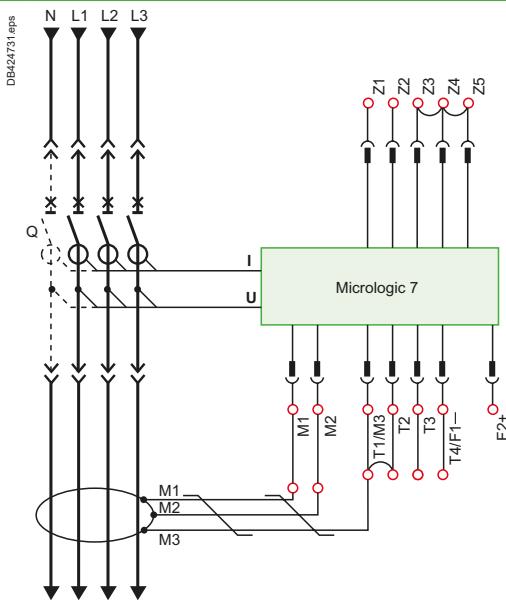

D

#### Neutral protection

- three pole circuit breaker:
- neutral protection is impossible with Micrologic A,E
- with Micrologic P, an external neutral transformer is necessary; the connection diagram is the same as for residual earth-fault protection.
- four pole circuit breaker:
- Compact equipped with Micrologic A,E,P
- the current transformer for external neutral is not necessary.

#### Zone selective interlocking

Zone-selective interlocking is used to reduce the electrodynamic forces exerted on the installation by shortening the time required to clear faults, while maintaining time discrimination between the various devices.

A pilot wire interconnects a number of circuit breakers equipped with Micrologic A/E/P control units, as illustrated in the diagram above.

The control unit detecting a fault sends a signal upstream and checks for a signal arriving from downstream. If there is a signal from downstream, the circuit breaker remains closed for the full duration of its tripping delay. If there is no signal from downstream, the circuit breaker opens immediately, regardless of the tripping-delay setting.

##### Fault 1.


Only circuit breaker A detects the fault. Because it receives no signal from downstream, it immediately opens in spite of its tripping delay set to 0.3.

##### Fault 2.

Circuit breakers A and B detect the fault. Circuit breaker A receives a signal from B and remains closed for the full duration of its tripping delay set to 0.3. Circuit breaker B does not receive a signal from downstream and opens immediately, in spite of its tripping delay set to 0.2.


##### Wiring

- Maximum impedance:  $2.7 \Omega / 300 \text{ m}$ .
- Capacity of connectors: 0.4 to  $2.5 \text{ mm}^2$ .
- Wires: single or multicore.
- Maximum length: 3000 m.
- Limits to device interconnection:
  - the common ZSI - OUT (Z1) and the output ZSI - OUT (Z2) can be connected to a maximum of 10 upstream device
  - a maximum of 100 downstream devices may be connected to the common ZSI - IN (Z3) and to an input ZSI - IN CR (Z4) or GF (Z5).

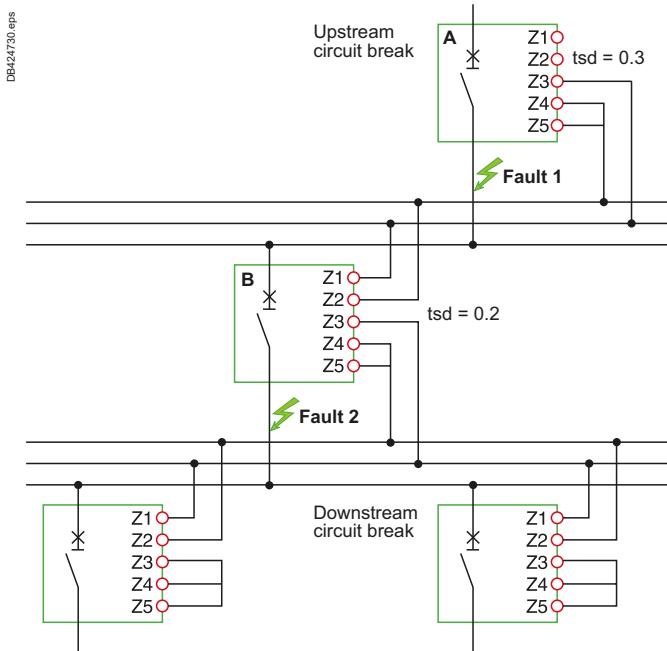

# Compact NS630b to 3200 Communication

## Connection of circuit breakers to the Modbus communication network

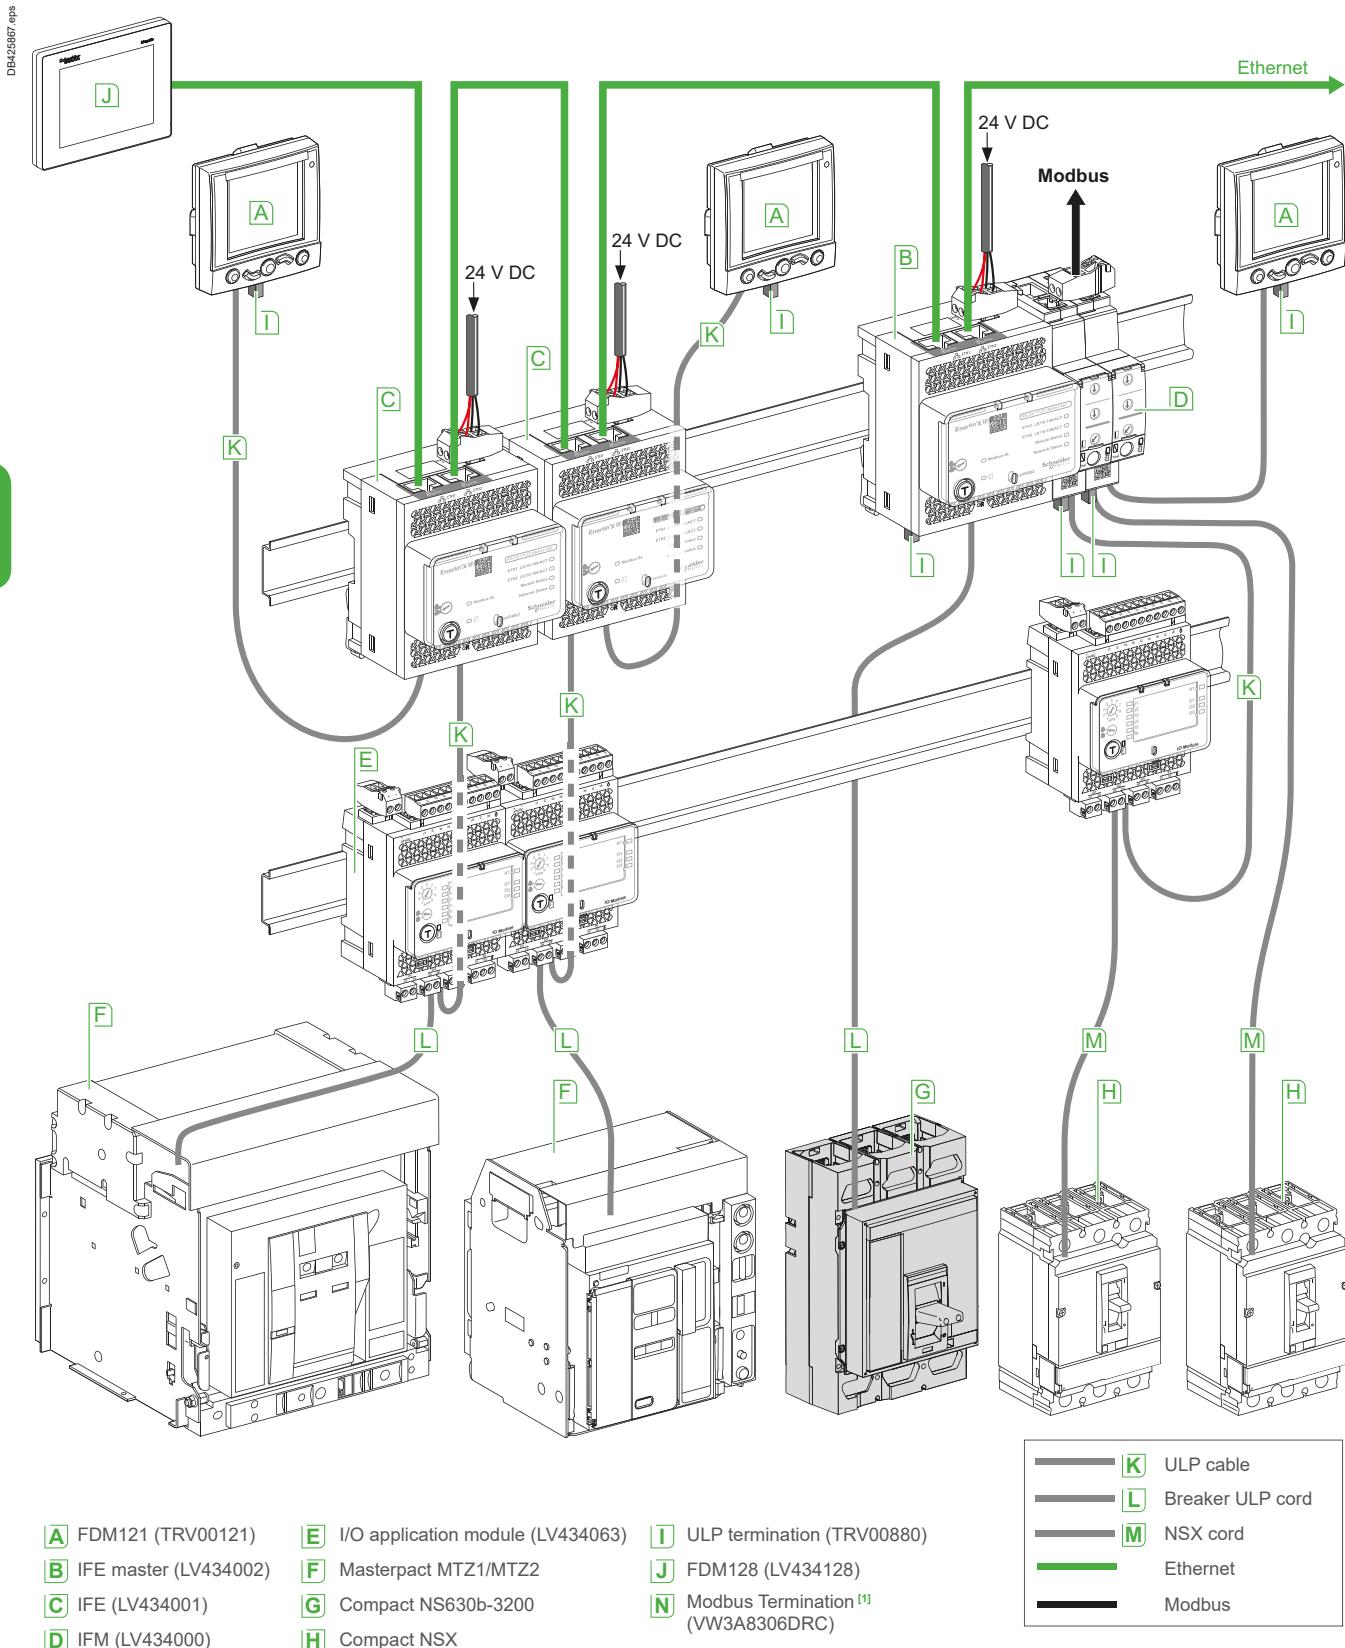


[1] Modbus termination is mandatory, see ULP system user guide TRV99101.

# Fixed, electrically operated Compact NS630b to 3200

## Connection to the communication interface module


DQ474754.pdfs

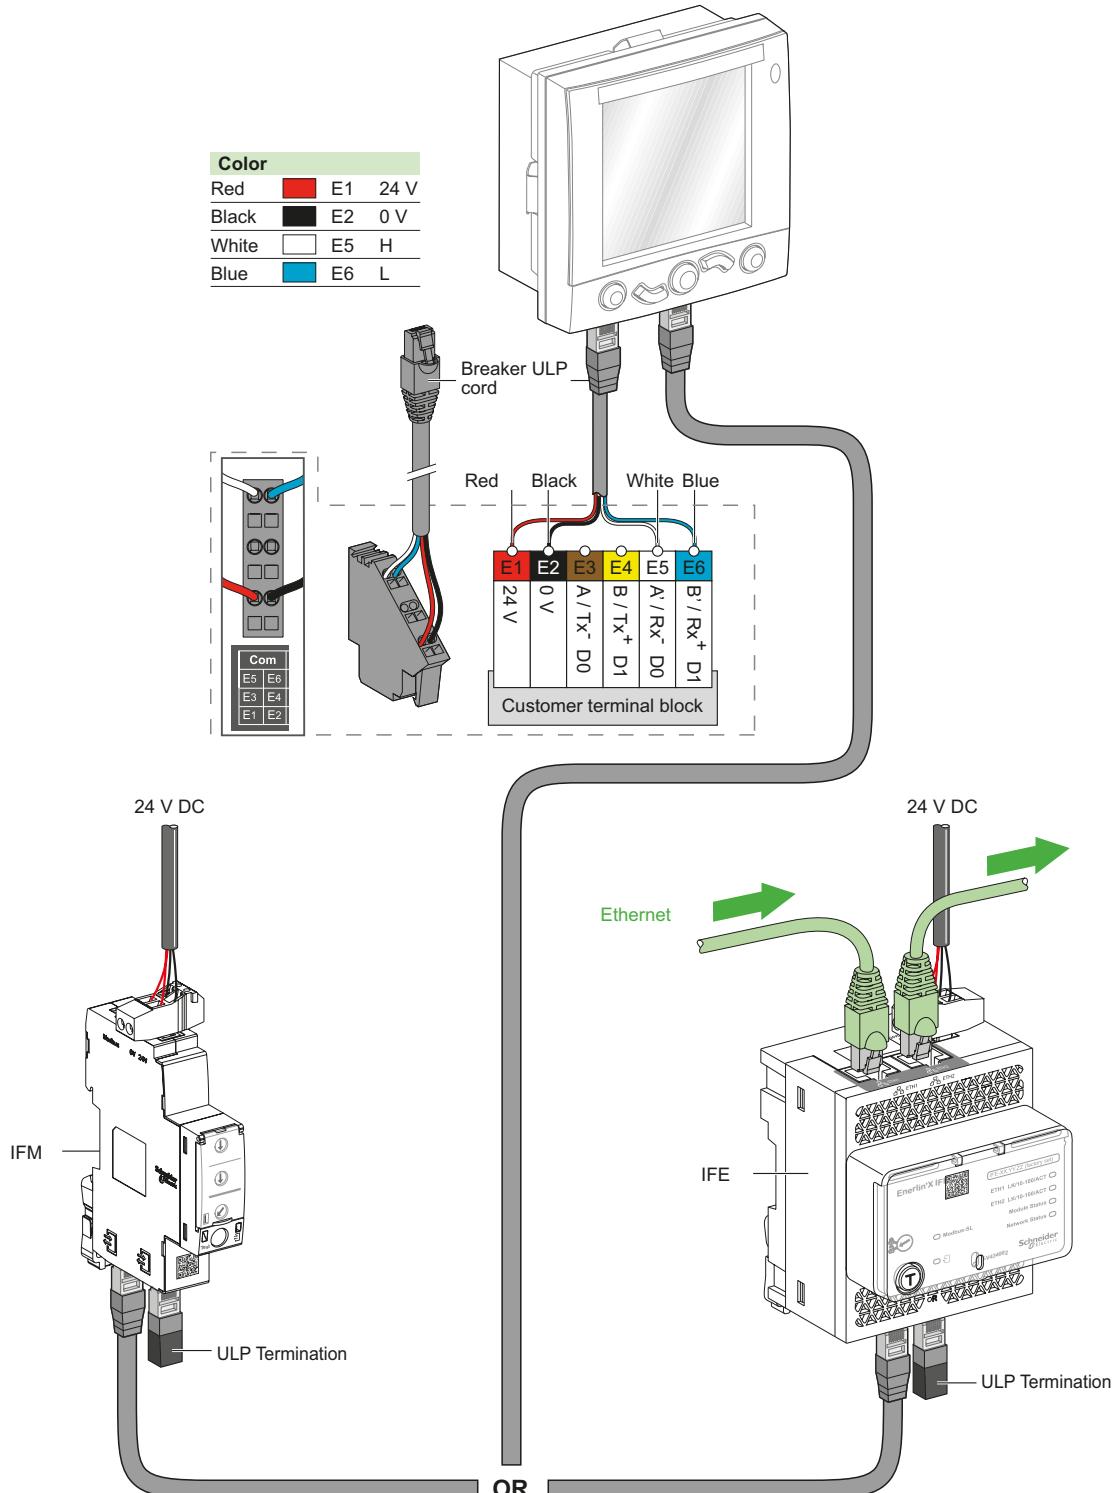

# Withdrawable Compact NS630b to 3200

Connection to the I/O application module  
and communication interface module

SDE 3247248D

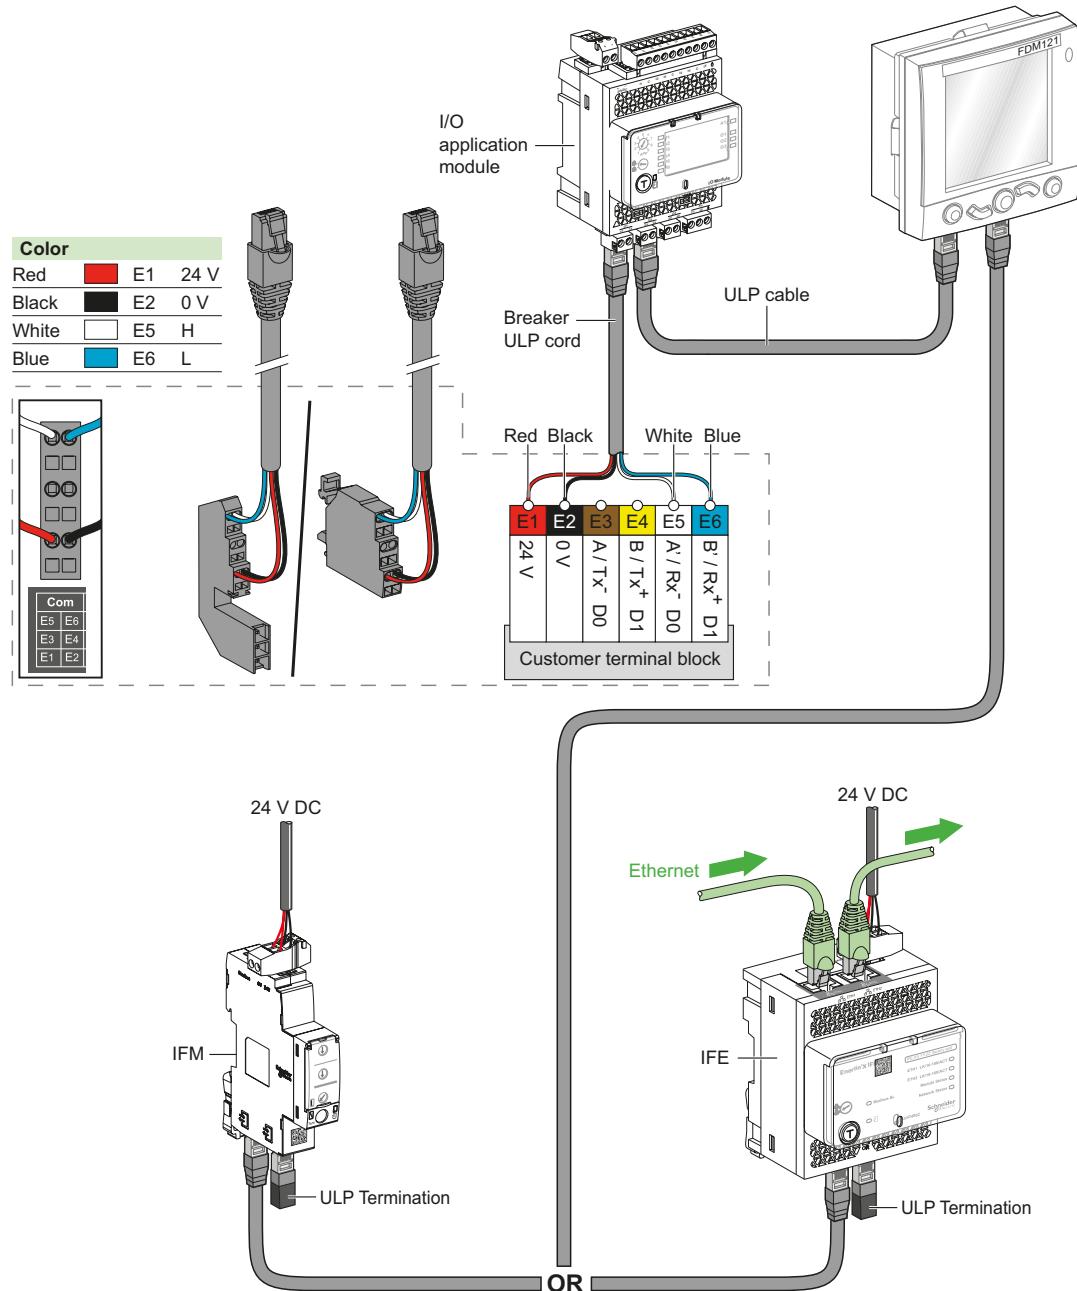

# Compact NS630b to 3200

## Connection of the 24 V DC external power supply AD module

- The 24 V DC external power-supply (AD module) for the Micrologic control unit (F1- F2+) is not required for basic protections LSIG.
- The 24 V DC external power-supply (AD module) for the programmable contact M2C/M6C is required.
- The 24 V DC external power-supply for the BCM ULP communication module (E1-E2) is required. The same 24 V DC external power supply can be used for the communication devices (IFE, IFM, I/O, FDM).
- If the 24 V DC external power supply (AD module) is used to supply Micrologic control unit, this power supply shall be used only for supplying Micrologic control units and M2C/M6C.
- The dedicated AD power supplies shall be used only for the Micrologic trip units. If the COM option is used, a second dedicated 24 V DC external power supply shall be used.
- With Micrologic A/E, it is recommended to connect 24 V DC external power-supply (AD module) to the Micrologic control unit (F1- F2+) in order to keep available the display and the energy metering, even if Current < 20 % In.

**Note:** in case of using the 24 V DC external power supply (AD module), maximum cable length between 24 V DC (G1, G2) and the control unit (F1-, F2+) must not exceed 10 meters.

The BAT battery module, mounted in series upstream of the AD module, ensures an uninterrupted supply of power if the AD module power supply fails.

With Micrologic E / P, External Neutral Voltage Tap is available in option.

**Nota :** On TNC Electrical Networks, where the neutral point is distributed and cannot be interrupted, 3P circuit breakers will be used. In this case and if Micrologic E or P is chosen, then ENVT will be necessary to connect neutral to micrologic, in order to measure simple Voltages (V12, V23, V31, VN).

For three-pole devices, the system is supplied with terminal ENVT connected only to the control unit (Micrologic E and P).

### Connection


The maximum length for each conductor supplying power to the trip unit or M6C module is 10 m.

#### Do not ground F2+, F1-, or power supply output:

- the positive terminal (F2+) on the trip unit must not be connected to earth ground
- the negative terminal (F1-) on the trip unit must not be connected to earth ground
- the output terminals (- and +) of the 24 V DC power supply must not be grounded.

#### Reduce electromagnetic interference:

- the input and output wires of the 24 V DC power supply must be physically separated as much as possible
- the 24 V DC wires (output of the 24 V DC power supply) shall be twisted together.
- the 24 V DC wires (output of the 24 V DC power supply) must cross all power cables perpendicularly
- power supply conductors must be cut to length. Do not loop excess conductor.

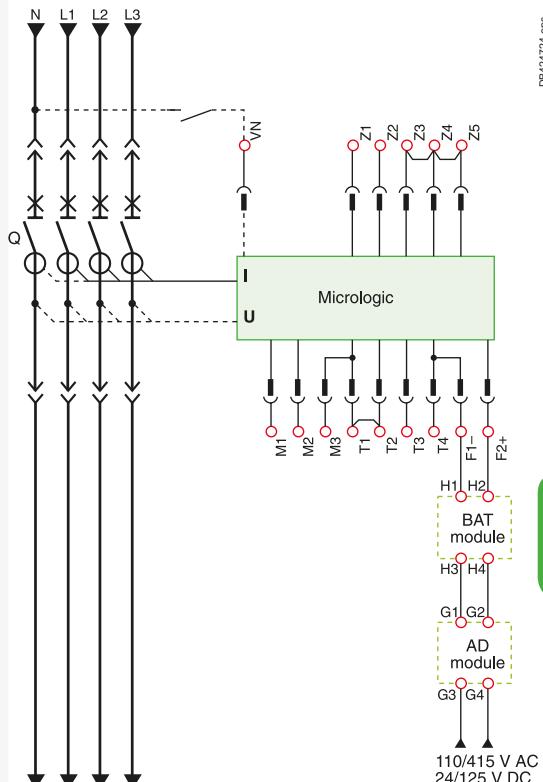



## Additional characteristics

### Tripping curves

Compact NS630b to 3200.....E-2

Current-limiting curves.....E-3


E

# Tripping curves


Compact NS630b to 3200

## Micrológic electronic control units


**Micrológic 2.0**

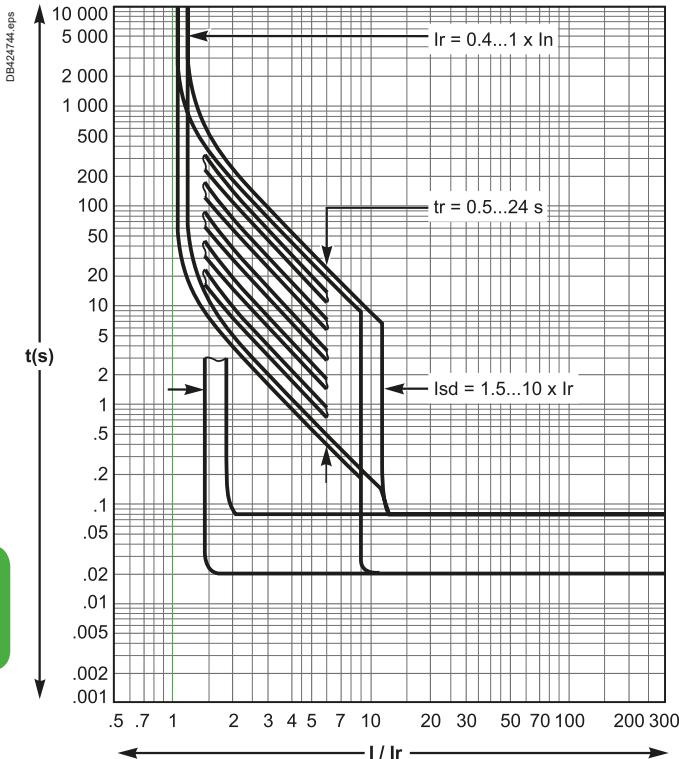

**Micrológic 5.0, 6.0, 7.0**

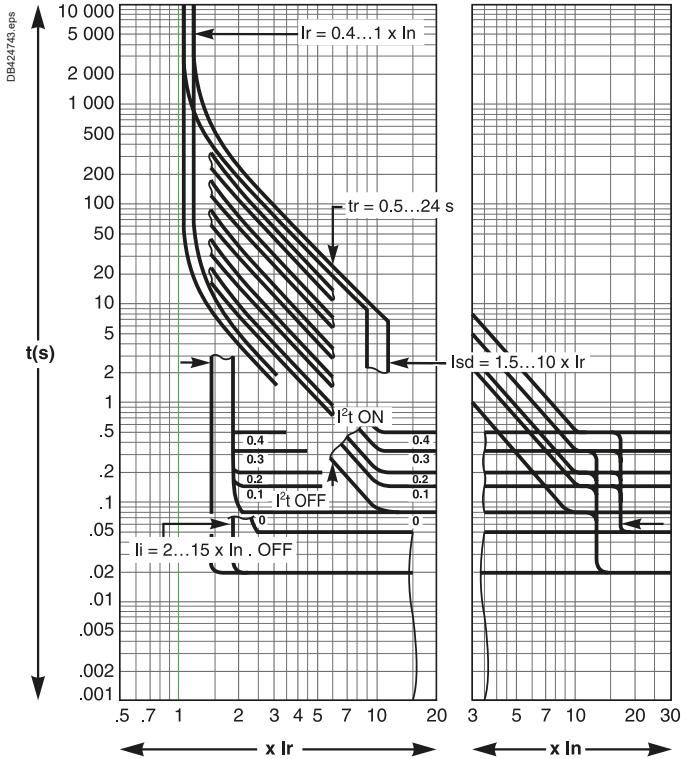

**Earth-fault protection (Micrológic 6.0)**

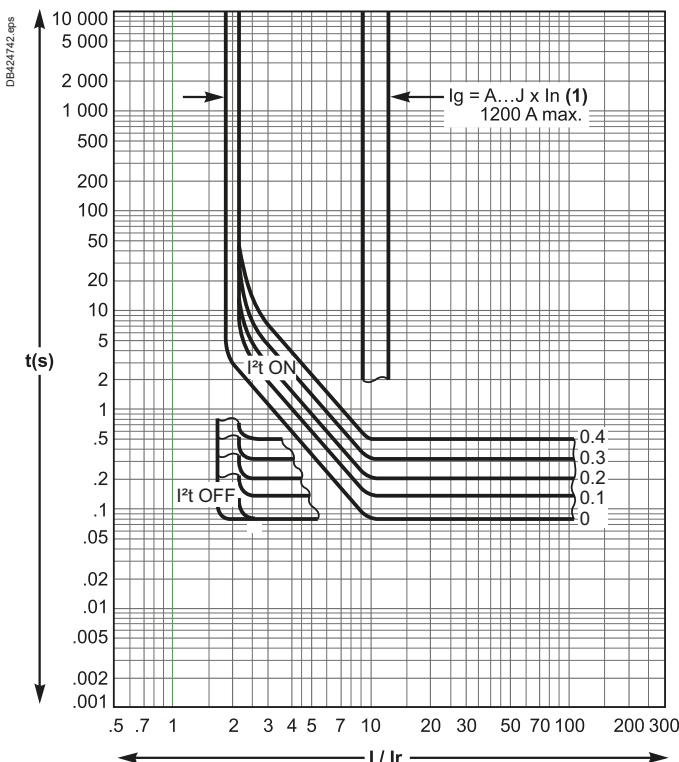

[1]

	A	B	C	D	E	F	G	H	J
In < 400 A	0.3	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1
400 A ≤ In ≤ 1200 A	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1
In > 1200 A	500	640	720	800	880	960	1040	1120	1200

The limiting capacity of a circuit breaker is its aptitude to limit short-circuit currents.

### I<sub>cs</sub> = 100 % I<sub>cu</sub>

The exceptional limiting capacity of the Compact NS range greatly reduces the forces created by fault currents in devices.

The result is a major increase in breaking performance. In particular, the service breaking capacity I<sub>cs</sub> is equal to 100 % of I<sub>cu</sub> for limitor circuit breaker.

The I<sub>cs</sub> value, defined by IEC standard 60947-2, is guaranteed by tests comprising the following operations:

- break three times consecutively a fault current equal to 100 % of I<sub>cu</sub>
- check that the device continues to function normally:
- it conducts the rated current without abnormal temperature rise
- protection functions perform within the limits specified by the standard
- suitability for isolation is not impaired.

### Longer service life of electrical installations

Current-limiting circuit breakers greatly reduce the negative effects of short-circuits on installations.

### Thermal effects

Less temperature rise in conductors, therefore longer service life for cables.

### Mechanical effects

Reduced electrodynamic forces, therefore less risk of electrical contacts or busbars being deformed or broken.

### Electromagnetic effects

Less disturbances for measuring devices located near electrical circuits.

### Economy by means of cascading

Cascading is a technique directly derived from current limiting. Circuit breakers with breaking capacities less than the prospective short-circuit current may be installed downstream of a limiting circuit breaker. The breaking capacity is reinforced by the limiting capacity of the upstream device.

It follows that substantial savings can be made on downstream equipment and enclosures.

### Current-limiting curves


The current-limiting capacity of a circuit breaker is expressed by two curves which are a function of the prospective short-circuit current (the current which would flow if no protection devices were installed):

- the actual peak current (limited current),
- thermal stress ( $A^2s$ ), i.e. the energy dissipated by the short-circuit in a conductor with a resistance of 1  $\Omega$ .

### Example

What is the real value of a 200 kA rms prospective short-circuit (i.e. 440 kA peak) limited by an NS630LB upstream ?

Answer: 70 kA peak (see next page).

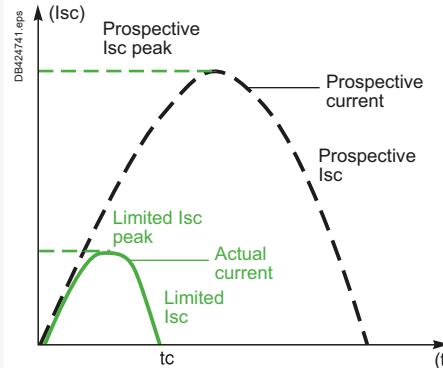


The exceptional limiting capacity of the Compact NS range is due to the rotating double-break technique (very rapid natural repulsion of contacts and the appearance of two arc voltages in-series with a very steep wave front).

# Current-limiting curves

## Current-limiting curves


### Voltage 400/440 V AC <sup>(1)</sup>

#### Limited short-circuit current (kA peak)

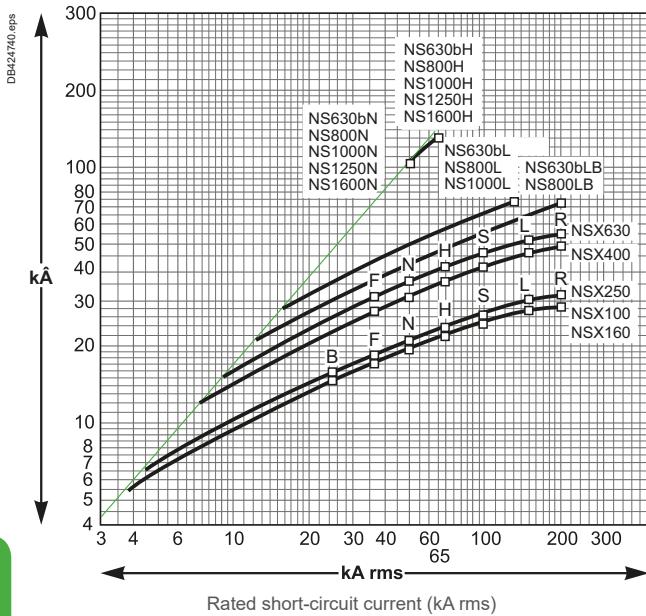

### Voltage 660/690 V AC


#### Limited short-circuit current (kA peak)

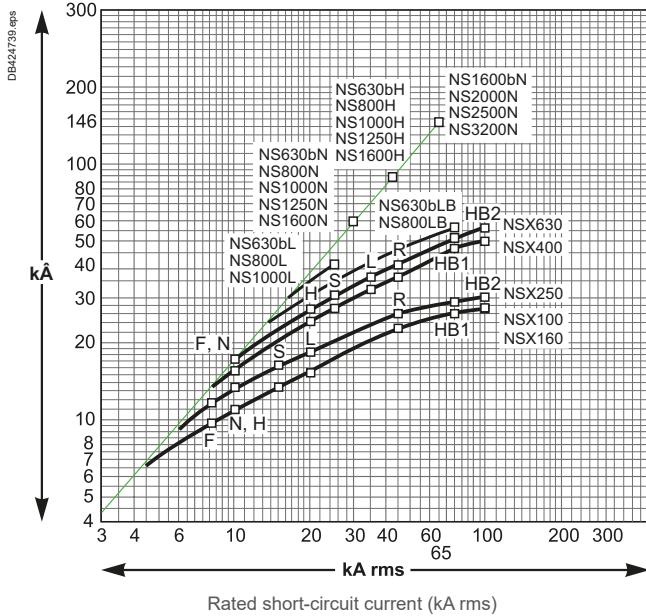

## Thermal-stress curves


### Voltage 400/440 V AC <sup>[1]</sup>

#### Limited energy

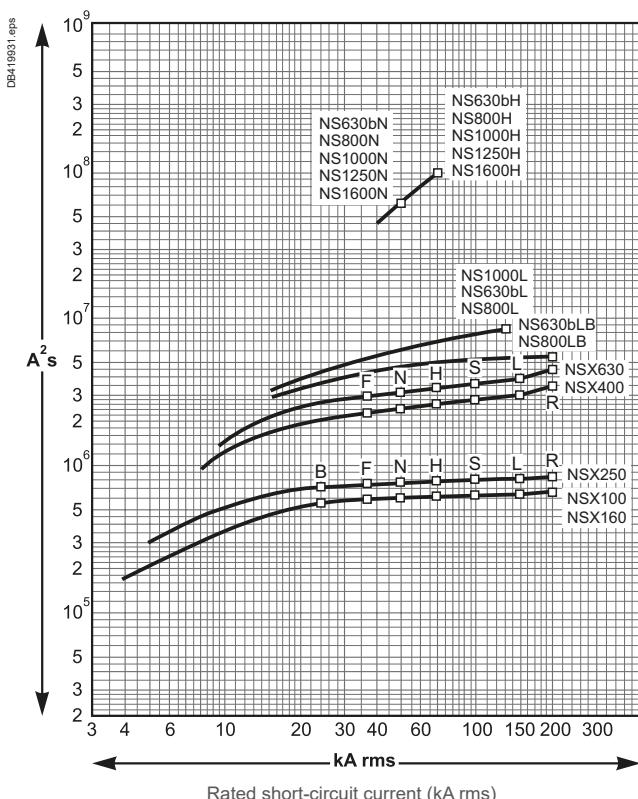

### Voltage 660/690 V AC

#### Limited energy

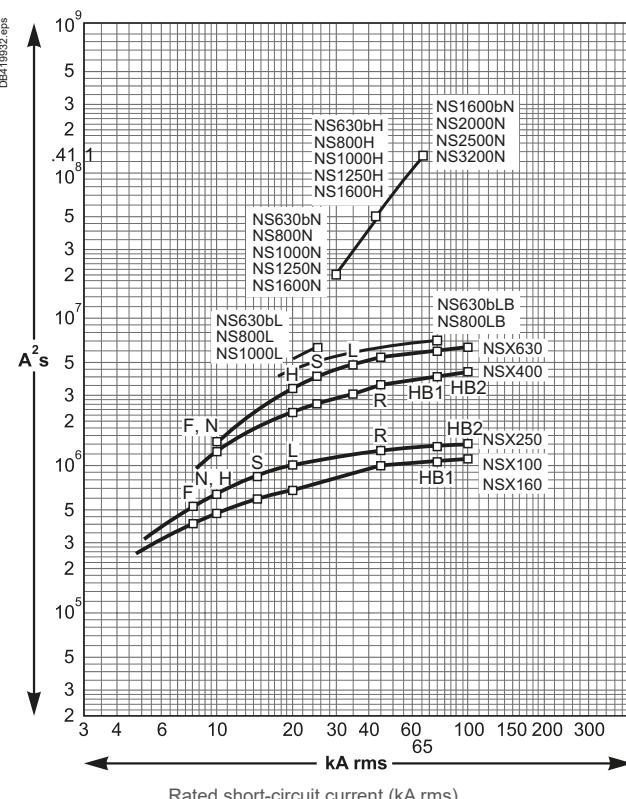


<sup>[1]</sup> Valid for 480 V Nema.

## Catalogue numbers and order forms

<b>NS630b to NS1600 fixed manually operated</b>	
Complete device.....	F-2
Device based on separate components.....	F-4
<b>NS630b to NS1600 fixed electrically operated</b>	
Device based on separate components.....	F-5
<b>NS630b to NS1600 manually operated withdrawable devices</b>	
Device based on separate components.....	F-6
<b>NS630b to NS1600 electrically operated withdrawable devices</b>	
Device based on separate components.....	F-7
<b>Accessories for NS630b to NS1600 fixed devices .....</b>	F-8
<b>Accessories for NS630b to NS1600 withdrawable devices .....</b>	F-9
<b>Accessories for NS630b to NS1600 fixed and withdrawable devices .....</b>	F-11
Mechanical interlocking .....	F-12
<b>Communication option for NS630b to NS1600 fixed and withdrawable devices .....</b>	F-13
<b>NS1600b to NS3200 fixed, front-connected, manually operated device.....</b>	F-14
<b>Accessories for NS1600b to NS3200 .....</b>	F-15
<b>Spare parts: NS630b to NS1600 fixed circuit breaker</b>	
Connection.....	F-16
Electrical auxiliaries and installation accessories.....	F-17
Micrologic control unit, external sensor.....	F-18
Locking and accessories.....	F-19
<b>Spare parts: NS630b to NS1600 fixed and withdrawable circuit breaker</b>	
Mechanical interlocking for source changeover .....	F-20
<b>Spare parts: NS630b to NS1600 withdrawable circuit breaker</b>	
Connection.....	F-21
Electrical auxiliaries.....	F-22
Installation accessories.....	F-23
Micrologic control unit, external sensor.....	F-24
Locking and accessories.....	F-25
Chassis locking and accessories Mechanical interlocking for source changeover .....	F-26
<b>Spare parts: NS630b to NS1600 fixed or withdrawable circuit breaker</b>	
Instructions.....	F-27
<b>Spare parts: Communication bus accessories, monitoring and control, ethernet gateway .....</b>	F-28
<b>Spare parts: Compact NS1600b to 3200</b>	
Connection, locking and installation accessories .....	F-29
Micrologic control unit, external sensor.....	F-30
<b>Order form: Compact NS630b to NS3200</b>	
Circuit breakers and switch-disconnectors.....	F-31

# NS630b to NS1600 fixed manually operated Complete device

## Front-connected circuit breaker with Micrologic 2.0 control unit

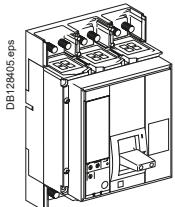

Compact NS type N		
Icu = 50 kA at 220/415 V	3P	4P
NS630b	33460	33463
NS800	33466	33469
NS1000	33472	33475
NS1250	33478	33480
NS1600	33482	33484


  

Compact NS type H		
Icu = 70 kA at 220/415 V	3P	4P
NS630b	33461	33464
NS800	33467	33470
NS1000	33473	33476
NS1250	33479	33481
NS1600	33483	33485

Compact NS type L		
Icu = 150 kA at 220/415 V	3P	4P
NS630b	33462	33465
NS800	33468	33471
NS1000	33474	33477

## Front-connected circuit breaker with Micrologic 5.0 control unit

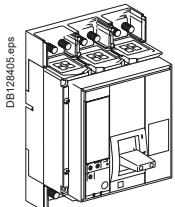

Compact NS type N		
Icu = 50 kA at 220/415 V	3P	4P
NS630b	33546	33549
NS800	33552	33555
NS1000	33558	33561
NS1250	33564	33566
NS1600	33568	33570


  

Compact NS type H		
Icu = 70 kA at 220/415 V	3P	4P
NS630b	33547	33550
NS800	33553	33556
NS1000	33559	33562
NS1250	33565	33567
NS1600	33569	33571

Compact NS type L		
Icu = 150 kA at 220/415 V	3P	4P
NS630b	33548	33551
NS800	33554	33557
NS1000	33560	33563

## Front-connected circuit breaker with Micrologic 6.0 control unit

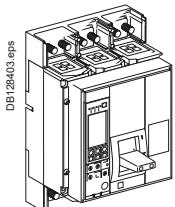


Compact NS type N		
Icu = 50 kA at 220/415 V	3P	4P
NS630b	33886	33888
NS800	33893	33896
NS1000	33909	33917
NS1250	33919	33923
NS1600	33925	33927

Compact NS type H		
Icu = 70 kA at 220/415 V	3P	4P
NS630b	33887	33889
NS800	33894	33901
NS1000	33916	33918
NS1250	33922	33924
NS1600	33926	33928

# NS630b to NS1600 fixed manually operated Complete device

## Front-connected circuit breaker with Micrologic 2.0 A control unit

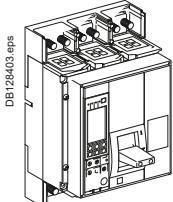

Compact NS type N Icu = 50 kA at 220/415 V		
3P	4P	
NS630b	33223	33227
NS800	33233	33237
NS1000	33243	33247
NS1250	33253	33257
NS1600	33263	33267


  

Compact NS type H Icu = 70 kA at 220/415 V		
3P	4P	
NS630b	33228	33229
NS800	33238	33239
NS1000	33248	33249
NS1250	33258	33259
NS1600	33268	33269

Compact NS type L Icu = 150 kA at 220/415 V		
3P	4P	
NS630b	33497	33500
NS800	33498	33501
NS1000	33499	33502

## Front-connected circuit breaker with Micrologic 5.0 A control unit

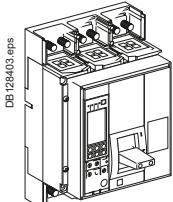

Compact NS type N Icu = 50 kA at 220/415 V		
3P	4P	
NS630b	33323	33327
NS800	33333	33337
NS1000	33343	33347
NS1250	33353	33357
NS1600	33363	33367


  

Compact NS type H Icu = 70 kA at 220/415 V		
3P	4P	
NS630b	33328	33329
NS800	33338	33339
NS1000	33348	33349
NS1250	33358	33359
NS1600	33368	33369

Compact NS type L Icu = 150 kA at 220/415 V		
3P	4P	
NS630b	33516	33519
NS800	33517	33520
NS1000	33518	33521

## Fixed front connected Micrologic 2.0 E

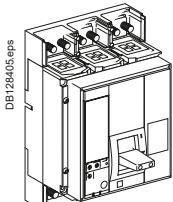


Compact NS type N		
3P	4P	
NS630b	34400	34402
NS800	34404	34406
NS1000	34408	34410
NS1250	34412	34414
NS1600	34416	34418

Compact NS type H		
3P	4P	
NS630b	34401	34403
NS800	34405	34407
NS1000	34409	34411
NS1250	34413	34415
NS1600	34417	34419

## Fixed front connected Micrologic 5.0 E

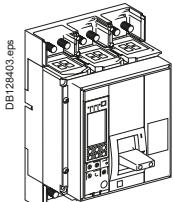


Compact NS type N		
3P	4P	
NS630b	34420	34422
NS800	34424	34426
NS1000	34428	34430
NS1250	34432	34434
NS1600	34436	34438

Compact NS type H		
3P	4P	
NS630b	34421	34423
NS800	34425	34427
NS1000	34429	34431
NS1250	34433	34435
NS1600	34437	34439

## Front-connected switch-disconnector

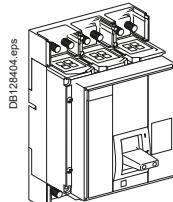


3P	4P
NS630b	33486
NS800	33487
NS1000	33488
NS1250	33489
NS1600	33490

**Note:** select in addition the connection accessories, device accessories and auxiliaries, control-unit accessories and communications option, as required.

# NS630b to NS1600 fixed manually operated

## Device based on separate components


### Basic circuit breaker

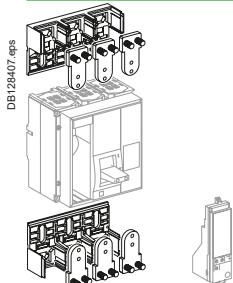

Compact NS type N Icu = 50 kA at 220/415 V		
	3P	4P
NS630b	33220	33224
NS800	33230	33234
NS1000	33240	33244
NS1250	33250	33254
NS1600	33260	33264
Compact NS type H Icu = 70 kA at 220/415 V		
	3P	4P
NS630b	33221	33225
NS800	33231	33235
NS1000	33241	33245
NS1250	33251	33255
NS1600	33261	33265
Compact NS type L Icu = 150 kA at 220/415 V		
	3P	4P
NS630b	33222	33226
NS800	33232	33236
NS1000	33242	33246
Compact NS type LB Icu = 200 kA at 400/415 V		
	3P	4P
NS630b	48952	48955
NS800	48953	48956
Micrologic control units Without "measurement"		
	3P/4P	
Micrologic 2.0	basic protection	33504
Micrologic 5.0	selective protection	33511
Micrologic 6.0	selective + earth-fault protection	33515
"ammeter" A		
	3P/4P	
Micrologic 2.0 A	basic protection	33505
Micrologic 5.0 A	selective protection	33512
Micrologic 6.0 A	selective + earth-fault protection	33513
Micrologic 7.0 A	selective + earth-leakage protection	33514
"energy" E [1]		
	3P/4P	
Micrologic 2.0 E	basic protection	33535
Micrologic 5.0 E	selective protection	33537
Micrologic 6.0 E	selective + earth-fault protection	33539
"power meter" P [1]		
	3P/4P	
Micrologic 5.0 P	selective protection	65290
Micrologic 6.0 P	selective + earth-fault protection	65291
Micrologic 7.0 P	selective + earth-leakage protection	65292


[2] In case of an installation 3P + Neutral, please add ENVT device ref. 65317 (see page F-13).

### Basic switch-disconnector

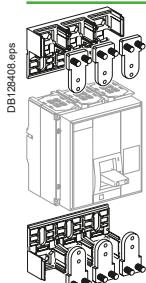

Compact NS type NA		
	3P	4P
NS630b	33420	33421
NS800	33422	33423
NS1000	33424	33425
NS1250	33426	33427
NS1600	33428	33429

### Connections for circuit breakers and switch-disconnectors

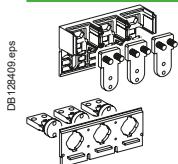


Front connection		
	3P	4P
630-1000 A - NA/N/H	Top Bottom	33598 33599
1250 A - NA/N/H	Top Bottom	33600 33601
630-1000 A - L	Top Bottom	33601 33602
1600 A - NA/N/H	Top Bottom	33602 33603
Rear connection		
	3P	4P
Vertical NA/N/H/L/LB	Top Bottom	33604 33605
Horizontal NA/N/H/L/LB	Top Bottom	33606 33607

**Note:** to order a complete device, order:

■ a basic circuit breaker and a Micrologic control unit, or a basic switch disconnector. ■ connections. ■ accessories (for the device, the connection, the control unit) and communication option as required.

# NS630b to NS1600 fixed electrically operated Device based on separate components

## Basic circuit breaker

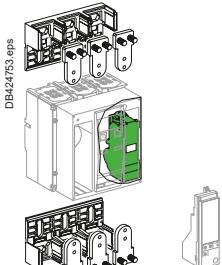


**Note:** the characteristics of the motor mechanism module for electrical operation are specified separately by selecting a part number from the table at the bottom of this page.

Compact NS type N Icu = 50 kA at 220/415 V		
	3P	4P
NS630b	33270	33274
NS800	33280	33284
NS1000	33290	33294
NS1250	33300	33304
NS1600	33310	33314
Compact NS type H Icu = 70 kA at 220/415 V		
	3P	4P
NS630b	33271	33275
NS800	33281	33285
NS1000	33291	33295
NS1250	33301	33305
NS1600		
	33311	33315
Compact NS type L Icu = 150 kA at 220/415V		
	3P	4P
NS630b	33272	33276
NS800	33282	33286
NS1000	33292	33296
Micrologic control units Without "measurement"		
	3P/4P	
Micrologic 2.0	basic protection	33504
Micrologic 5.0	selective protection	33511
Micrologic 6.0	selective + earth-fault protection "ammeter" A	33515
Micrologic 2.0 A		
	3P/4P	
Micrologic 2.0 A	basic protection	33505
Micrologic 5.0 A	selective protection	33512
Micrologic 6.0 A	selective + earth-fault protection	33513
Micrologic 7.0 A	selective + earth-leakage protection "energy" E [1]	33514
Micrologic 2.0 E		
	3P/4P	
Micrologic 2.0 E	basic protection	33535
Micrologic 5.0 E	selective protection	33537
Micrologic 6.0 E	selective + earth-fault protection "power meter" P [1]	33539
Micrologic 5.0 P		
	3P/4P	
Micrologic 5.0 P	selective protection	65290
Micrologic 6.0 P	selective + earth-fault protection	65291
Micrologic 7.0 P	selective + earth-leakage protection	65292

[1] In case of an installation 3P + Neutral, please add ENVT device ref. 65317 (see page F-13).

F


## Basic switch-disconnector

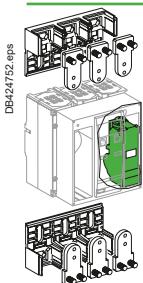

Compact NS type NA		
	3P	4P
NS630b	33440	33441
NS800	33442	33443
NS1000	33444	33445
NS1250	33446	33447
NS1600	33448	33449

**Note:** the characteristics of the motor mechanism module for electrical operation are specified separately by selecting a part number from the table at the bottom of this page.

## Connections for circuit breakers and switch-disconnectors

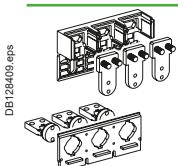

Front connection		
	3P	4P
630-1000 A - NA/N/H	Top 33598	33608
	Bottom 33599	33609
1250 A - NA/N/H	Top 33600	33610
630-1000 A - L	Bottom 33601	33611
1600 A - NA/N/H	Top 33602	33612
	Bottom 33603	33613
Rear connection		
	3P	4P
Vertical NA/N/H/L	Top 33604	33614
	Bottom 33605	33615
Horizontal NA/N/H/L	Top 33606	33616
	Bottom 33607	33617

## Motor mechanism module

AC 50/60 Hz		DC		
	Standard	Communicating	Standard	
48 V	33691 [2]	33698 [2]	24/30 V	33690 [2]
100/130 V	33687 [2]	33694 [2]	48/60 V	33691 [2]
220/240 V	33688 [2]	33695 [2]	100/130 V	33692 [2]
380/415 V	33689 [2]	33696 [2]	200/250 V	33693 [2]

**Note:** to order a complete device, order:


■ a basic circuit breaker and a Micrologic control unit, or a basic switch disconnector. ■ connections. ■ accessories (for the device, the connection, the control unit) and communication option as required.

[2] Consult us.

# NS630b to NS1600 manually operated withdrawable devices

## Device based on separate components

### Basic circuit breaker

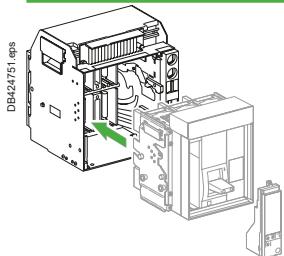


Compact NS type N Icu = 50 kA at 220/415 V		
	3P	4P
NS630b	33320	33324
NS800	33330	33334
NS1000	33340	33344
NS1250	33350	33354
NS1600	33360	33364
Compact NS type H Icu = 70 kA at 220/415 V		
	3P	4P
NS630b	33321	33325
NS800	33331	33335
NS1000	33341	33345
NS1250	33351	33355
NS1600	33361	33365
Compact NS type L Icu = 150 kA at 220/415 V		
	3P	4P
NS630b	33322	33326
NS800	33332	33336
NS1000	33342	33346
Compact NS type LB Icu = 200 kA at 400/415 V		
	3P	4P
NS630b	48967	48971
NS800	48968	48972
Micrologic control units Without "measurement"		
	3P/4P	
Micrologic 2.0	basic protection	33504
Micrologic 5.0	selective protection	33511
Micrologic 6.0	selective + earth-fault protection	33515
"ammeter" A		
	3P/4P	
Micrologic 2.0 A	basic protection	33525
Micrologic 5.0 A	selective protection	33532
Micrologic 6.0 A	selective + earth-fault protection	33533
Micrologic 7.0 A	selective + earth-leakage protection	33534
"energy" E <sup>[1]</sup>		
	3P/4P	
Micrologic 2.0 E	basic protection	33536
Micrologic 5.0 E	selective protection	33538
Micrologic 6.0 E	selective + earth-fault protection	33540
"power meter" P <sup>[1]</sup>		
	3P/4P	
Micrologic 5.0 P	selective protection	65293
Micrologic 6.0 P	selective + earth-fault protection	65294
Micrologic 7.0 P	selective + earth-leakage protection	65295

<sup>[1]</sup> In case of an installation 3P + Neutral, please add ENVT device ref. 65316 (see page F-13).


F

### Basic switch-disconnector

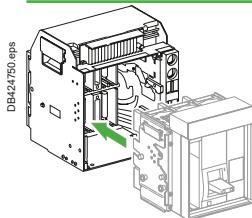

Compact NS type NA		
	3P	4P
NS630b	33430	33431
NS800	33432	33433
NS1000	33434	33435
NS1250	33436	33437
NS1600	33438	33439

### Basic chassis and connections

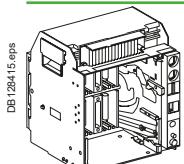


Chassis		
	3P	4P
630-1250 A - NA/N/H	33722	33725
1600 A - NA/N/H	33723	33726
630/800 A - LB		
630-1000 A - L		
+ connection		
Front connection		
Top NA/N/H/L/LB	33727	33733
Bottom NA/N/H/L/LB	33728	33734
Rear connection		
Vertical NA/N/H/L/LB	Top	33729
	Bottom	33730
Horizontal	Top	33731
	Bottom	33732
NA/N/H/L/LB		33735
		33736
		33737
		33738

**Note:** to order a complete device, order:  
 ■ a basic circuit breaker and a Micrologic control unit, or a basic switch disconnector. ■ chassis and connections. ■ accessories (for the device, the connection, the control unit) and communication option as required.

# NS630b to NS1600 electrically operated withdrawable devices

## Device based on separate components

### Basic circuit breaker

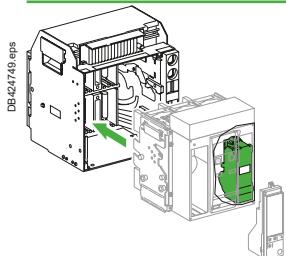


**Note:** the characteristics of the motor mechanism module for electrical operation are specified separately by selecting a part number from the table at the bottom of this page.

Compact NS type N Icu = 50 kA at 220/415 V		
	3P	4P
NS630b	33370	33374
NS800	33380	33384
NS1000	33390	33394
NS1250	33400	33404
NS1600	33410	33414
Compact NS type H Icu = 70 kA at 220/415 V		
	3P	4P
NS630b	33371	33375
NS800	33381	33385
NS1000	33391	33395
NS1250	33401	33405
NS1600	33411	33415
Compact NS type L Icu = 150 kA at 220/415 V		
	3P	4P
NS630b	33372	33376
NS800	33382	33386
NS1000	33392	33396
Micrologic control units Without "measurement"		
	3P/4P	
Micrologic 2.0	basic protection	33504
Micrologic 5.0	selective protection	33511
Micrologic 6.0	selective + earth-fault protection	33515
"ammeter" A		
Micrologic 2.0 A	basic protection	33525
Micrologic 5.0 A	selective protection	33532
Micrologic 6.0 A	selective + earth-fault protection	33533
Micrologic 7.0 A	selective + earth-leakage protection	33534
"energy" E [1]		
Micrologic 2.0 E	basic protection	33536
Micrologic 5.0 E	selective protection	33538
Micrologic 6.0 E	selective + earth-fault protection	33540
"power meter" P [1]		
Micrologic 5.0 P	selective protection	65293
Micrologic 6.0 P	selective + earth-fault protection	65294
Micrologic 7.0 P	selective + earth-leakage protection	65295

[1] In case of an installation 3P + Neutral, please add ENVT device ref. 65316 (see page F-13).



### Basic switch-disconnector

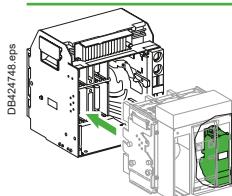

Compact NS type NA		
	3P	4P
NS630b	33450	33451
NS800	33452	33453
NS1000	33454	33455
NS1250	33456	33457
NS1600	33458	33459

**Note:** the characteristics of the motor mechanism module for electrical operation are specified separately by selecting a part number from the table at the bottom of this page.

### Chassis and connections

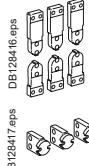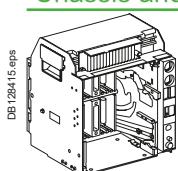

Chassis		
	3P	4P
630-1250 A - NA/N/H	33722	33725
1600 A - NA/N/H	33723	33726
630-1000 A - L		
+ connection		
	3P	4P

Front connection		
	3P	4P
Top NA/N/H/L	33727	33733
Bottom NA/N/H/L	33728	33734

Rear connection		
	3P	4P
Vertical NA/N/H/L	Top	33729
	Bottom	33730
Horizontal NA/N/H/L	Top	33731
	Bottom	33732

### Motor mechanism module

AC 50/60 Hz			DC			
	Standard	Communicating		Standard	Communicating	
48 V	33831	[2]	33838	[2]	33837	[2]
100/130 V	33827	[2]	33834	[2]	33838	[2]
220/240 V	33828	[2]	33835	[2]	33839	[2]
380/415 V	33829	[2]	33836	[2]	33840	[2]

**Note:** to order a complete device, order:

- a basic circuit breaker and a Micrologic control unit, or a basic switch disconnector. ■ chassis and connections.
- accessories (for the device, the connection, the control unit) and communication option as required.

[2] Consult us.

## Accessories for NS630b to NS1600 fixed devices

Connection accessories		Front connection	Rear connection			
Bare-cable connectors + 1 connector shield for 4 cables (240 mm <sup>2</sup> ) DB128420.eps	3P (3 parts) 4P (4 parts)	33640 33641				
1 long connection shield DB128421.eps	3P 4P	33628 33629				
Vertical-connection adapters DB128422.eps	3P (3 parts) 4P (4 parts)	33642 33643				
Cable lug adapters DB128423.eps	3P (3 parts) 4P (4 parts)	33644 33645	33644 33645			
Cable lug kits DB128424.eps	240 mm <sup>2</sup> 300 mm <sup>2</sup>	33013 33014 33015 33016	33013 33014 33015 33016			
Interphase barriers DB128425.eps	3P/4P top (3 parts) 3P/4P bottom (3 parts)	33646 33646	33648 33648			
Arc chute screen DB128426.eps	3P 4P	64907 33597				
Brackets for mounting on a horizontal surface DB128427.eps	3P/4P (2 parts)		64908			
Spreaders DB128428.eps	3P 4P	33622 33623	33622 33623			
Electrical auxiliaries						
Indication contacts DB128429.eps	OF, ON/OFF indication contacts SD, trip indication contact for manually operated devices SDE, fault indication contact operated devices Up to 3 OF, 1 SD and 1 SDE can be connected (the SDE contact is standard for electrically operated devices).	6 A - 240 V 33108 33004 33011	Low level 33109 33008 33012			
Programmable contacts [1] DB128430.eps	M6C kit for fixed manual or electrical device		65319			
Instantaneous voltage releases DB128432.eps	12 V DC 24/30 V DC, 24 V AC 48/60 V DC, 48 V AC 100/130 V AC/DC 200/250 V AC/DC 277 V AC 380/480 V AC	MX 33658 33659 33660 33661 33662 33663 33664	MN 33668 33669 33670 33671 33673	Delay unit 48/60 V AC/DC 100/130 V AC/DC 200/250 V AC/DC 380/480 V AC/DC	R (non-adjustable) 33684 33685	Rr (adjustable) 33680 33681 33682 33683
Installation accessories						
Escutcheon (small cut-out) for manually operated device with toggle ref. 33717 DB128430.eps	Escutcheon (small cut-out) for manually operated device with toggle		33717			
Escutcheon for: device with toggle (large cutout), - device with rotary handle, - electrically operated device ref. 33718 DB128431.eps			33718			
Blanking plate DB128432.eps			33858			

[1] For Micrologic control units P only.

# Accessories for NS630b to NS1600 withdrawable devices


Connection accessories		Front connection	Rear connection			
Vertical-connection adapters		3P (3 parts) 4P (4 parts)	<b>33642</b> <b>33643</b>			
Cable lug adapters		3P (3 parts) 4P (4 parts)	<b>33644</b> <b>33645</b>			
Cable lug kits		240 mm <sup>2</sup> 300 mm <sup>2</sup> 3P (6 lug kit) 4P (8 lug kit) 3P (6 lug kit) 4P (8 lug kit)	<b>33013</b> <b>33014</b> <b>33015</b> <b>33016</b> <b>33013</b> <b>33014</b> <b>33015</b> <b>33016</b>			
Interphase barriers		3P/4P (3 parts)	<b>33768</b>			
Spreaders		3P (3 parts) 4P (4 parts)	<b>33622</b> <b>33623</b> <b>33622</b> <b>33623</b>			
Chassis accessories						
Auxiliary terminal shield (CB)		3P 4P	<b>33763</b> <b>33764</b>			
Safety shutters (VO) as standard		3P 4P	<b>33765</b> <b>33766</b>			
Electrical auxiliaries						
OF ON/OFF indication contacts		OF, ON/OFF indication contacts SD, trip indication contact for manually operated devices SDE, fault indication contact operated devices Up to 3 OF, 1 SD and 1 SDE can be connected (the SDE contact is standard for electrically operated devices)	<b>6 A - 240 V</b> <b>33801</b> <b>33804</b> <b>33800</b> <b>33803</b> <b>33799</b> <b>33802</b> <b>Up to 3 OF, 1 SD and 1 SDE can be connected (the SDE contact is standard for electrically operated devices)</b>			
CE, CD, CT carriage switches		6 A - 240 V Low level Up to 3 CE, 1 CT, 2 CD per device	<b>33170</b> <b>33171</b>			
Programmable contacts <sup>[1]</sup>		M6C kit for drawout manual or electrical device	<b>65320</b>			
Instantaneous voltage releases		MX 12 V DC 24/30 V DC, 24 V AC 48/60 V DC, 48 V AC 100/130 V AC/DC 200/250 V AC/DC 277 V AC 380/480 V AC	<b>MN</b> <b>33819</b> <b>33820</b> <b>33821</b> <b>33822</b> <b>33824</b>	Delay unit 48/60 V AC/DC 100/130 V AC/DC 200/250 V AC/DC 380/480 V AC/DC	R (non-adjustable) <b>33684</b> <b>33685</b>	Rr (adjustable) <b>33680</b> <b>33681</b> <b>33682</b> <b>33683</b>
Auxiliary terminals for chassis alone		3 wire terminal (30 parts) 6 wire terminal (10 parts) Jumpers (10 parts)			<b>47071</b> <b>47072</b> <b>47900</b>	

[1] For Micrologic control units P only.

# Accessories for NS630b to NS1600 withdrawable devices

## Chassis locking

Keylocking in disconnected position

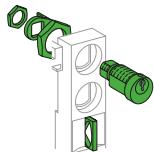

### By Profalux keylocks

Profalux	1 lock with 1 key + adaptation kit	64909
	2 locks 1 key + adaptation kit	64910
	2 locks 2 different keys + adaptation kit	64911
1 keylock Profalux (without adaptation kit):		
	identical key not identified combination	33173
	identical key identified 215470 combination	33174
	identical key identified 215471 combination	33175

### By Ronis keylocks

Ronis	1 lock with 1 key + adaptation kit	64912
	2 locks 1 key + adaptation kit	64913
	2 locks 2 different keys + adaptation kit	64914
1 keylock Ronis (without adaptation kit):		
	identical key not identified combination	33189
	identical key identified EL24135 combination	33190
	identical key identified EL24153 combination	33191
	identical key identified EL24315 combination	33192
Optional disconnected/test/connected position locking		33779
Adaptation kit (without keylock):		
	adaptation kit Profalux	33769
	adaptation kit Ronis	33770
	adaptation kit Castell	33771
	adaptation kit Kirk	33772


## Door interlock



Right side of chassis (VPEC)	33786
Left side of chassis (VPEG)	33787

F

## Racking interlock (VPOC)

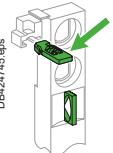

33788

## Mismatch protection (VDC)



33767

## Installation accessories

### Escutcheon




33857

### Transparent cover for escutcheon



33859

### Blanking plate

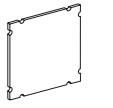


33858

# Accessories for NS630b to NS1600 fixed and withdrawable devices

## Locking for manually operated devices

### Removable toggle locking system

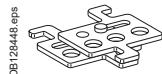

Locking by 3 padlocks

44936




Fixed toggle locking system

Locking by 3 padlocks

32631

## Rotary handle for manually operated devices

### Devices with direct rotary handles

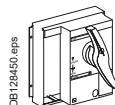

Handle and front

Black handle and black front

33863

Red handle and yellow front

33864

Conversion accessory

CNOMO

33866

Locking by keylocks

Ronis

Profalux

OFF position

33870

33869

OFF and ON positions

33872


33871

Keylock kit (without keylocks)

33868

33868


### Mechanical interlocking

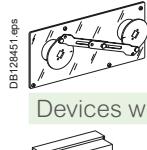

For 2 devices with extended rotary handles

33890

## Devices with extended rotary handles

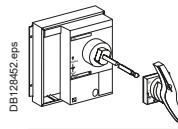

Handle and front

Black handle and black front

33878

Red handle and yellow front

33879

Telescopic (for chassis-mounted devices)

33880

## Control accessories



2 advanced indication contacts (6 A - 240 V)

Fixed

Withdrawable

Early break

33882

33884


Early make

33883

33885

## Locking and accessories for electrically operated devices

### Pushbutton locking

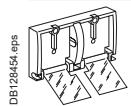

By transparent cover + padlocks

33897



### Locking in OFF position

By padlocks + BPFE support

47514

VCPO

By Profalux keylocks

Profalux

1 lock with 1 key + adaptation kit

33902

2 locks 1 key + adaptation kit

33904

1 keylock Profalux (without adaptation kit):

identical key not identified combination

33173

identical key identified 215470 combination

33174

identical key identified 215471 combination

33175

By Ronis keylocks + BPFE support

Ronis

1 lock with 1 key + adaptation kit

33903

2 locks 1 key + adaptation kit

33905

1 keylock Ronis (without adaptation kit):

identical key not identified combination

33189

identical key identified EL24135 combination

33190

identical key identified EL24153 combination

33191

identical key identified EL24315 combination

33192

Adaptation kit (without keylock):

adaptation kit Profalux

33898

adaptation kit Ronis

33899

adaptation kit Kirk

47517

adaptation kit Castell

47518

## Operation counter CDM



Operation counter CDM


33895

# Accessories for NS630b to 1600 fixed and withdrawable devices

## Mechanical interlocking

### Mechanical interlocking for source changeover

Interlocking using connecting rods for Compact electrically operated devices

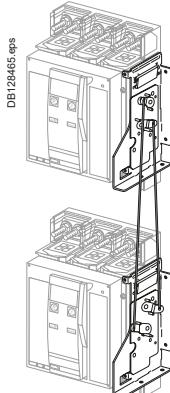

Complete assembly with 2 adaptation fixtures + rods


2 Compact fixed devices

2 Compact withdrawable devices

33910

33913

Interlocking using cables for Compact electrically operated devices

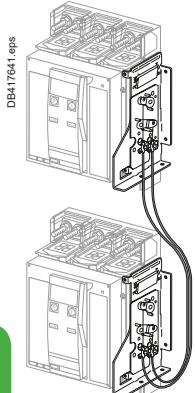

Complete assembly with 2 adaptation fixtures + cables

2 Compact fixed devices

2 Compact withdrawable devices

1 Compact fixed + 1 Compact withdrawable device

33911




33914

33915


F

# Communication option for NS630b to NS1600 fixed and withdrawable devices

## Communication options

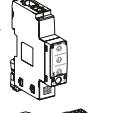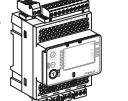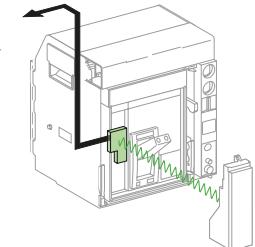
 DB425988.eps   DB425706.eps   DB425869.eps   DB424755.eps	IFE	Ethernet interface for LV breaker Ethernet interface for LV breakers and gateway	LV434001 LV434002
	IFM Modbus-SL interface module		LV434000
	I/O application module		LV434063
For fixed devices			
		Manually operated	Electrically operated
COM (BCM-ULP) Eco COM module (BCM-ULP)		33702 33703	33708 33709
For drawout devices Breaker + chassis			
		Manually operated	Electrically operated
COM (BCM-ULP) Eco COM module (BCM-ULP)		33842 33714	33848 33713

## Accessories for Micrologic control units

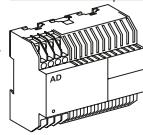 DB128458.eps   For Micrologic E and P - 3P + Neutral installation	Long-time rating plug (enhanced accuracy by limiting the setting range)	
	Standard	0.4 to 1 x Ir
	Low setting	0.4 to 0.8 x Ir
	High setting	0.8 to 1 x Ir
	Without long-time protection	OFF
External Neutral Voltage Tap		
For Micrologic E and P - 3P + Neutral installation		
		Connection kit to neutral for Micrologic P on fixed version
		65317
		Connection kit to neutral for Micrologic P on drawout version
		65316
External sensors		
External sensor for neutral + earth-fault protection (TCE)		
		CT rating: 400/1600 A
		33576
Rectangular sensor for earth-leakage protection		
 DB126100.eps		Inside dimensions (mm) L1 1600 280 x 115
		56053
Source ground return (SGR) earth fault protection		
 DB128460.eps		External sensor (SGR) MDGF summing module
		33579 48891
External power supply module (AD)		
 DB128461.eps		24/30 V DC 48/60 V DC 100/125 V DC 110/130 V AC 200/240 V AC 380/415 V AC
		54440 54441 54442 54443 54444 54445
Test equipment		
Mini test kit		
 DB128463.eps		Hand held test kit (HHTK)
		33594
Portable test kit		
 DB128464.eps		Full function test kit (FFTK) Test report edition come from FFTK FFTK test cable 2 pin for STR trip unit FFTK test cable 7 pin for Micrologic trip unit
		33595 34559 34560 33590


# NS1600b to NS3200 fixed, front-connected, manually operated device

## Circuit breaker

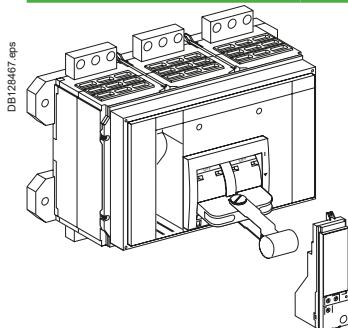


Compact NS type N Icu = 85/70 kA to 220/415 V		3P	4P
NS1600b		34000	34003
NS2000		34006	34009
NS2500		34012	34015
NS3200		34018	34021
Compact NS type H Icu = 125/85 kA to 220/415 V		3P	4P
NS1600b		34001	34004
NS2000		34007	34010
NS2500		34013	34016
NS3200		34019	34022
Micrologic control units Without "measurement"		3P/4P	
Micrologic 2.0	basic protection	33504	
Micrologic 5.0	selective protection	33511	
Micrologic 6.0	selective + earth-fault protection "ammeter" A	33515	
Micrologic 2.0 A Micrologic 5.0 A Micrologic 6.0 A Micrologic 7.0 A		3P/4P	
Micrologic 2.0 A	basic protection	33505	
Micrologic 5.0 A	selective protection	33512	
Micrologic 6.0 A	selective + earth-fault protection	33513	
Micrologic 7.0 A	selective + earth-leakage protection "energy" E	33514	
Micrologic 2.0 E Micrologic 5.0 E Micrologic 6.0 E		3P/4P	
Micrologic 2.0 E	basic protection	33535	
Micrologic 5.0 E	selective protection	33537	
Micrologic 6.0 E	selective + earth-fault protection	33539	

## Switch-disconnector

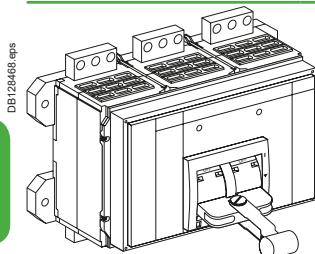

Compact NS type NA		3P	4P
NS1600b		34024	34025
NS2000		34027	34028
NS2500		34030	34031
NS3200		34033	34034

## Optional vertical connection adaptor

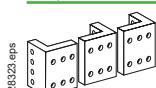

1600/2500 A	3P (3 parts) 4P (4 parts)	33975 33976
<b>Note:</b> standard for 3200 A.		

## Electrical auxiliaries

### Indication contacts



OF, ON/OFF indication contacts	6 A - 240 V	Low level
SD, trip indication contact for manually operated devices	33108	33109
SDE, fault indication contact operated devices	33004	33008
Up to 3 OF, 1 SD and 1 SDE can be connected	33011	33012

### Instantaneous voltage releases



	MX	MN	Delay unit	R (non-adjustable)	Rr (adjustable)
12 V DC	33658				
24/30 V DC, 24 V AC	33659	33668			
48/60 V DC, 48 V AC	33660	33669	48/60 V AC/DC		33680
100/130 V AC/DC	33661	33670	100/130 V AC/DC	33684	33681
200/250 V AC/DC	33662	33671	200/250 V AC/DC	33685	33682
277 V AC	33663				
380/480 V AC	33664	33673	380/480 V AC/DC		33683

## Locking


### Removable toggle locking system



Locking by 3 padlocks

33996

### Fixed toggle locking system

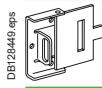


Locking by 3 padlocks


32631

# Accessories for NS1600b to NS3200

## Communication option

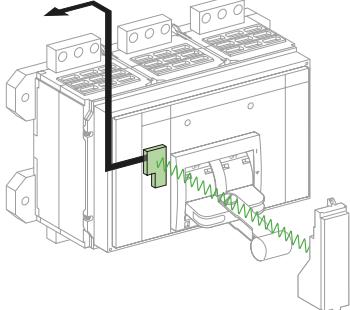 <small>DB124755.eps</small>	IFE	Ethernet interface for LV breaker	<b>LV434001</b>
	IFM Modbus-SL interface module	Ethernet interface for LV breakers and gateway	<b>LV434002</b>
	I/O application module		<b>LV434000</b>
	COM (BCM-ULP)		<b>LV434063</b>
			<b>33986</b>
	Eco COM module (BCM-ULP)		<b>33988</b>

## Accessories for Micrologic control units

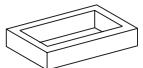 <small>DB124848.eps</small>	Long-time rating plug (enhanced accuracy by limiting the setting range)		
	Standard	0.4 to 1 x Ir	<b>33542</b>
	Low setting	0.4 to 0.8 x Ir	<b>33543</b>
	High setting	0.8 to 1 x Ir	<b>33544</b>
	Without long-time protection	OFF	<b>33545</b>
<b>External sensors</b>			
External sensor for neutral + earth-fault protection (TCE)		CT rating: 1000/4000 A	<b>34036</b>
 <small>DB124840.eps</small>			
Rectangular sensor for earth-leakage protection		470 mm x 160 mm	<b>33574</b>
 <small>DB12460.eps</small>			
Source ground return (SGR) earth fault protection		External sensor (SGR) MDGF summing module	<b>33579</b> <b>48891</b>
<b>External power supply module (AD)</b>			
 <small>DB12461.eps</small>		24/30 V DC 48/60 V DC 100/125 V DC 110/130 V AC 200/240 V AC 380/415 V AC	<b>54440</b> <b>54441</b> <b>54442</b> <b>54443</b> <b>54444</b> <b>54445</b>

## Test equipment

 <small>DB12463.eps</small>	Mini test kit		
	Hand held test kit (HHTK)		<b>33594</b>
<b>Portable test kit</b>			
 <small>DB12464.eps</small>		Full function test kit (FFTK) Test report edition come from FFTK FFTK test cable 2 pin for STR trip unit FFTK test cable 7 pin for Micrologic trip unit	<b>33595</b> <b>34559</b> <b>34560</b> <b>33590</b>

## Installation accessories

 <small>DB128444.eps</small>	Escutcheon		
			<b>33929</b>
<b>Interphase barriers (3 parts)</b>			
 <small>DB128446.eps</small>			<b>33998</b>

# Spare parts: NS630b to NS1600 fixed circuit breaker Connection

## Connections for circuit breakers and switch-disconnectors

Front connection / Replacement kit (3 or 4 parts)			
DB401441.eps	630/1000 A - N	Top Bottom	3P 33598 4P 33599
DB401442.eps	1250 A - N	Top	33600
	630-1000 A - L	Bottom	33601
	630/800 A - LB		
	1600 A - N	Top Bottom	33602 33603
Rear connection / Replacement kit (3 or 4 parts)			
DB128420.eps	Vertical and horizontal (top or bottom)	3P 33584	4P 33612
DB128421.eps	Installation manual	33148	33609 33610 33611 33613 33585

## Connection accessories

DB128420.eps	Bare-cable connectors + 1 connector shield for 4 cables (240 mm <sup>2</sup> )	
DB128421.eps	1 long connection shield / 1 part	
DB128422.eps	Vertical-connection adapters / Replacement kit (3 or 4 parts)	
DB128423.eps	Cable lug adapters / Replacement kit (3 or 4 parts)	
DB128424.eps	Interphase barriers / Replacement kit (3 parts)	
DB128425.eps	Arc chute screen / 1 part	
DB128426.eps	Brackets for mounting on a horizontal surface (2 parts)	
DB128427.eps	Spreaders / Replacement kit (3 or 4 parts)	
DB128428.eps	Cable lug kits / Replacement kit (6 or 8 parts)	

F

Front connection

3P/4P top/bottom	33646
Installation manual	33148

Rear connection

3P/4P top/bottom	33648
Installation manual	33148

3P

64907
-------

4P

33597
-------

Installation manual

33148
-------

3P/4P

64908
-------

3P

33622
-------

4P

33623
-------

Installation manual

33148
-------

240 mm<sup>2</sup>

3P (6 lug kit)	33013
4P (8 lug kit)	33014

300 mm<sup>2</sup>

3P (6 lug kit)	33015
4P (8 lug kit)	33016

Installation manual

33148
-------

# Spare parts: NS630b to NS1600 fixed circuit breaker

## Electrical auxiliaries and installation accessories

### Electrical auxiliaries

#### Indication contact / 1 part

DB128428.eps	OF, ON/OFF indication contacts	6 A - 240 V	Low level
	SD trip indication contact for manually operated devices	<b>29450</b>	<b>29452</b>
	SDE fault indication contact operated devices	<b>29450</b>	<b>29452</b>
	Up to 3 OF, 1 SD and 1 SDE can be connected (the SDE contact is standard for electrically operated devices).		
Installation manual			<b>33148</b>

#### Remote tripping / 1 part

DB128429.eps	MX	MN	Delay unit	R (non-adjustable)	Rr (adjustable)
	12 V DC	<b>33658</b>			
	24/30 V DC, 24 V AC	<b>33659</b>	<b>33668</b>		
	48/60 V DC, 48 V AC	<b>33660</b>	<b>33669</b>	48/60 V AC/DC	<b>33680</b>
	100/130 V AC/DC	<b>33661</b>	<b>33670</b>	100/130 V AC/DC	<b>33681</b>
	200/250 V AC/DC	<b>33662</b>	<b>33671</b>	200/250 V AC/DC	<b>33682</b>
	277 V AC	<b>33663</b>			
	380/480 V AC	<b>33664</b>	<b>33673</b>	380/480 V AC/DC	<b>33683</b>
	Installation manual	<b>33149</b>			

#### Installation accessories / 1 part

DB128431.eps	Escutcheon (small cut-out) for manually operated device with toggle	<b>33717</b>
	Escutcheon for: - device with toggle (large cutout) - device with rotary handle - electrically operated device	<b>33718</b>
Blanking plate / 1 part		<b>33858</b>
Blanking plate		<b>33858</b>
Installation manual		<b>33148</b>
Toggle extension / 1 part		<b>46996</b>
Toggle extension		<b>46996</b>
Additional toggle extension		<b>33195</b>

F

# Spare parts: NS630b to NS1600 fixed circuit breaker


## Micrologic control unit, external sensor

### Replacement parts for Micrologic control units



Long-time rating plug (limits setting range for higher accuracy) / 1 part

	Standard	0.4 at 1 x $I_r$	33542
	Low-setting option	0.4 at 0.8 x $I_r$	33543
	High-setting option	0.8 at 1 x $I_r$	33544
	Without long-time protection	off	33545

Battery + cover

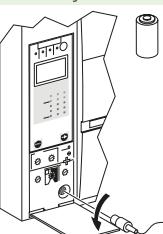
	Battery (1 part)	For Micrologic A, E	33593
	Cover (1 part)	For Micrologic P	33592
		For Micrologic P	47067

### Communication option

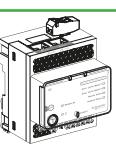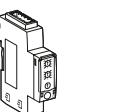	IFE	Ethernet interface for LV breaker Ethernet interface for LV breakers and gateway	LV434001 LV434002
	IFM Modbus-SL interface module		LV434000
	I/O application module		LV434063
	User guide IFE User guide I/O application module		DOCA0084EN-00 DOCA0055EN-00

External sensors

External sensor for neutral + earth-fault protection (TCE) / 1 part

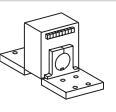	CT rating: 400/1600 A	33576
---	-----------------------	-------


Rectangular sensors

Inside dimensions (mm)	$I_e$ (A)	
L1	1600	280 x 115

Source ground return (SGR) earth-fault protection / 1 part

	External sensor (SGR) MDGF summing module	33579 48891
---	--	----------------

External power supply module (AD) / 1 part

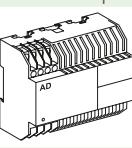	24-30 V DC 48-60 V DC 100-125 V DC 110-130 V AC 200-240 V AC 380-415 V AC	54440 54441 54442 54443 54444 54445
---	--	--

Test equipments / 1 part

	Hand held test kit (HHTK) Full function test kit (FFTK) Test report edition come from FFTK FFTK test cable 2 pin for STR trip unit FFTK test cable 7 pin for Micrologic trip unit	33594 33595 34559 34560 33590
---	---	---

# Spare parts: NS630b to NS1600 fixed circuit breaker

## Locking and accessories

### Locking for manually operated devices

Removable toggle locking system / 1 part



DB12848.eps

Locking by 3 padlocks | 44936

Installation manual | 33148

Fixed toggle locking system / 1 part



DB12849.eps

Locking by 3 padlocks | 32631

Installation manual | 33148

### Rotary handle for manually operated devices

Devices with direct rotary handles / 1 part



DB12852.eps

Conversion accessory CNOMO | 33866

Locking by keylocks Ronis | Profalux


OFF position | 33870 | 33869

OFF and ON positions | 33872 | 33871

Keylock kit (without keylocks) | 33868 | 33868

Installation manual | 33150

Mechanical interlocking

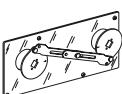

DB12851.eps

For 2 devices with extended rotary handles | 33890

### Locking and accessories for electrically operated devices

Pushbutton locking / 1 part




DB12853.eps

By transparent cover + padlocks | 33897

Installation manual | 47103

Locking in OFF position / 1 part

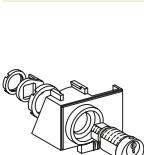

DB12855.eps

By padlocks + BPFE support | 47514

VCPO | Profalux

By Profalux keylocks | 33902

Profalux | 1 lock with 1 key + adaptation kit | 33904

2 locks 1 key + adaptation kit

1 keylock Profalux (without adaptation kit):

identical key not identified combination | 33173

identical key identified 215470 combination | 33174

identical key identified 215471 combination | 33175

By Ronis keylocks | 33903

Ronis | 1 lock with 1 key + adaptation kit | 33905

2 locks 1 key + adaptation kit

1 keylock Ronis (without adaptation kit):

identical key not identified combination | 33189

identical key identified EL24135 combination | 33190

identical key identified EL24153 combination | 33191

identical key identified EL24315 combination | 33192

Adaptation kit (without keylock):

adaptation kit Profalux | 33898

adaptation kit Ronis | 33899

adaptation kit Kirk | 47517

adaptation kit Castell | 47518

Installation manual | 47103

Operation counter CDM / 1 part



DB12856.eps

Operation counter CDM | 33895

Installation manual | 47103


F

# Spare parts: NS630b to NS1600 fixed and withdrawable circuit breaker

## Mechanical interlocking for source changeover

### Mechanical interlocking for source changeover

Interlocking using connecting rods for Compact electrically operated devices

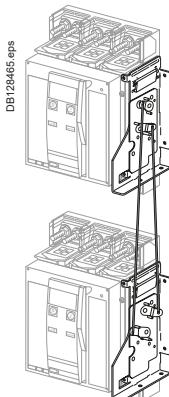

DB128465.eps


Complete assembly with 2 adaptation fixtures + rods

2 Compact fixed devices

**Note:** the installation manual is enclosed.

**33910**

Interlocking using cables for Compact electrically operated devices

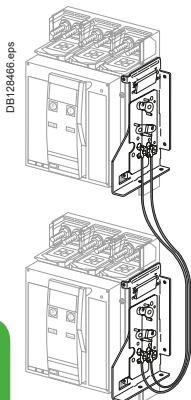

DB128466.eps

Complete assembly with 2 adaptation fixtures + cables

2 Compact fixed devices

1 Compact fixed + 1 Compact withdrawable device

**Note:** the installation manual is enclosed.


**33911**

**33915**


F

Catalogue numbers: spare parts  
**Spare parts: NS630b to NS1600  
withdrawable circuit breaker  
Connection**

**Connection**

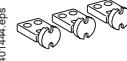	DB128416.eps	Front connection / Replacement kit (6 or 8 parts)	3P	4P
		Top and bottom	33588	33589
	DB128417.eps	Rear connection / Replacement kit (4 or 6 parts)	33586	33587
	DB401444.eps	Vertical and horizontal		
Vert. mounting.	Horiz. mounting.	Installation manual		33149




**Connection accessories**

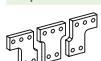Vertical connection adapters for front-connected chassis / Replacement kit (3 or 4 parts)				
	DB128422.eps	3P	33642	
		4P	33643	
		Installation manual	33149	
Cable lug adapters for front-connected chassis / Replacement kit (3 or 4 parts)				
	DB128423.eps	3P	33644	
		4P	33645	
		Installation manual	33149	
Interphase barriers for rear-connected chassis / Replacement kit (3 parts)				
	DB128433.eps	3P/4P	33768	
		Installation manual	33149	
Spreaders for front-connected and rear-connected chassis / Replacement kit (3 or 4 parts)				
	DB128427.eps	3P	33622	
		4P	33623	
		Installation manual	33149	
Cable lug kits / Replacement kit (6 or 8 parts)				
	DB128424.eps	240 mm <sup>2</sup>	3P (6 lug kit)	33013
			4P (8 lug kit)	33014
		300 mm <sup>2</sup>	3P (6 lug kit)	33015
			4P (8 lug kit)	33016
		Installation manual		33149

**Chassis accessories**

Auxiliary terminal shield (CB) / 1 part				
	DB128434.eps	3P	33763	
		4P	33764	
		Installation manual	33149	
Safety shutters (VO) / 1 part				
	DB401445.eps	3P	33765	
		4P	33766	
		Installation manual	47104	

**Clusters**

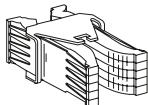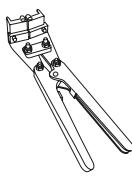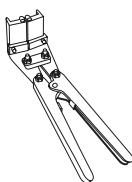
	DB401446.eps	1 disconnecting contact cluster for chassis (see table below) (1 part)	64906	
<b>Table : number of clusters required for the different chassis models</b>				
Chassis rating (A)	Compact NS - 3P	Compact NS - 4P		
	NA - N	L	NA - N	L
630	12	18	16	24
800	12	18	16	24
1000	12	18	16	24
1250	12		16	
1600	18		24	
<b>Note:</b> the minimum order is 6 parts.				
	DB417990.eps	Set of 2 clusters filters for 2 and 3 clusters	47554	
	DB418007.eps			

# Spare parts: NS630b to NS1600 withdrawable circuit breaker

## Electrical auxiliaries

### Electrical auxiliaries


SD trip indication contact for manually operated devices / 1 part

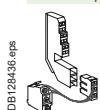

DB129436.eps

OF, ON/OFF indication contacts	6 A - 240 V	Low level
SD trip indication contact for manually operated devices	33801	33804
SDE fault indication contact operated devices	33800	33803
Up to 3 OF, 1 SD and 1 SDE can be connected (the SDE contact is standard for electrically operated devices).	33799	33802
Installation manual		47103


CE, CD, CT carriage switches / 1 part

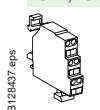

DB128457.eps

6 A - 240 V	33170
Low level	33171
Up to 3 CE, 1 CT, 2 CD per device	
Installation manual	47104


Instantaneous voltage releases / 1 part

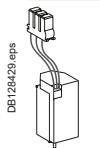


DB128429.eps

	MX	MN	Delay unit	R (non-adjustable)	Rr (adjustable)
12 V DC	33658				
24/30 V DC, 24 V AC	33659	33668	48/60 V AC/DC		33680
48/60 V DC, 48 V AC	33660	33669	100/130 V AC/DC	33684	33681
100/130 V AC/DC	33661	33670	200/250 V AC/DC	33685	33682
200/250 V AC/DC	33662	33671	380/480 V AC/DC		33683
277 V AC	33663				
380/480 V AC	33664	33673			
Installation manual	47103				

Auxiliaries terminal for chassis

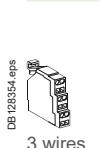

DB128354.eps

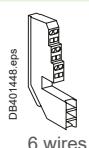


DBA01448.eps

3 wire terminal block (1 part)	33098
6 wire terminal block (1 part)	33099
Jumpers (10 parts)	47900
Installation manual	47103

# Spare parts: NS630b to NS1600 withdrawable circuit breaker Installation accessories

## Installation accessories


Escutcheon / 1 part

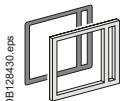

Transparent cover for escutcheon / 1 part



Blanking plate / 1 part

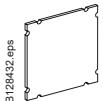

| 33857

| 33859

| 33858


F

# Spare parts: NS630b to NS1600 withdrawable circuit breaker

## Micrologic control unit, external sensor


### Replacement parts for Micrologic control units

Long-time rating plug (limits setting range for higher accuracy) / 1 part

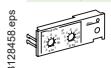


Standard	0.4 at 1 x Ir	33542
Low-setting option	0.4 at 0.8 x Ir	33543
High-setting option	0.8 at 1 x Ir	33544
Without long-time protection	off	33545

Battery + cover

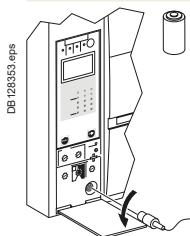


Battery (1 part)	33593	
Cover (1 part)	33592	
	47067	

### Communication option

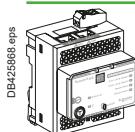

IFE	Ethernet interface for LV breaker Ethernet interface for LV breakers and gateway	LV434001 LV434002
-----	---	----------------------

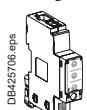

IFM Modbus-SL interface module	LV434000	
--------------------------------	----------	--




I/O application module	LV434063	
------------------------	----------	--

User guide IFE User guide I/O application module	DOCA0084EN-00 DOCA0055EN-00	
---	--------------------------------	--

External sensors

External sensor for neutral + earth-fault protection (TCE) / 1 part

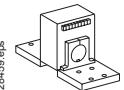


CT rating: 400/1600 A	33576	
-----------------------	-------	--

Source ground return (SGR) earth-fault protection + Vigi cable / 1 part




External sensor (SGR) MDGF summing module	33579 48891	
--	----------------	--

Rectangular sensors

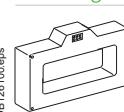

Inside dimensions (mm)	le (A)	
L1	1600	280 x 115

External power supply module (AD) / 1 part

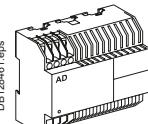

24-30 V DC	54440	
48-60 V DC	54441	
100-125 V DC	54442	
110-130 V AC	54443	
200-240 V AC	54444	
380-415 V AC	54445	

Test equipments / 1 part



Hand held test kit (HHTK)	33594	
Full function test kit (FFTK)	33595	
Test report edition come from FFTK	34559	
FFTK test cable 2 pin for STR trip unit	34560	
FFTK test cable 7 pin for Micrologic trip unit	33590	

Catalogue numbers: spare parts  
**Spare parts: NS630b to NS1600  
withdrawable circuit breaker  
Locking and accessories**

### **Locking for manually operated devices**

#### Removable toggle locking system / 1 part



Locking by 3 padlocks **44936**

Installation manual **33148**

#### Fixed toggle locking system / 1 part




Locking by 3 padlocks **32631**

Installation manual **33148**

### **Rotary handle for manually operated devices**

#### Devices with direct rotary handles / 1 part

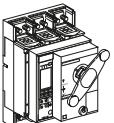

Conversion accessory **CNOMO 33866**

Locking by keylocks **Ronis 33870**


OFF position **Profalux 33869**

OFF and ON positions **33871**

Keylock kit (without keylocks) **33868**

Installation manual **33150**

#### Mechanical interlocking

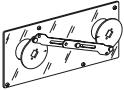

For 2 devices with extended rotary handles **33890**

### **Locking and accessories for electrically operated devices**


#### Pushbutton locking / 1 part



By transparent cover + padlocks **33897**

Installation manual **47103**

#### Locking in OFF position / 1 part

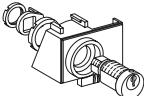

By padlocks + BPFE support

VCPO **47514**

By Profalux keylocks

Profalux 1 lock with 1 key + adaptation kit **33902**

2 locks 1 key + adaptation kit **33904**

1 keylock Profalux (without adaptation kit):

identical key not identified combination **33173**

identical key identified 215470 combination **33174**

identical key identified 215471 combination **33175**

By Ronis keylocks

Ronis 1 lock with 1 key + adaptation kit **33903**

2 locks 1 key + adaptation kit **33905**

1 keylock Ronis (without adaptation kit):

identical key not identified combination **33189**

identical key identified EL24135 combination **33190**

identical key identified EL24153 combination **33191**

identical key identified EL24315 combination **33192**

Adaptation kit (without keylock):

adaptation kit Profalux **33898**

adaptation kit Ronis **33899**

adaptation kit Kirk **47517**

adaptation kit Castell **47518**

Installation manual **47103**

#### Operation counter CDM / 1 part



Operation counter CDM / 1 part **33895**


Installation manual **47103**

# Spare parts: NS630b to NS1600 withdrawable circuit breaker

## Chassis locking and accessories Mechanical interlocking for source changeover

### Chassis locking

Keylocking in disconnected position / 1 part

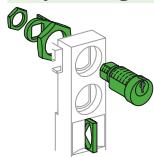

DB424759.eps

#### By Profalux keylocks

Profalux	1 lock with 1 key + adaptation kit 2 locks 1 key + adaptation kit 2 locks 2 different keys + adaptation kit	64909 64910 64911
1 keylock Profalux (without adaptation kit):	identical key not identified combination identical key identified 215470 combination identical key identified 215471 combination	33173 33174 33175

#### By Ronis keylocks

Ronis	1 lock with 1 key + adaptation kit 2 locks 1 key + adaptation kit 2 locks 2 different keys + adaptation kit	64912 64913 64914
1 keylock Ronis (without adaptation kit):	identical key not identified combination identical key identified EL24135 combination identical key identified EL24153 combination	33189 33190 33191
Adaptation kit (without keylock):	identical key identified EL24315 combination adaptation kit Profalux adaptation kit Ronis adaptation kit Castell adaptation kit Kirk	33192 33769 33770 33771 33772

Door interlock / 1 part



DB424759.eps

Right and left side of chassis (VPECD or VPECG)	33172
---	-------

Installation manual	47104
---------------------	-------

Racking interlock (VPOC) / 1 part



DB424757.eps

Installation manual	47104
---------------------	-------

Mismatch protection (VDC) / 1 part




DB28443.eps

Installation manual	47104
---------------------	-------

### Mechanical interlocking for source changeover

Interlocking using connecting rods for Compact electrically operated devices

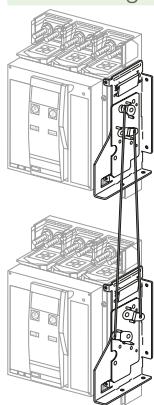


DB128465.eps

Complete assembly with 2 adaptation fixtures + rods	
2 Compact withdrawable devices	33913

**Note:** the installation manual is enclosed.

Interlocking using cables for Compact electrically operated devices

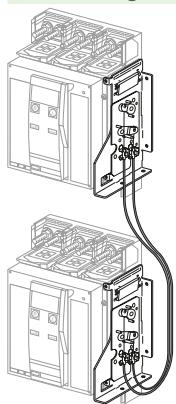

DB128466.eps

Complete assembly with 2 adaptation fixtures + cables	
2 Compact fixed devices	33914

1 Compact fixed + 1 Compact withdrawable device	33915
---	-------

**Note:** the installation manual is enclosed.



# Spare parts: NS630b to NS1600 fixed or withdrawable circuit breaker Instructions

## Instructions




Chassis accessories		47104
Circuit breaker accessories	Manual Electrical	33148 33149
Fixed and drawout circuit breaker	Manual Electrical	33148 33149
NS630b user manual	French English	33159 33160
Micrológic user manual	20/50 (French) 20/50 (English) 2A/7A (French) 2A/7A (English) 2E/6E (French) 2E/6E (English) 5P/7P (French) 5P/7P (English)	33076 33077 33079 33080 33079 33080 33082 33083
Modbus communication notice for manual		33088

# Spare parts: Communication bus accessories, monitoring and control, ethernet gateway

## Communication options

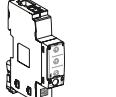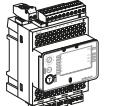 DB429888.eps	IFE	Ethernet interface for LV breaker Ethernet interface for LV breakers and gateway	LV434001 LV434002
 DB425706.eps	IFM Modbus-SL interface module		LV434000
 DB429889.eps	I/O application module		LV434063

## Monitoring and control

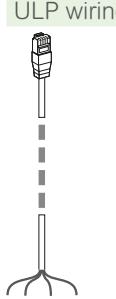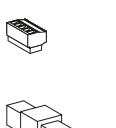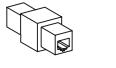 DB111440.eps	ULP display module [1]	Switchboard front display module FDM121 FDM mounting accessory (diameter 22 mm)	TRV00121 TRV00128
 DB417489.eps	Ethernet display module	Switchboard front display module FDM128	LV434128
 DB427895.eps	ULP wiring accessories	Breaker ULP cord L = 0.35 m Breaker ULP cord L = 1.3 m Breaker ULP cord L = 3 m	LV434195 LV434196 LV434197
 DB111443.eps	10 Modbus line terminators		VW3A8306DRC [2]
 DB115623.eps	5 RJ45 connectors female/female		TRV00870
 DB111444.eps	10 ULP line terminators		TRV00880
 DB111445.eps	10 RJ45/RJ45 male cord L = 0.3 m 10 RJ45/RJ45 male cord L = 0.6 m 5 RJ45/RJ45 male cord L = 1 m 5 RJ45/RJ45 male cord L = 2 m 5 RJ45/RJ45 male cord L = 3 m 1 RJ45/RJ45 male cord L = 5 m		TRV00803 TRV00806 TRV00810 TRV00820 TRV00830 TRV00850


[1] For measurement display with Micrologic A, E, P.

[2] www.schneider-electric.com.

# Spare parts: Compact NS1600b to 3200

## Connection, locking and installation accessories

### Optional vertical connection adaptor / Replacement kit (3 or 4 parts)

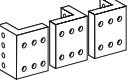DB128323.eps 	1600/2500/3200 A	3P 4P	33975 33976
Installation manual			33969

### Electrical auxiliaries

#### Indication contacts (1 part)

DB128282.eps 	OF, SD, SDE	6 A - 240 V Low level	29450 29452
<b>Note:</b> up to 3 OF, 1 SD and 1 SDE can be connected.			33969

#### Instantaneous voltage releases (1 part)

DB128429.eps 	MX	MN	Delay unit	R (non-adjustable)	Rr (adjustable)
12 V DC	33658		48/60 V AC/DC		
24/30 V DC, 24 V AC	33659	33668	100/130 V AC/DC	33684	33681
48/60 V DC, 48 V AC	33660	33669	200/250 V AC/DC	33685	33682
100/130 V AC/DC	33661	33670	380/480 V AC/DC		33683
200/250 V AC/DC	33662	33671			
277 V AC	33663				
380/480 V AC	33664	33673			
Installation manual	33969				

### Locking

#### Removable toggle locking system / 1 part


DB128448.eps 	Locking by 3 padlocks	33996
Installation manual		33969

#### Fixed toggle locking system / 1 part

DB128449.eps 	Locking by 3 padlocks	32631
Installation manual		33969

### Installation accessories

#### Escutcheon / 1 part

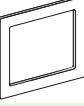DB128444.eps 		33929
---	--	-------

#### Interphase barriers / 3 parts

DB128446.eps 		33998
Installation manual		33969

#### Toggle extension / 1 part

DB128338.eps 	NS3200 toggle extension for replacement	33997
Installation manual		33969


F

# Spare parts: Compact NS1600b to 3200

## Micrologic control unit, external sensor

### Accessories for Micrologic control units

Long-time rating plug (enhanced accuracy by limiting the setting range) / 1 part

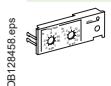

Standard	0.4 to 1 x Ir	33542
Low setting	0.4 to 0.8 x Ir	33543
High setting	0.8 to 1 x Ir	33544
Without long-time protection	OFF	33545

Standard	0.4 to 1 x Ir	33542
Low setting	0.4 to 0.8 x Ir	33543
High setting	0.8 to 1 x Ir	33544
Without long-time protection	OFF	33545

### External sensors


External sensor for neutral + earth-fault protection (TCE) / 1 part



CT rating: 1000/4000 A	34036
------------------------	-------

CT rating: 1000/4000 A	34036
------------------------	-------


### Source ground return (SGR) earth-fault protection + Vigi cable / 1 part

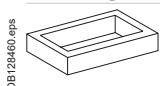

External sensor (SGR)	33579
MDGF summing module	48891

External sensor (SGR)	33579
MDGF summing module	48891

### Rectangular sensors

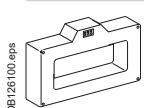


Inside dimensions (mm)	le (A)	
L1	1600	280 x 115
L2	3200	470 x 160

L1	1600	280 x 115	56053
L2	3200	470 x 160	56054

L2	3200	470 x 160	56054
----	------	-----------	-------

### External power supply module (AD) / 1 part

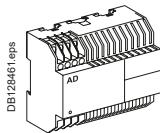

24-30 V DC	54440
48-60 V DC	54441
100-125 V DC	54442
110-130 V AC	54443
200-240 V AC	54444
380-415 V AC	54445

24-30 V DC	54440
48-60 V DC	54441
100-125 V DC	54442
110-130 V AC	54443
200-240 V AC	54444
380-415 V AC	54445

48-60 V DC	54441
100-125 V DC	54442
110-130 V AC	54443
200-240 V AC	54444
380-415 V AC	54445

100-125 V DC	54442
110-130 V AC	54443
200-240 V AC	54444
380-415 V AC	54445

110-130 V AC	54443
200-240 V AC	54444
380-415 V AC	54445

200-240 V AC	54444
380-415 V AC	54445

380-415 V AC	54445
--------------	-------

Hand held test kit (HHTK)	33594
Full function test kit (FFTK)	33595
Test report edition come from FFTK	34559
FFTK test cable 2 pin for STR trip unit	34560
FFTK test cable 7 pin for Micrologic trip unit	33590

Full function test kit (FFTK)	33595
Test report edition come from FFTK	34559
FFTK test cable 2 pin for STR trip unit	34560
FFTK test cable 7 pin for Micrologic trip unit	33590

Test report edition come from FFTK	34559
FFTK test cable 2 pin for STR trip unit	34560
FFTK test cable 7 pin for Micrologic trip unit	33590

FFTK test cable 2 pin for STR trip unit	34560
FFTK test cable 7 pin for Micrologic trip unit	33590

FFTK test cable 7 pin for Micrologic trip unit	33590
--	-------

# Order form: Compact NS630b to NS3200

## Circuit breakers and switch-disconnectors

Name of customer: .....

Address for delivery: .....

Requested delivery date: .....

Customer order no.: .....

To indicate your choices, check the applicable square boxes and enter the appropriate information in the rectangles **Circuit breaker or switch-disconnector**Compact type NS630b to NS1600  
NS1600b to NS3200 Rating A Circuit breaker N, H, L, LB Switch-disconnector NA Number of poles 3 or 4 Device NS630b/3200 Fixed NS630b/1600 Withdr. with chassis   
Withdr. without chassis (moving part only) Chassis alone without connections **Micrologic control unit**Basic protection 2.0 | 5.0 | 6.0 | A - ammeter 2.0  5.0  6.0  7.0 E - energy 2.0  5.0  6.0 P - power only for NS630b/1600 5.0  6.0  7.0 AD - external power-supply module V ENVT - External Neutral Voltage Tap (3P + N and Micrologic E or P) TCE - external sensor (CT) for neutral protection Rectangular sensor NS630b/1600 280 x 115 mm   
for earth-leakage protection NS1600b/3200 470 x 160 mm TCW - external sensor for SGR protection LR - long-time rating plug Standard 0.4 to 1 Ir   
Low setting 0.4 to 0.8 Ir   
Hight setting 0.8 to 1 Ir   
LT OFF **Communication**COM module Device (BCM-ULP) with Ethernet interface  Cradle management with with Ethernet interface +  I/O application module (Chassis)   
Gateway with Modbus interface **Eco COM module**Device (BCM-ULP) with Ethernet interface with Ethernet interface + Gateway with Modbus interface **Front Display Module**  Mounting accessories  (FDM121)**Breaker ULP** L = 0.35 m   
**Cord** L = 1.3 m   
L = 3 m **NS630b/1600 connection**Horizontal rear connections Top  Bottom Vertical rear connections Top  Bottom Front connections Top  Bottom 4 x 240° bare cable connectors + shields NS - FC fixed Long connection shields NS - FC fixed Vertical-connection adapters NS - FC fixed, withdr. Cable-lug adapters NS - FC fixed, withdr. Arc chute screen NS - FC fixed Interphase barriers NS - FC fixed, withdrawable Spreaders NS - FC fixed, withdrawable **NS1600b/3200 connection****Front connections** NS - FC fixed Vertical connection adaptor optional for NS1600b/2500 (standard for NS3200) **Indication contacts****NS630b/3200**

SD trip indication (maximum 1) (only for manually operated devices)

6 A-240 V AC qty  Low level qty 

SDE fault-trip indication (maximum 1)

(SDE integrated in electrically operated devices)

6 A-240 V AC qty  Low level qty 

OF ON/OFF indication contacts (maximum 3)

6 A-240 V AC qty  Low level qty **NS630b/1600**

Carriage switches (possible combinations: 3 CE, 2 CD, 1 CT)

6 A-240 V AC qty  Low level qty 

CD - "disconnected" position

6 A-240 V AC qty  Low level qty 

CT - "test" position

6 A-240 V AC qty  Low level qty **Programmable contacts (630b - 1600)**

M6C kit for manually Compact

Auxiliary terminals for chassis alone

Jumpers (set of 10)

3-wire terminal (30 parts)  6-wire terminal (10 parts) **Remote operation**

Electrical operation (NS630b/1600)

Standard Power supply

AC  DC  V 

Voltage releases MX AC DC V

MN AC DC V

MN delay unit Adjustable Non adjustable

**Rotary handles for NS630b/1600 fixed and withdrawable device**

Direct

Black Red on yellow front

CNOMO conversion access.

Extended

Black Red on yellow front

Telescopic handle for withdrawable device

Indication auxiliary

6 A-240 V AC

2 early-make switches

2 early-break switches

**Locking**

Toggle (1 to 3 padlocks)

Removable system

Fixed system

Rotary handle using a keylock

OFF position

ON and OFF positions

(NS630b/1600)

Ronis 1351B.500 Profalux KS5 B24 D4Z

Keylock kit (without keylock)

VBP - ON/OFF pushbutton locking (by transparent cover + padlocks)

For electrically operated devices (NS630b/1600)

OFF position locking:

VCPO - by padlocks

VSPO - by keylocks:

Keylock kit (w/o keylock)

Profalux

Ronis

1 keylock Profalux

Ronis

2 identical keylocks, 1 key Profalux

Ronis

Chassis locking in "disconnected" position:

VSPD - by keylocks Keylock kit (w/o keylock)

Profalux

Ronis

1 keylock Kirk

Castell

2 identical keylocks, 1 key Profalux

Ronis

2 keylocks, different keys Profalux

Ronis

Optional connected/disconnected/test position locking

VPEC - door interlock

On right-hand side of chassis

On left-hand side of chassis

VPOC - racking interlock

VDC - mismatch protection

**Accessories**

VO - safety shutters on chassis

NS - withdrawable as standard

CDM - mechanical operation counter

CDP - escutcheon

CP - transparent cover for escutcheon

OP - blanking plate for escutcheon

Mounting brackets for fixed NS

for mounting on horizontal plane

Test kits Mini test kit

Portable test kit

Micrologic control unit functions:

2.0: basic protection (long time + inst.)

5.0: selective protection (long time + short time + inst.)

6.0: selective + earth-fault protection (long time + short time + inst. + earth-fault)

7.0: selective + earth-leakage protection (long time + short time + inst. + earth-leakage)

# Notes

F

F

# Notes

F



Life Is On | Schneider  
Electric

**Schneider Electric Industries SAS**

35, rue Joseph Monier  
CS 30323  
92506 Rueil Malmaison Cedex  
France

RCS Nanterre 954 503 439  
Capital social 896 313 776 €  
[www.schneider-electric.com](http://www.schneider-electric.com)

08-2017  
ART. 960551  
© 2017 - Schneider Electric. All Rights Reserved.  
All trademarks are owned by Schneider Electric Industries SAS or its affiliated companies.  
Document reference: LVPED211021EN

This document has been  
printed on recycled paper

